


 



 
ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete, before you assemble. Place all wooden furniture part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS :

1. Do not FULLY-TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER-TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
3. Keep all hardware part out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	CUSHION	1 PC
B	CHAIR LEG (L & R)	2 PCS
C	FRONT APRON	1 PC
D	BACK APRON	1 PC
7	WOOD BUTTON 14.5mm	2 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 70MM 	2 PCS
2	JCBC SCREW M6 x 40MM 	4 PCS
3	SPRING WASHER 1/4" 	6 PCS
4	ALLEN KEY M4 (BALL SHAPE) 	1 PC
5	PAN HEAD WOOD SCREW M5 X 32MM 	2 PCS
6	WOOD DOWEL DIA 10 x 35MM 	6 PCS


STEP 1 :

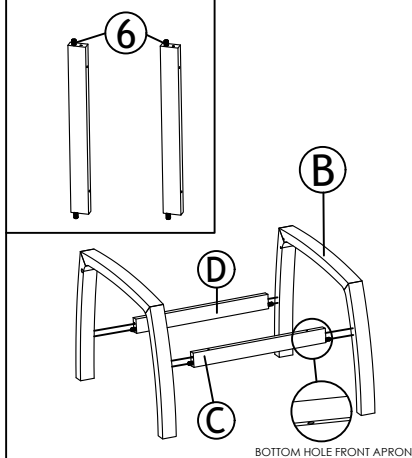


STEP 2 :

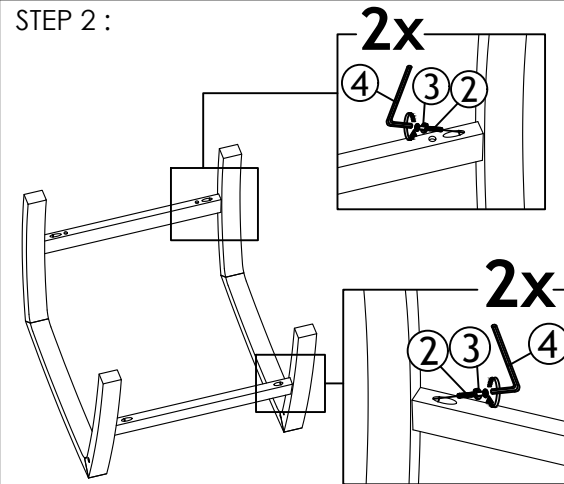

STEP 2 :

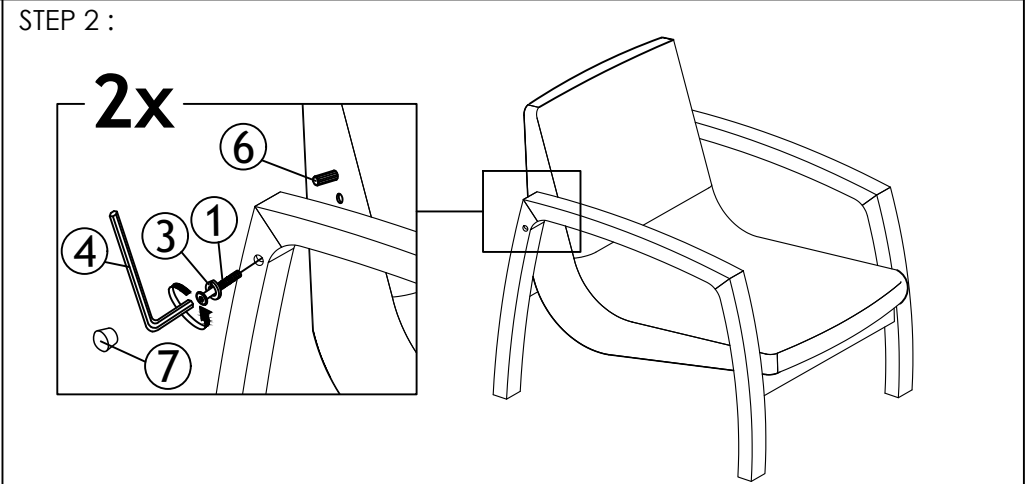

STEP 3 :

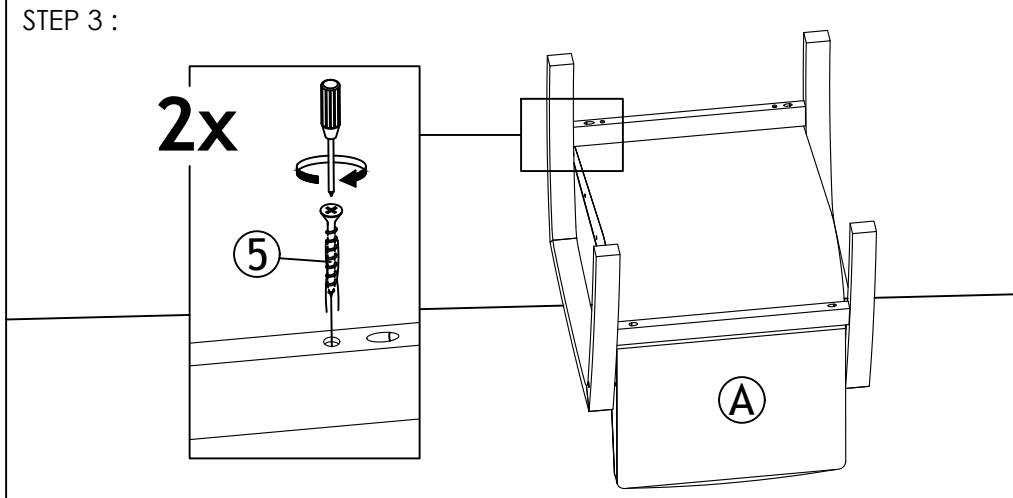

STEP 4 :

