

ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.

CAUTIONS :

1. Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.
2. To prevent thread damage. Ensure that nuts or nut bolts are not over-tightened.
3. Hardware is to be kept out of reach of children.

PART LIST


ITEM	DESCRIPTION	QTY
A	CUSHION BACK	1 PC
B	CUSHION SEAT	1 PC
C	BACK LEG (L & R)	2 PCS
D	FRONT LEG	1 PC
E	STRETCHER	1 PC

8	ADJUSTABLE SCREW	4 PCS
---	------------------	-------


HARDWARE LIST

ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 35MM	6 PCS
2	JCBC SCREW M6 x 50MM	4 PCS
3	SPRING WASHER 1/4"	10 PCS
4	PAN HEAD WOOD SCREW M5 X 32mm	7 PCS
5	WOOD DOWEL DIA 8 x 35MM	8 PCS
6	ALLEN KEY M4 (BALL SHAPE)LONG	1 PC
7	WOOD BUTTON (DIA:14.5)	6 PCS


STEP 1 :

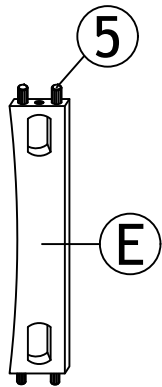


STEP 1.1 :

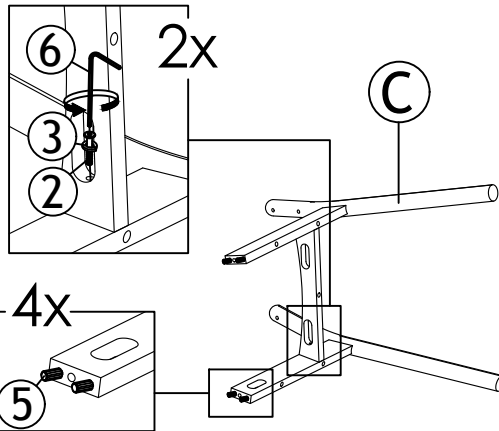


STEP 2:

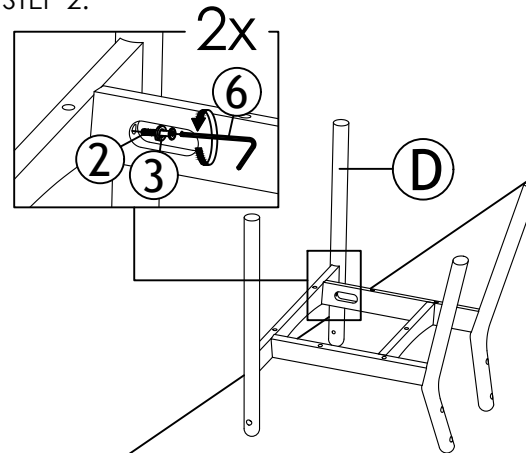


STEP 3:

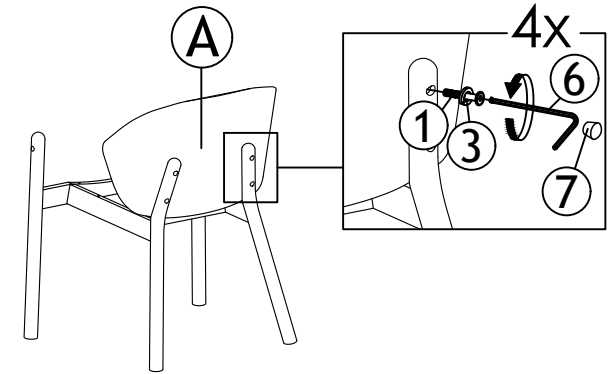

STEP 4:

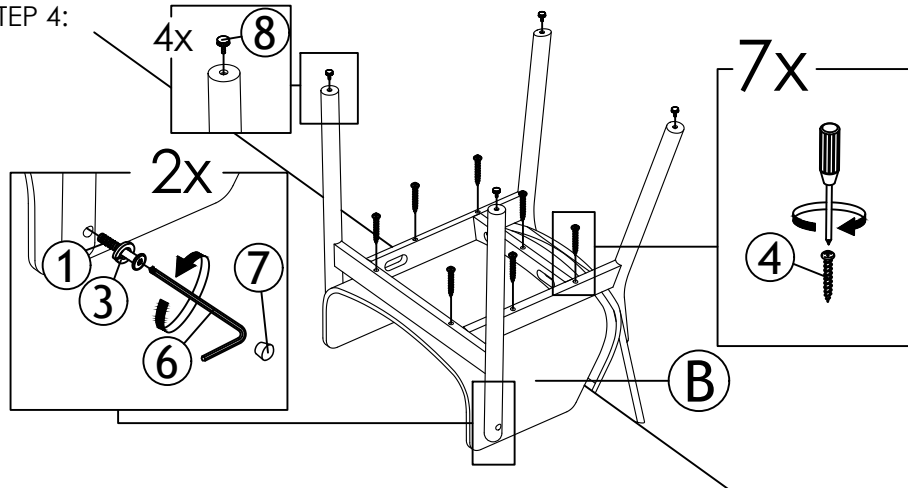

STEP 5 :

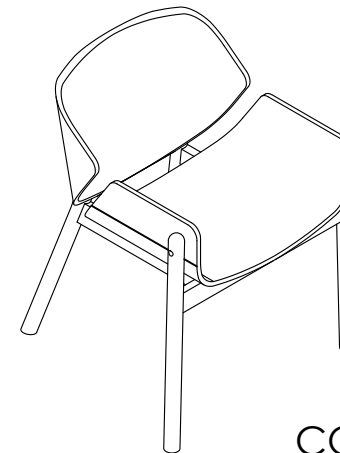

COMPLETED ASSEMBLY