





 




ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete, before you assemble. Place all wooden furniture part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS :

1. Do not FULLY-TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER-TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
3. Keep all hardware part out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	TABLE TOP	1 PC
B	CENTER LEG SUPPORT	1 PC
C	TABLE LEG (L & R)	4 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBB SCREW M8 x 70MM 	8 PCS
2	SPRING WASHER 5/16" 	8 PCS
3	FLAT WASHER 5/16" 	8 PCS
4	M5 ALLEN KEY 	1 PC
5	JCBB SCREW M6 x 60MM 	12 PCS
6	SPRING WASHER 1/4" 	12 PCS
7	WOOD DOWEL DIA 10 x 30MM 	2 PCS
8	M4 ALLEN KEY BALL SHAPE (LONG) 	1 PC
9	AJUSTABLE SCREW 	4 PCS


STEP 1 :

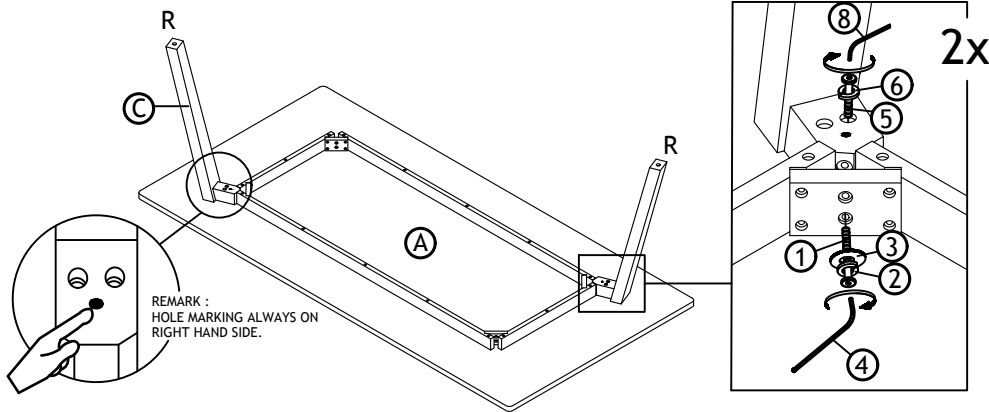


STEP 2 :

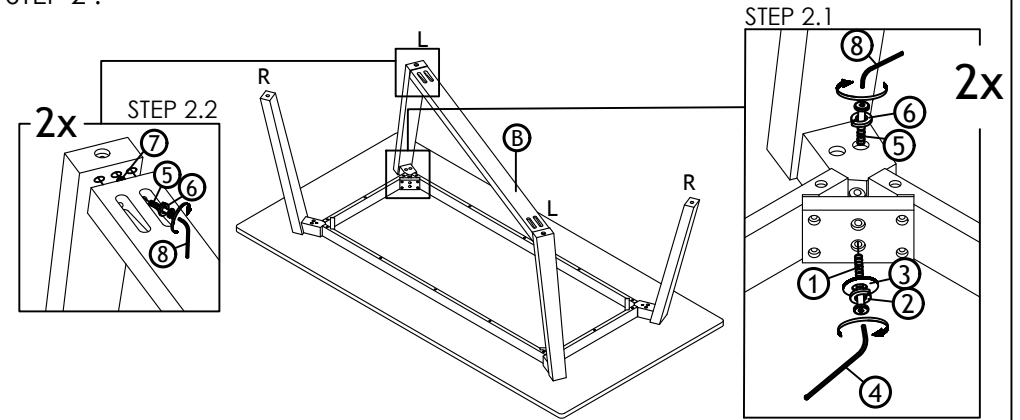

STEP 3 :

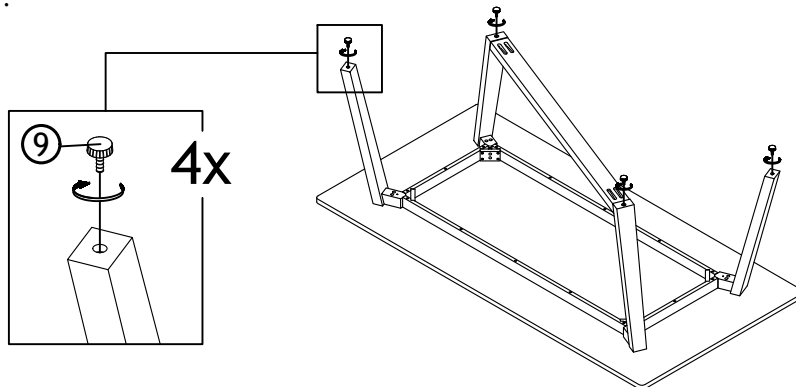

STEP 4 :

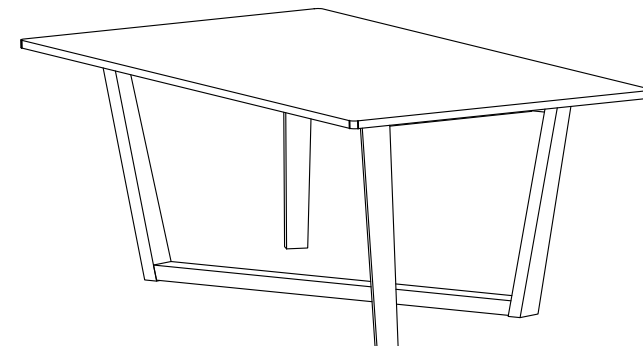

ASSEMBLY COMPLETED