

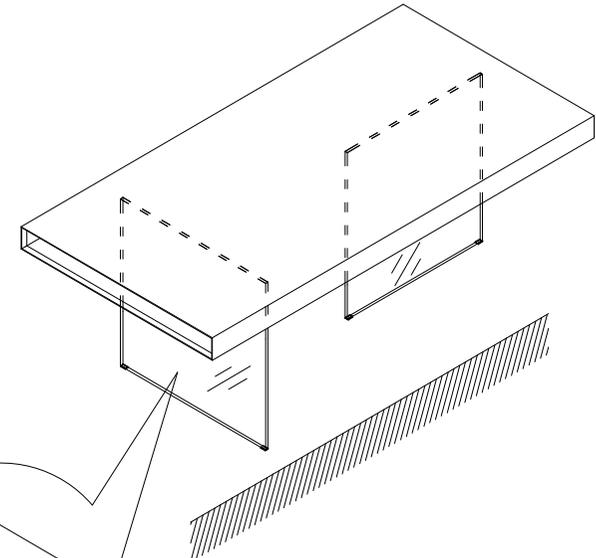
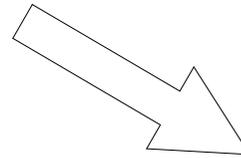
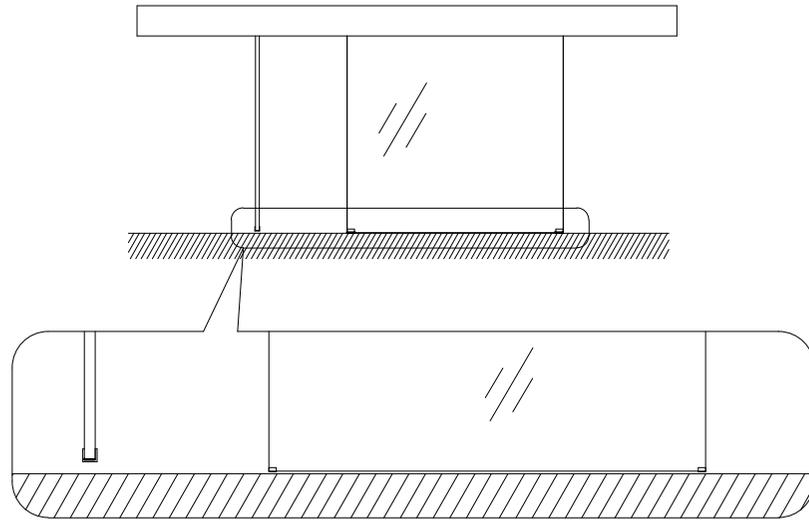
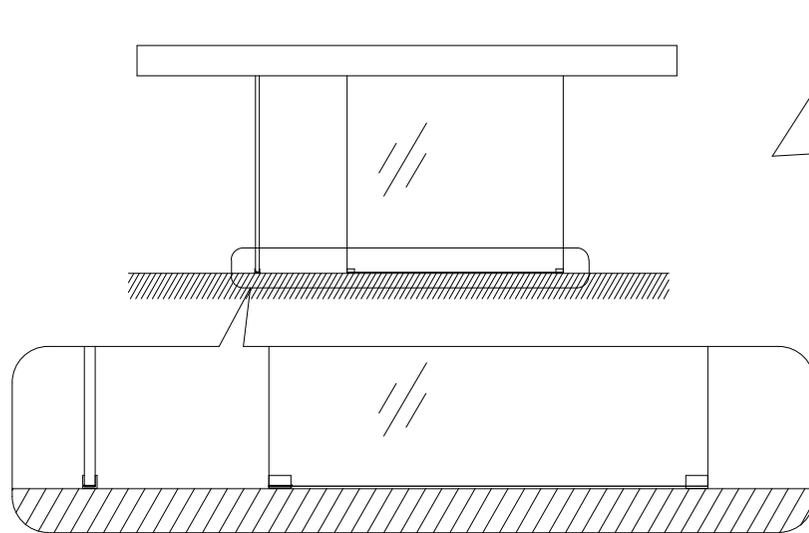


Adjustable Method

If the table is uneven

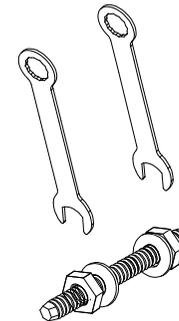

just loose all the bolts, the legs will be self-leveling
(during adjusting, just leave the table in same position)

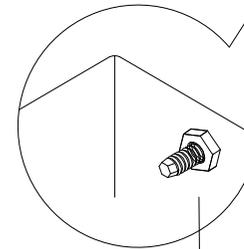

Tighten up the bolts again after the legs are even