





 



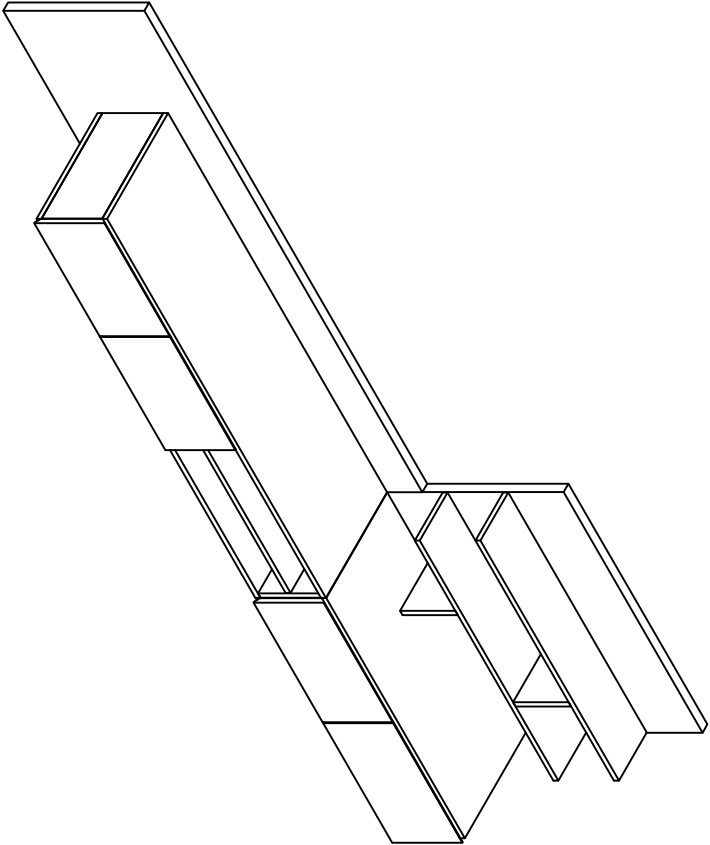


TV ASSEMBLY INSTRUCTION


ITEN#: 180501#

NO	Design	Size	Qty	NO	Design	Size	Qty
A		ø5	1	F			8
B		ø4	1	G		ø8*120	6
C			14	H		ø8	6
D			8	I		ø8*40	8
E		ø8*30	4	J		ø6*45	16


Finish




Step. 1

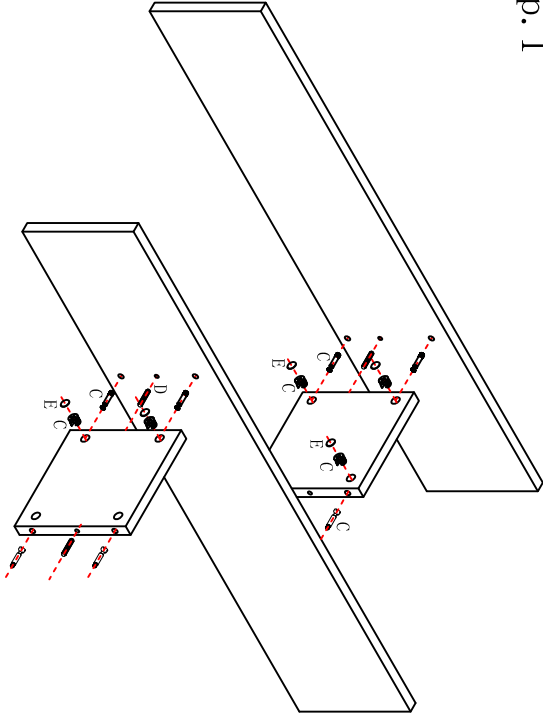


Step. 1

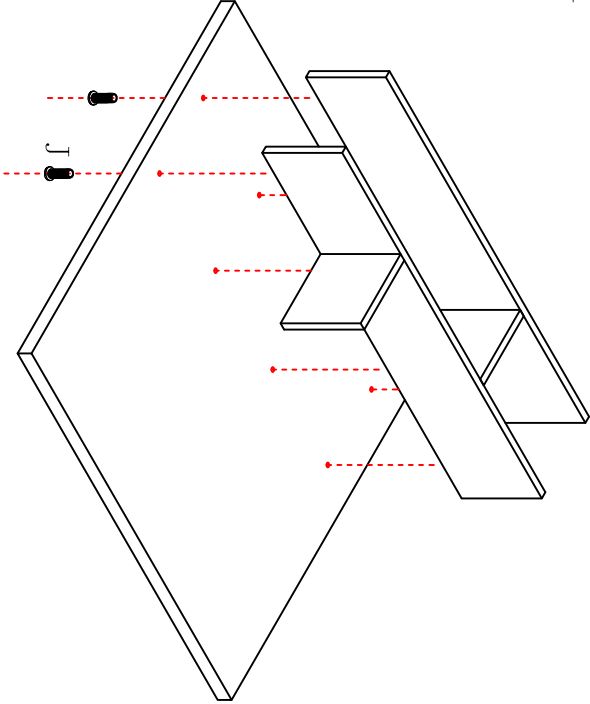


Step. 1

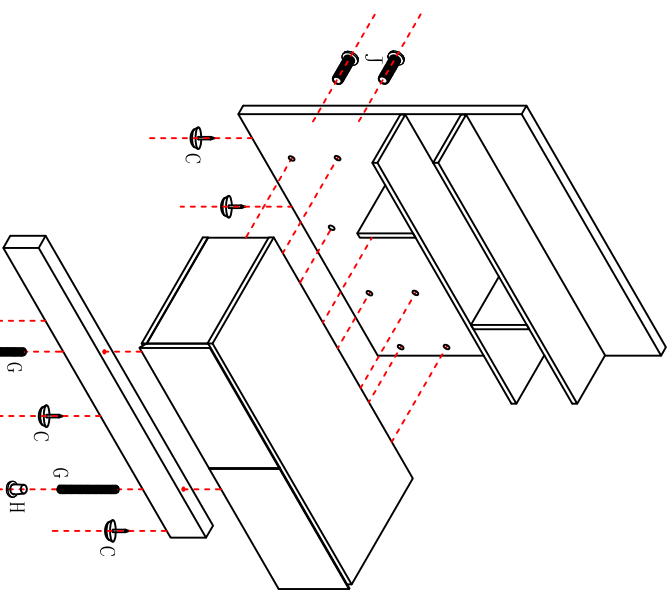

Step. 1

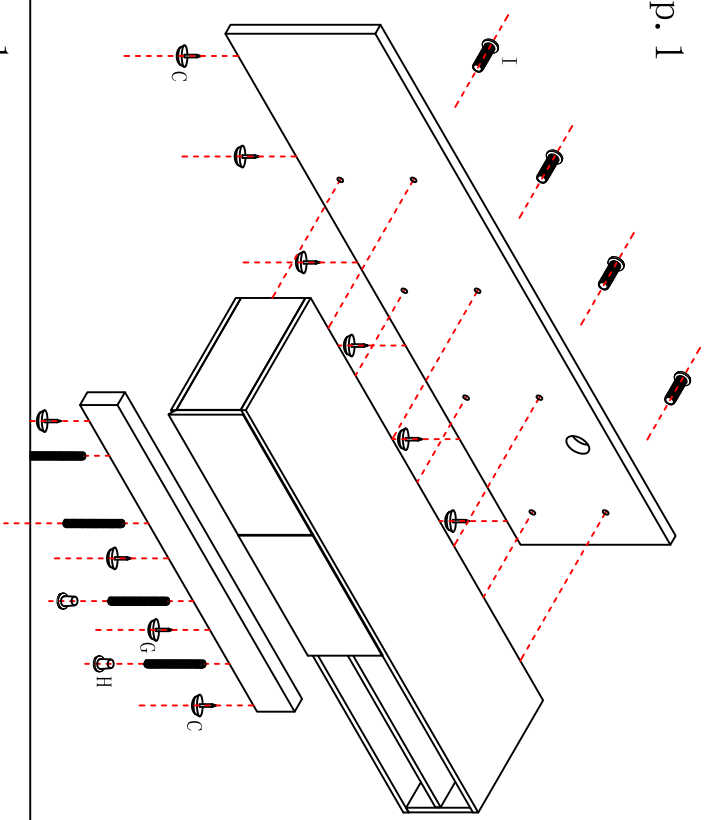

Step. 1

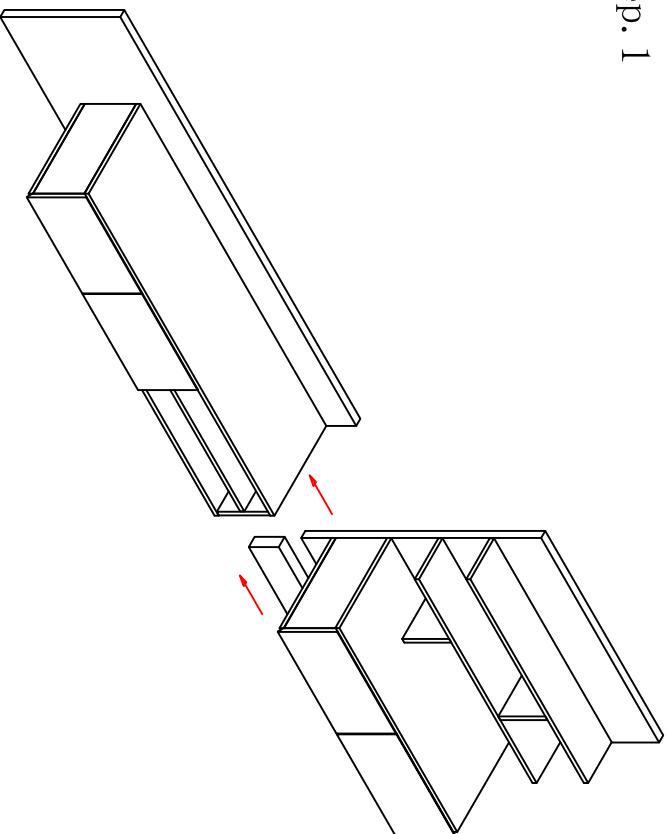

Step. 1

