

ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.


CAUTIONS :

1. Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.
2. To prevent thread damage. Ensure that nuts or nut bolts are not over-tightened.
3. Hardware is to be kept out of reach of children.


| PART LIST | | |
|-----------|--------------------|-------|
| ITEM | DESCRIPTION | QTY |
| A | CUSHION BACK | 1 PC |
| B | CUSHION SEAT | 1 PC |
| C | CHAIR LEG (L & R) | 2 PCS |
| D | FRONT RAIL | 1 PC |
| E | BACK RAIL | 1 PC |
| 8 | WOOD BUTTON 14.5mm | 4 PCS |

| HARDWARE LIST | | |
|---------------|--------------------------------|--------|
| ITEM | DESCRIPTION | QTY |
| 1 | JCBC SCREW M6 x 45MM | 4 PCS |
| 2 | JCBC SCREW M6 x 50MM | 4 PCS |
| 3 | SPRING WASHER 1/4" | 8 PCS |
| 4 | WOOD DOWEL DIA 8 x 25MM | 2 PCS |
| 5 | WOOD DOWEL DIA 8 x 35MM | 8 PCS |
| 6 | M4 ALLEN KEY (BALL SHAPE) LONG | 1 PC |
| 7 | PAN HEAD WOOD SCREW M4 X 38mm | 10 PCS |


STEP 1 :

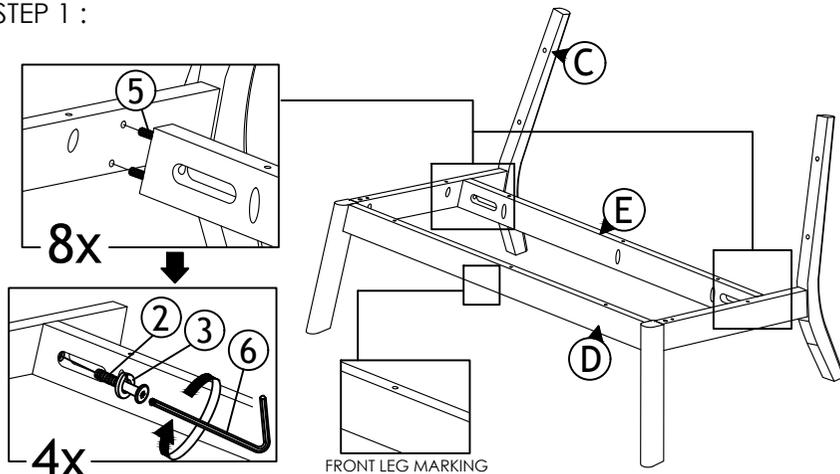


STEP 2 :

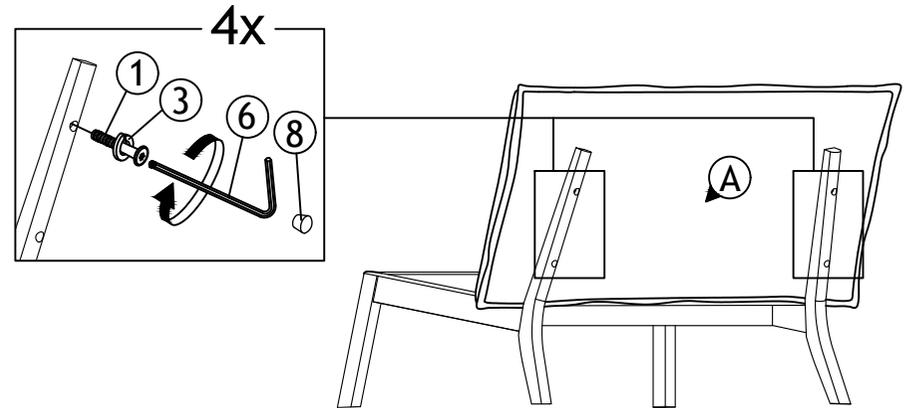

STEP 3 :

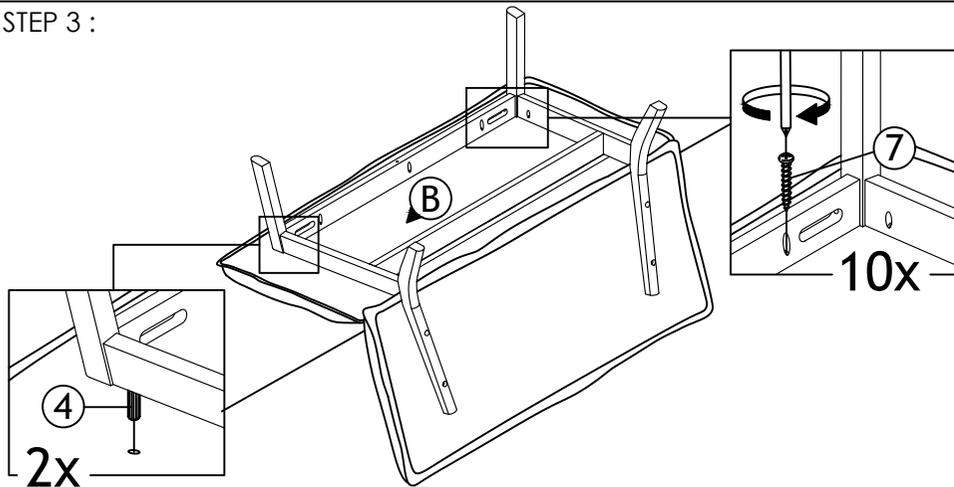

STEP 4 :

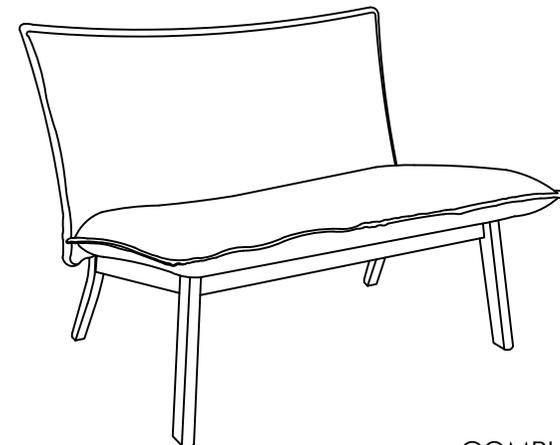

COMPLETED ASSEMBLY