





 

ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.


CAUTIONS :

1. Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.
2. To prevent thread damage. Ensure that nuts or nut bolts are not over-tightened.
3. Hardware is to be kept out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	CUSHION BACK	1 PC
B	CUSHION SEAT	1 PC
C	LEG (L & R)	1 SET
D	CORNER BLOCK	2 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 40MM 	6 PCS
2	JCBC SCREW M6 x 60MM 	4 PCS
3	SPRING WASHER 1/4" 	10 PCS
4	FLAT WASHER 1/4" 	6 PCS
5	M4 ALLEN KEY (BALL SHAPE) LONG 	1 PC
6	PAN HEAD WOOD SCREW M4 X 25MM 	8 PCS


STEP 1 :

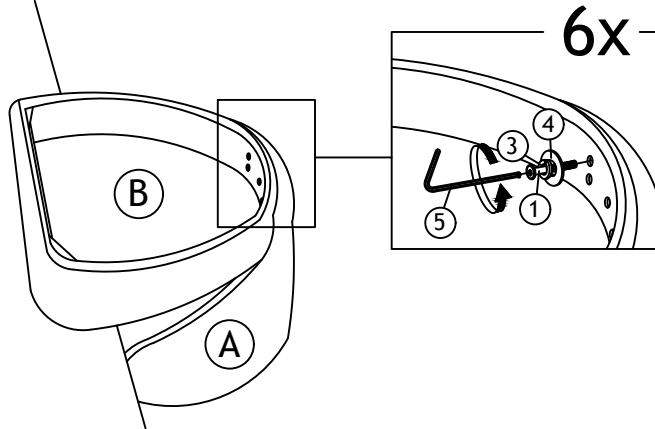


STEP 2:

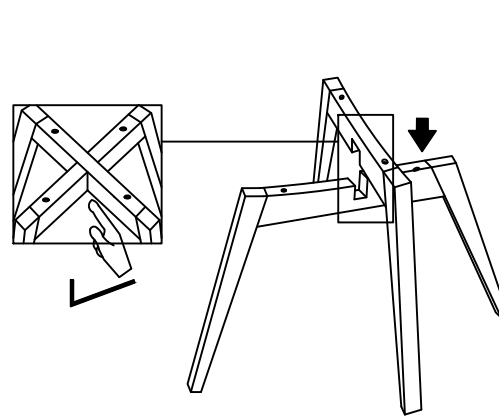


STEP 3:

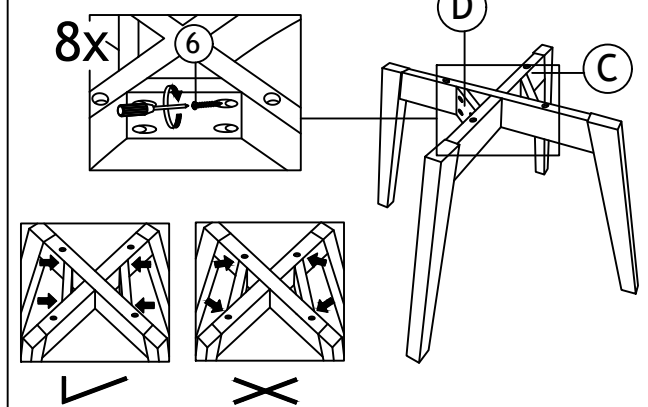

STEP 3 :

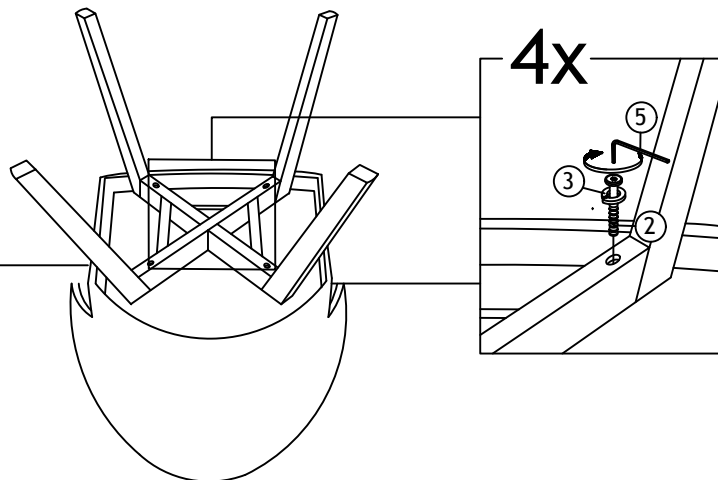

STEP 4 :

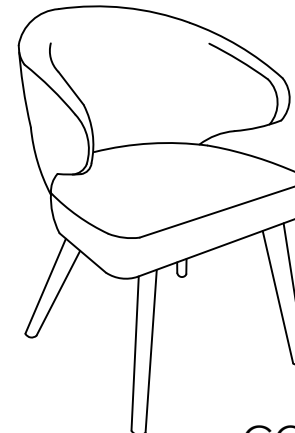

COMPLETED ASSEMBLY