

J3496



MODREST

A*18




B*2




C*1




STEP 1

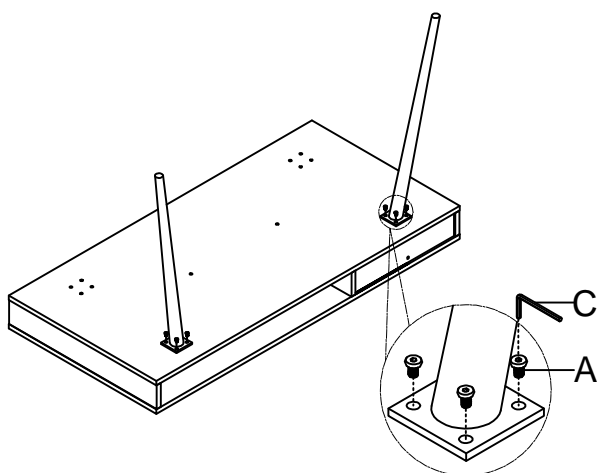

STEP 2

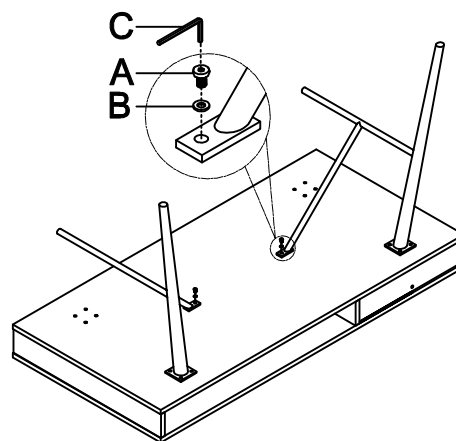


STEP 3

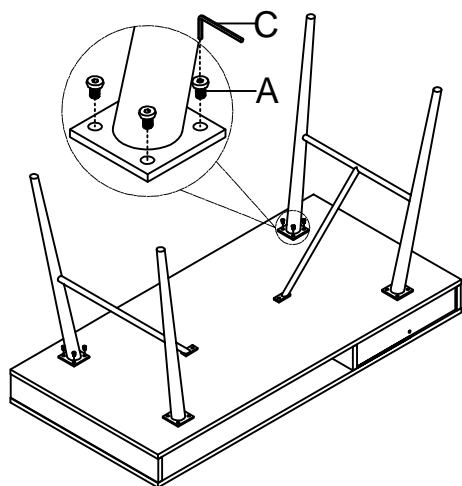

FINISH

The handle of drawer need to be installed outside.

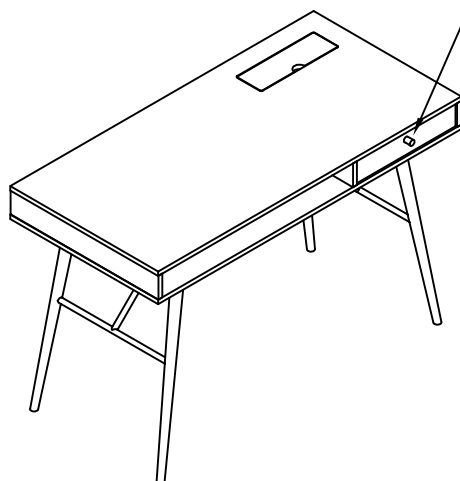

J5705



MODREST

A*18




B*2




C*1




STEP 1

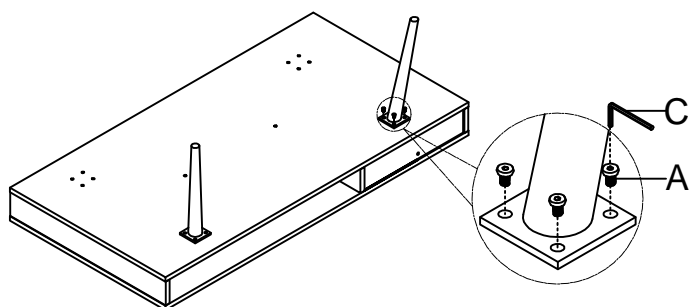

STEP 2

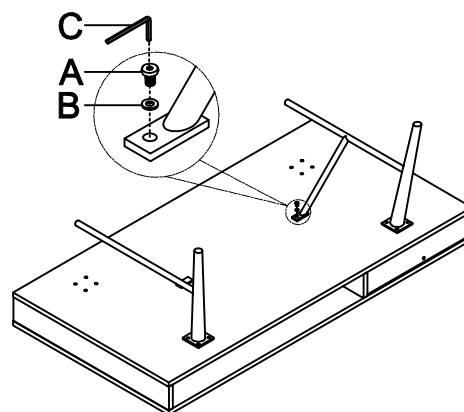


STEP 3

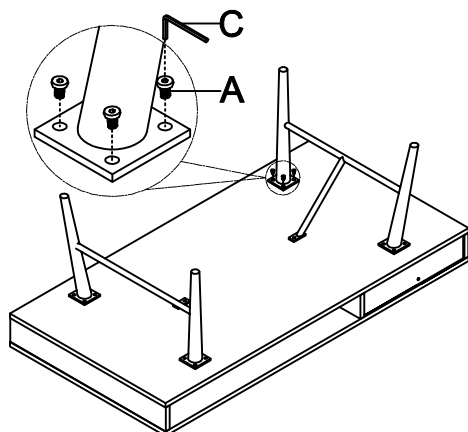

FINISH

The handle of drawer need to be installed outside.

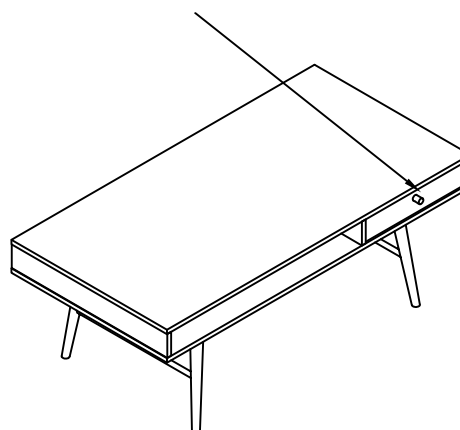

J9584-1



MODREST

A*18




B*2




C*1




STEP 1

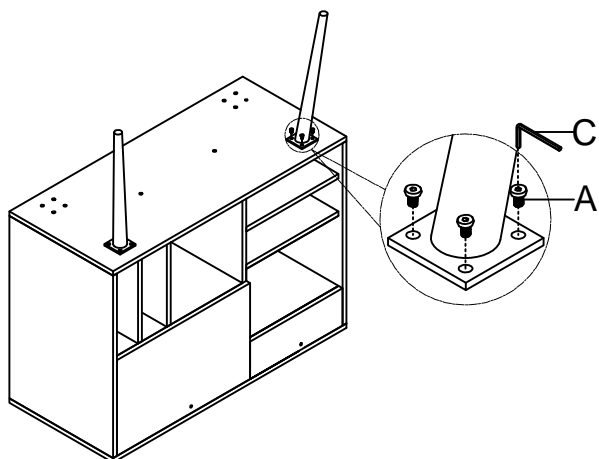

STEP 2

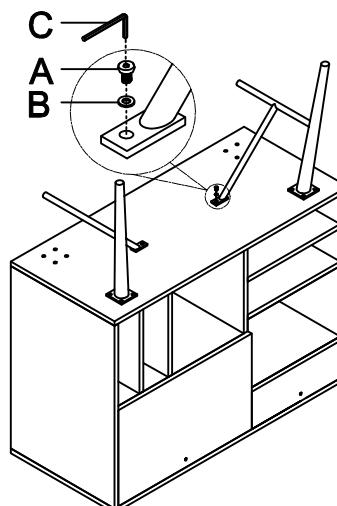


STEP 3

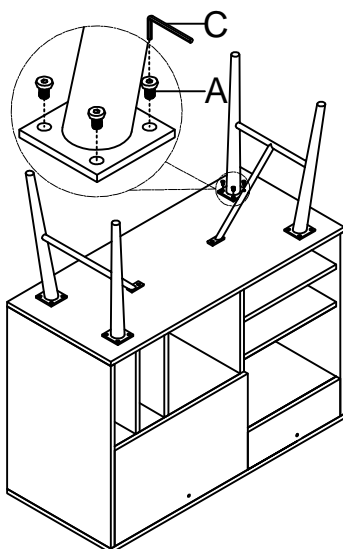

FINISH

The handle of drawer and door need to be installed outside.

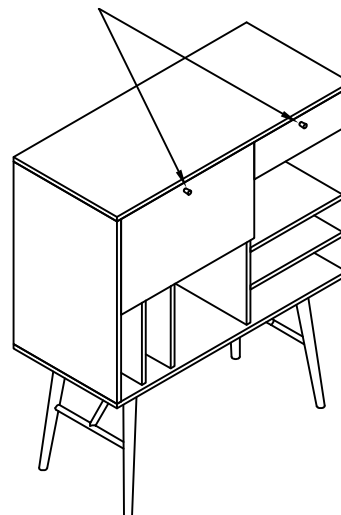

J9580-1



MODREST

A*18




B*2




C*1




STEP 1

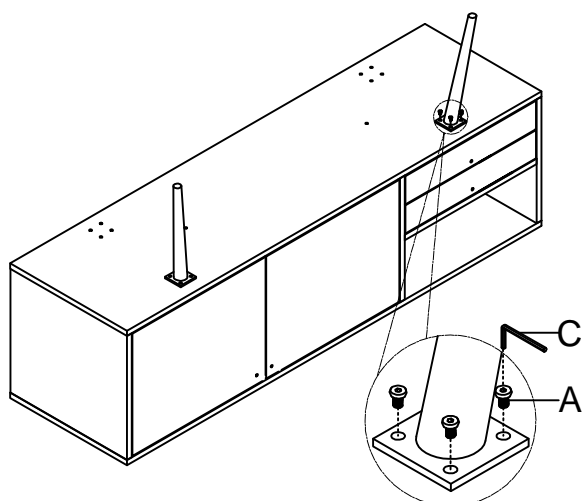

STEP 2

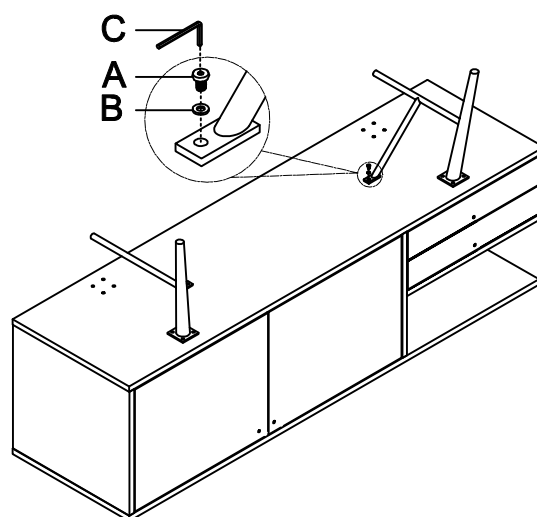


STEP 3

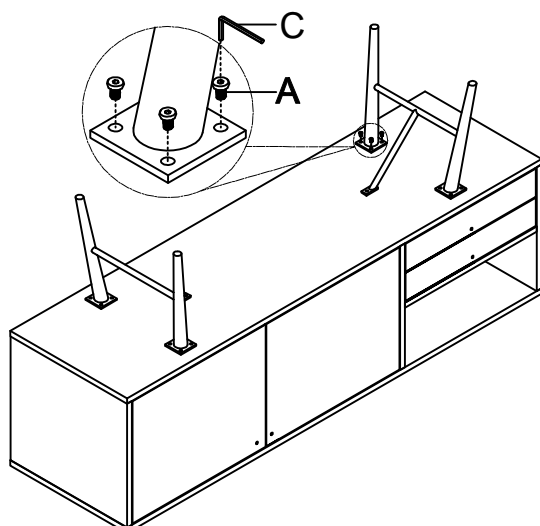

FINISH

The handle of drawer and door need to be installed outside.

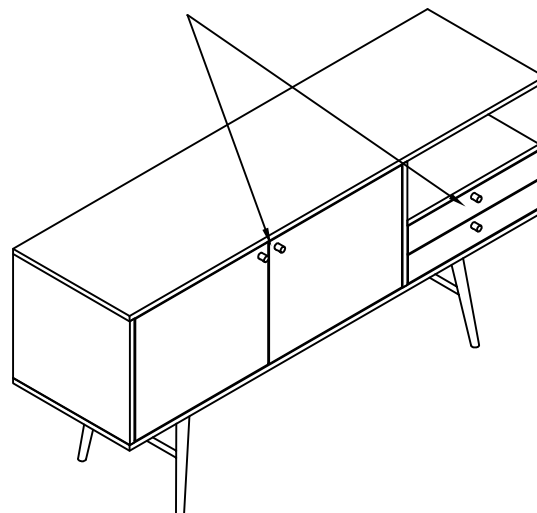

J3497



MODREST

A*18




B*2




C*1




STEP 1

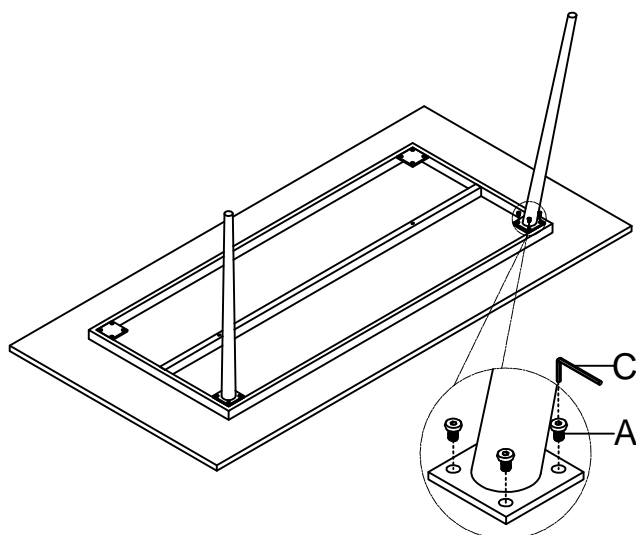

STEP 2

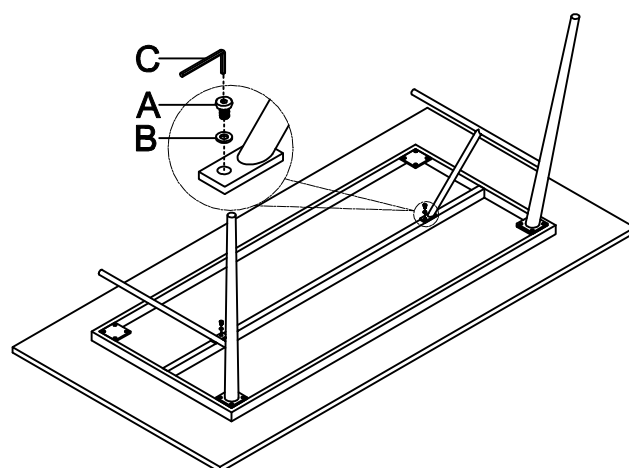

STEP 3

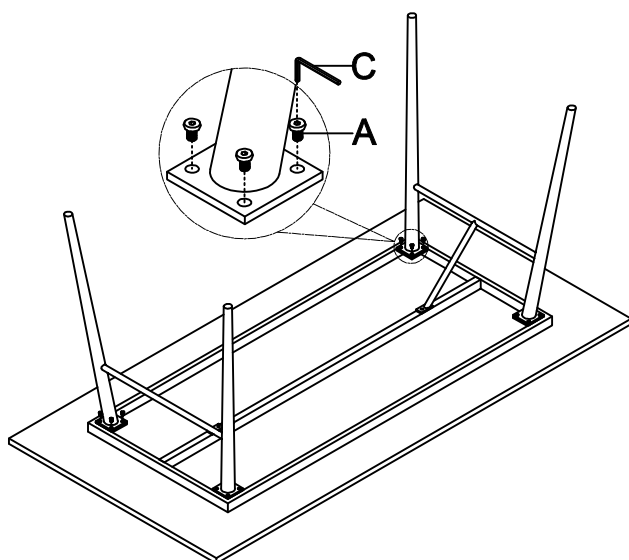

FINISH

