
















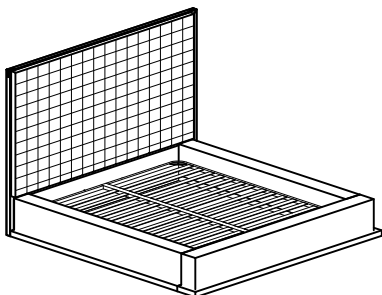
# ASSEMBLY INSTRUCTION

ITEM#: MA1306K


P: 1/1

NO.	Design	Size	Qty
A		M8*50	12
B		8*17*1.2	20
C		5mm	1
D		M8*150	4
E		ø8*30	8
F		M8	8
G		M8	12
H		14mm	2
I		ø38	8
J		4mm	1
K		M6*15	16
L		M6*50	8
M		8*20*4.5	8
N		M8*15	4
O			2


Finish



Step. 1

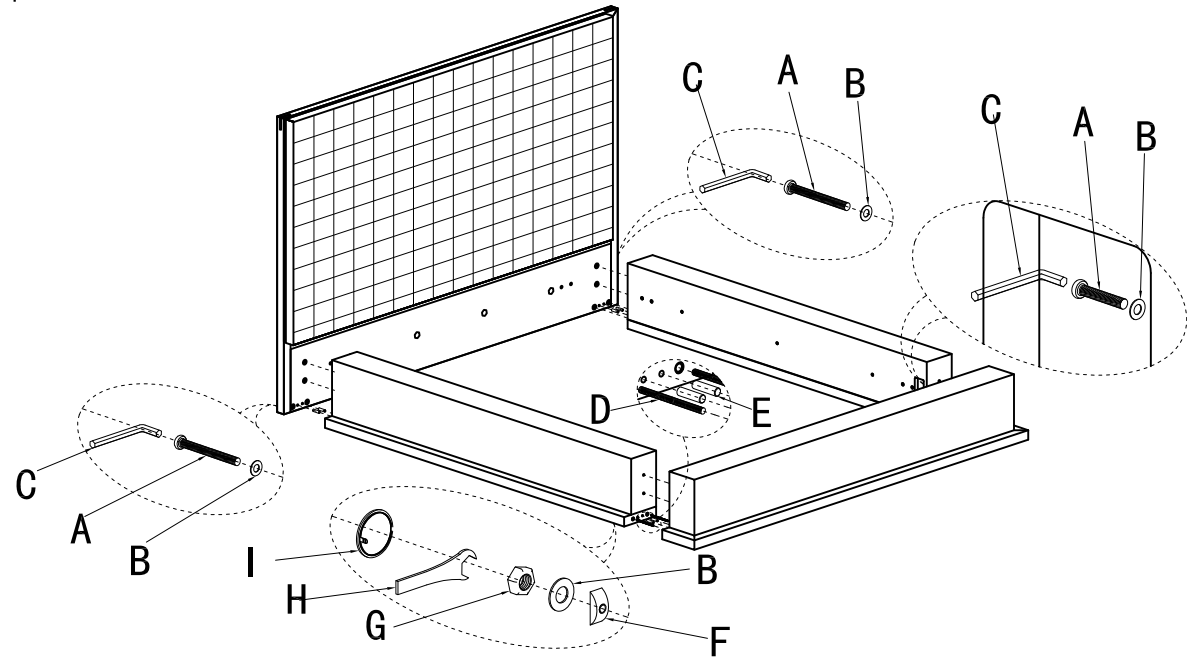

Step. 2

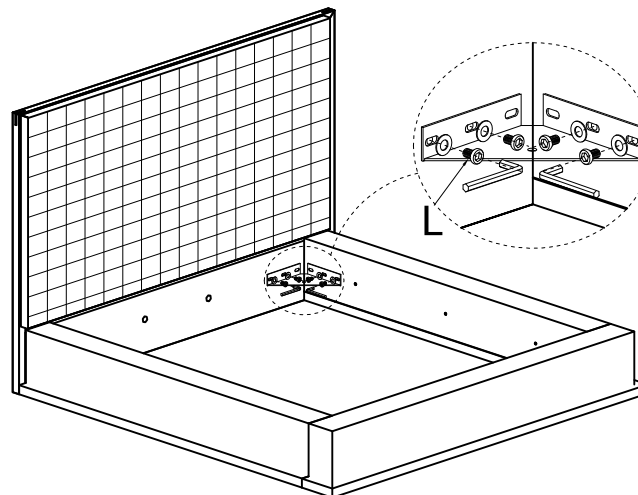

Step. 3

