

J5705



MODREST

A*18




B*2




C*1




STEP 1

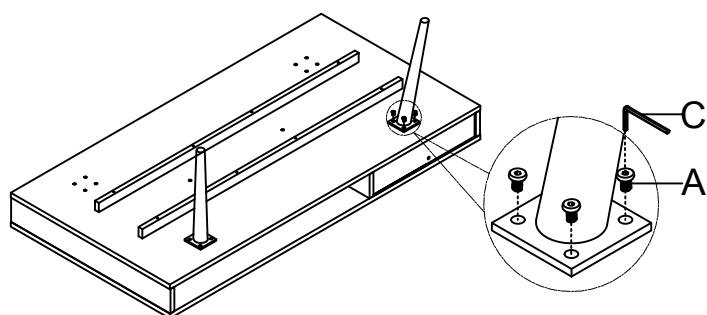

STEP 2

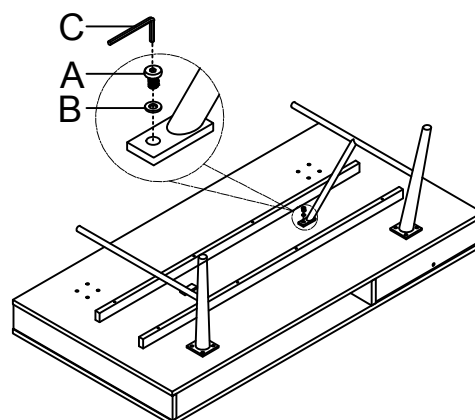

STEP 3

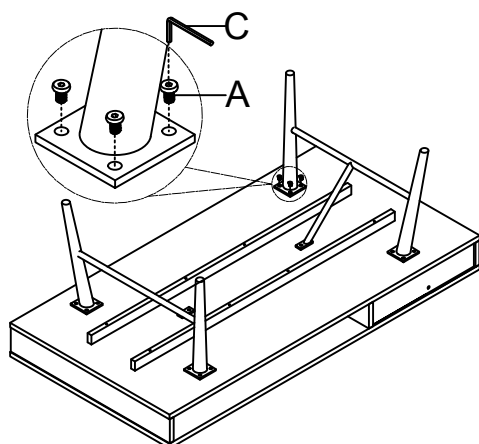

FINISH

The handle of drawer need to be installed outside.

