


# NANT-QB161

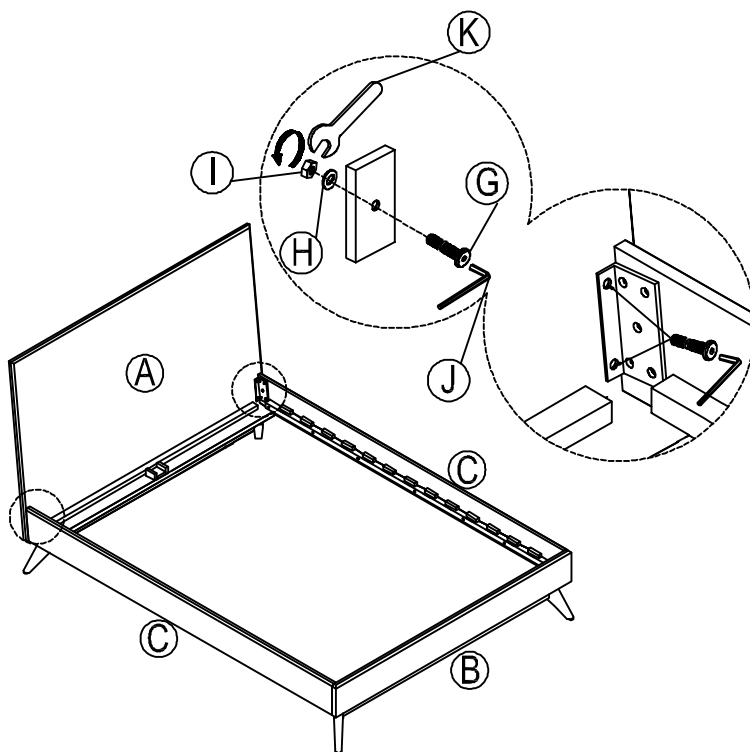








MODREST



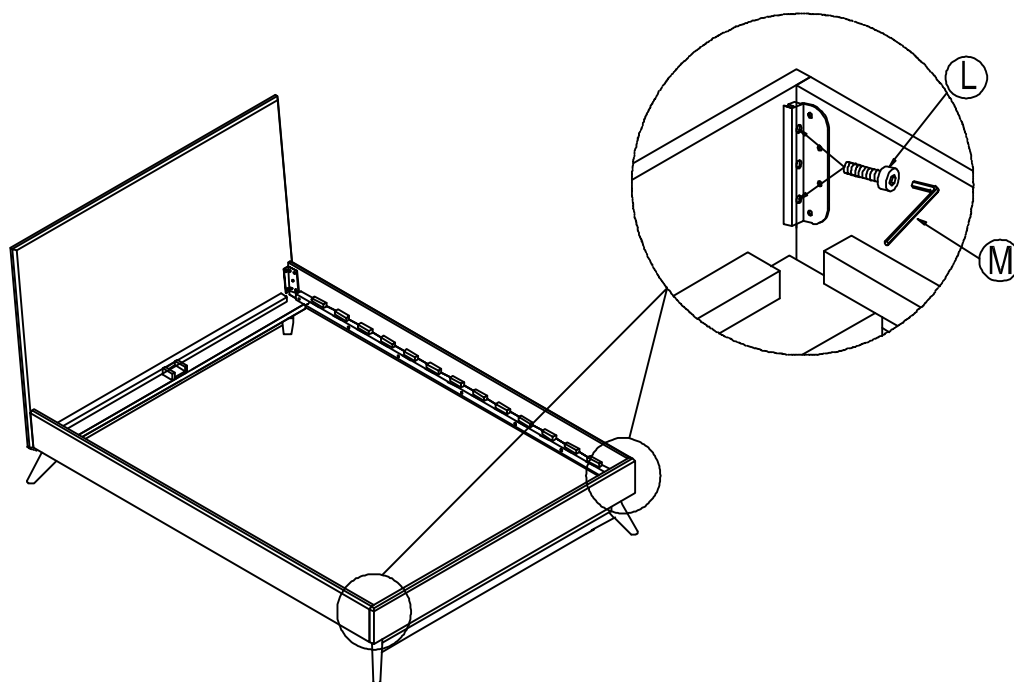




## STEP 1




## STEP 2




| A   | B   | C   | D   | E   | F   |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| HEADBOARD   | FOOTBOARD   | SIDERAIL LEFT AND RIGHT   | MIDDLE RAIL   | CENTER LEG  | SLAT FRAME  |
| 1PC   | 1PC   | 2PCS  | 1PC   | 3PCS  | 14PCS   |

| G   | H   | I   | J  | K   | L   | M   |
|---|---|---|--|---|---|---|
|  |  |  |  |  |  |  |
| M8x40mm   | Ø14/Ø6  | M8  | M4   | K13   | M6x15mm   | M5  |
| 4PCS  | 4PCS  | 4PCS  | 1PC  | 1PC   | 4PCS  | 1PC   |

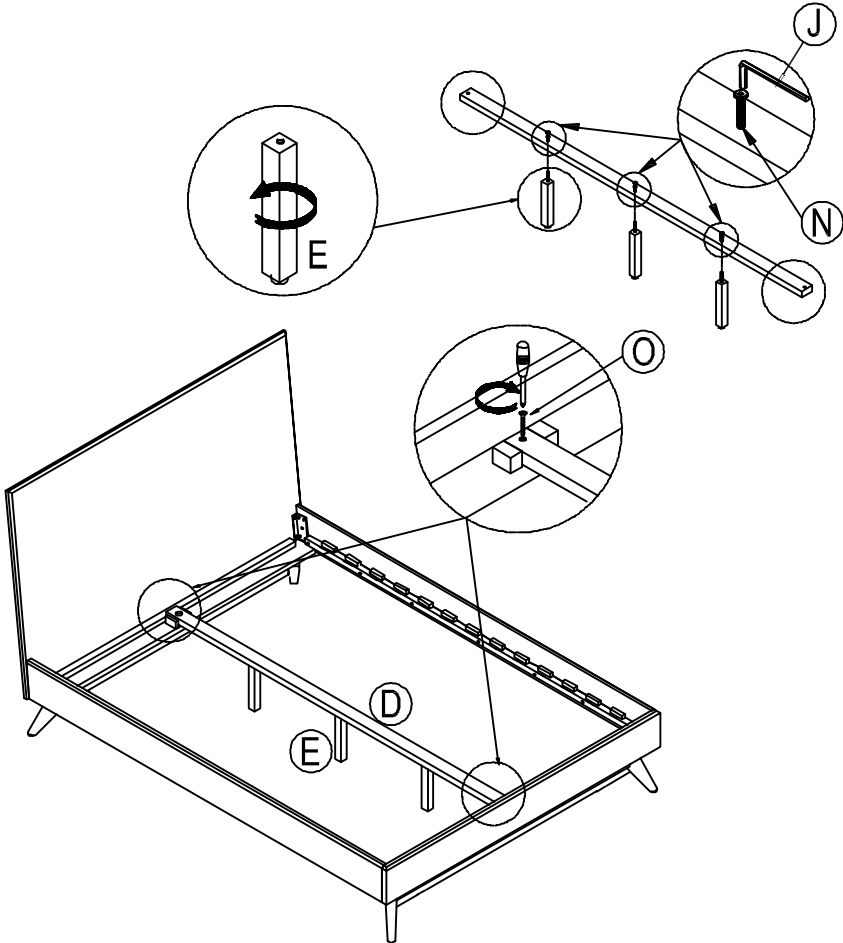

STEP 3

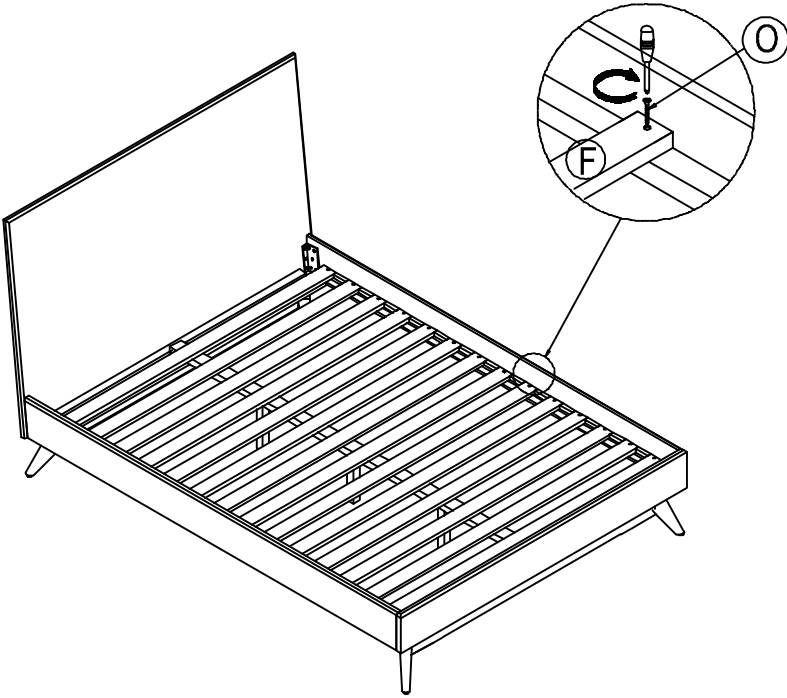

STEP 4



FINISH

| N   | O   |
|---|---|
|  |  |
| M6x40   | M4x30   |
| 3PCS  | 30PCS   |