

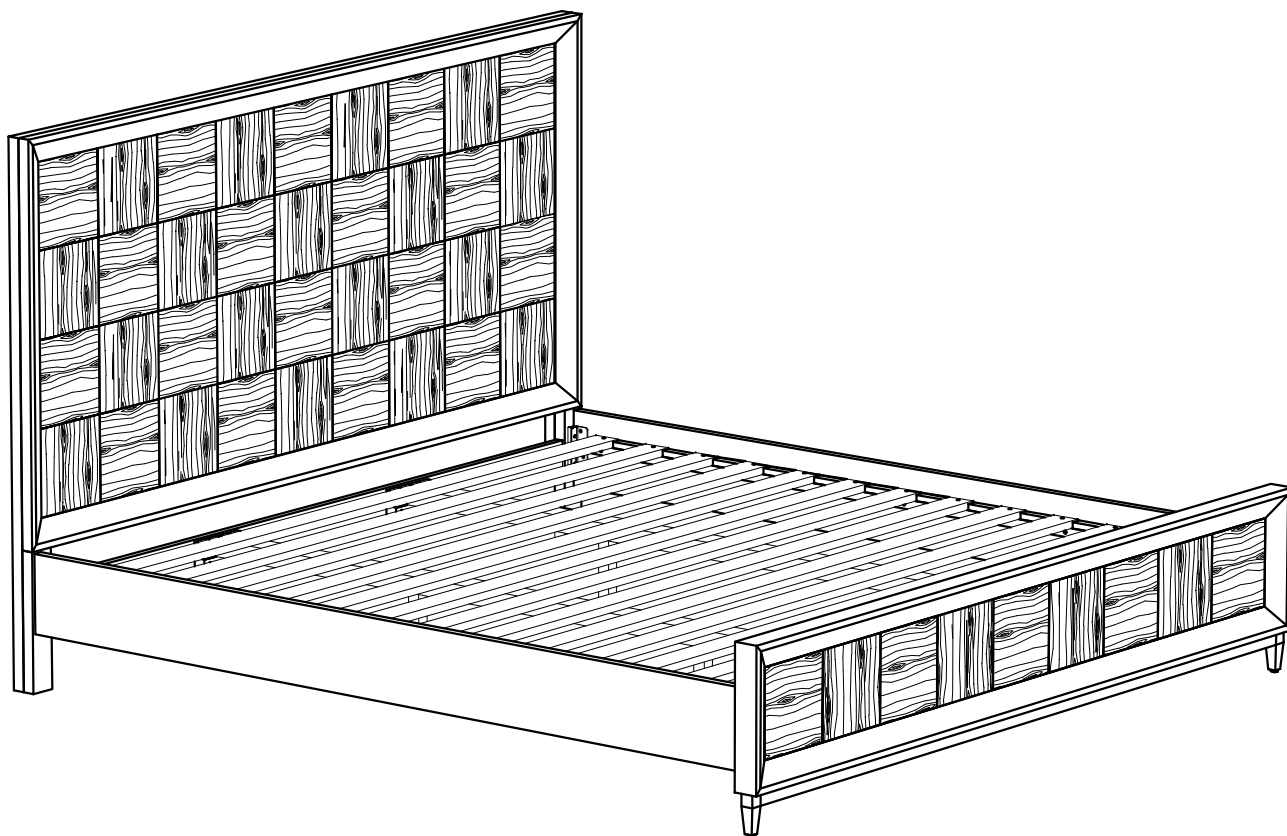
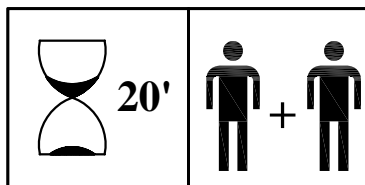
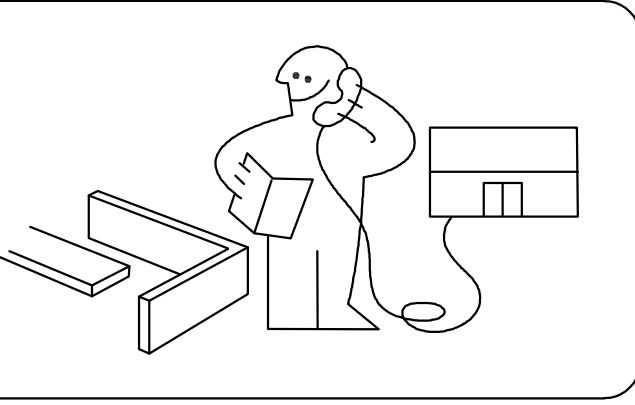
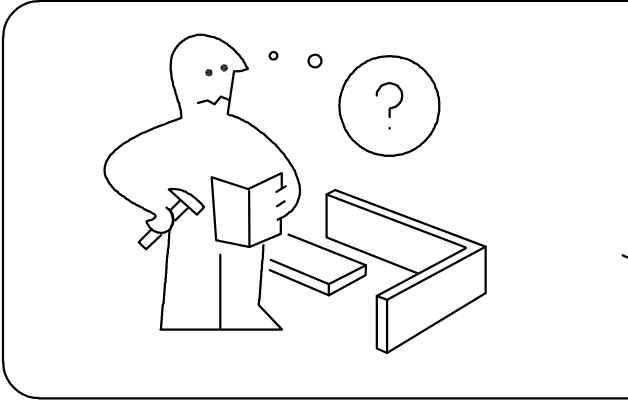
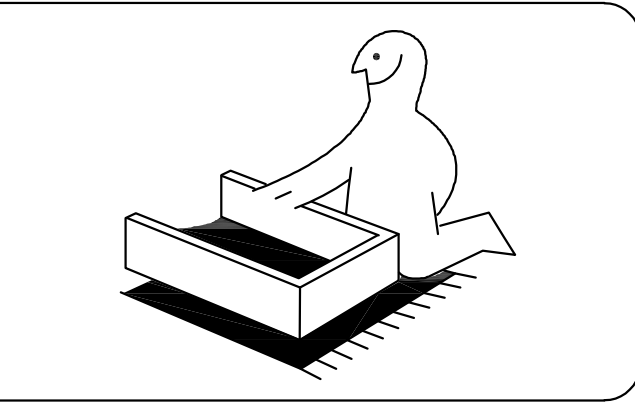
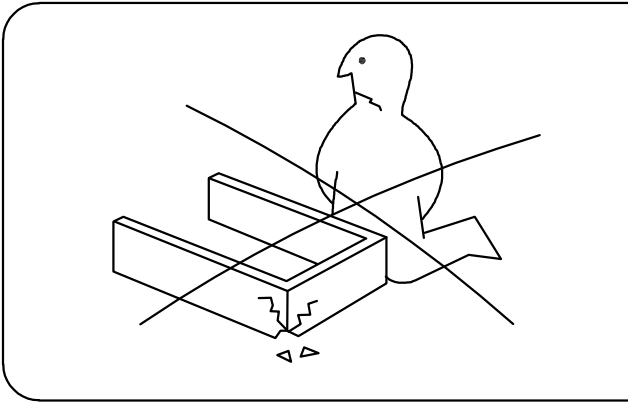
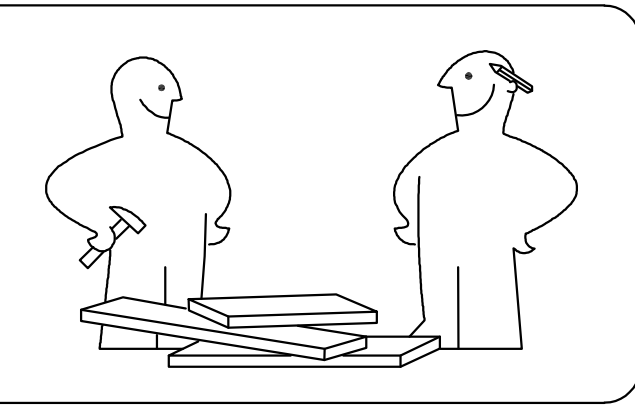
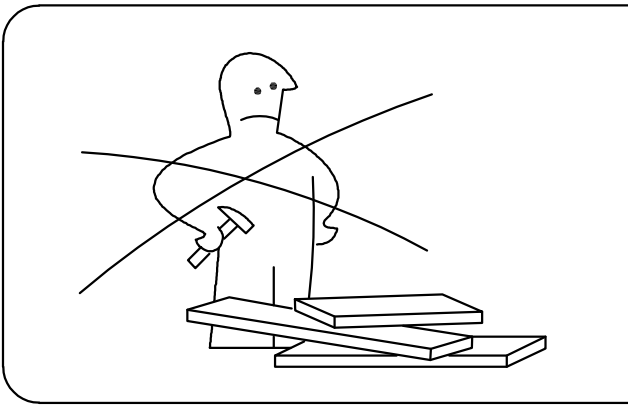


# SHANE KING BED

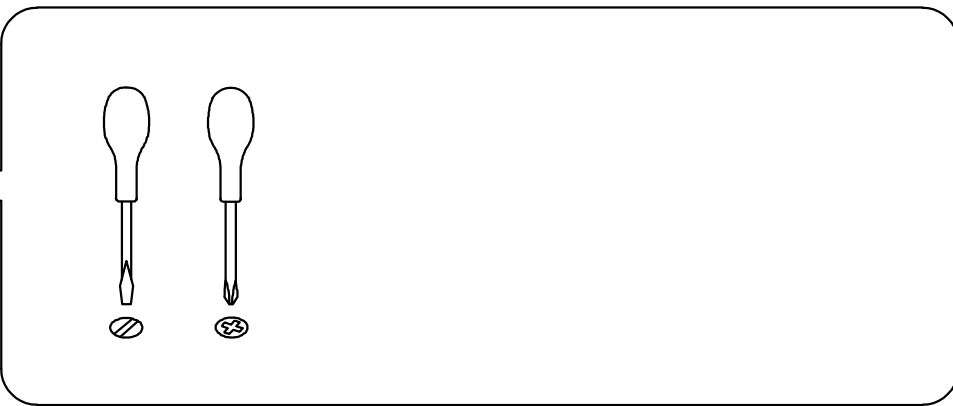


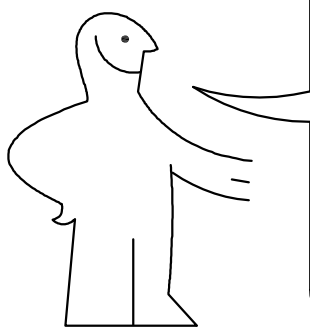



(L2170 x W2010 x H1300)

ASSEMBLY INSTRUCTION







## HARDWARE FOR WOODEN

No.	Hardware			Q.ty
①	Bolt	M6x10		08
②	Allen Key	K5		01
③	Screws	Ø4x30		30
④	Bolt	M6x40		08
⑤	Lock Washer	M8		08
⑥	Flat Washer	M8xØ16		08
⑦	Allen Key	K4		01


**A x 1**

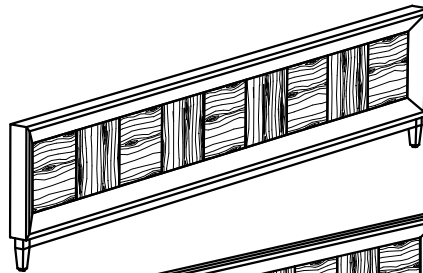


**B x 1**

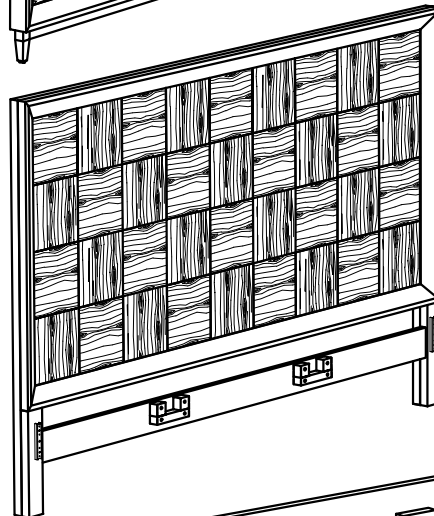

**C x 2**

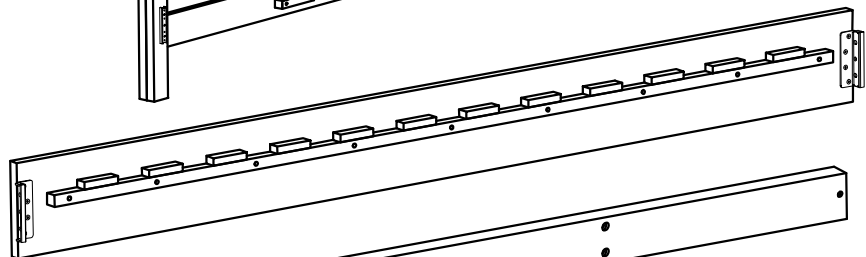


**D x 2**

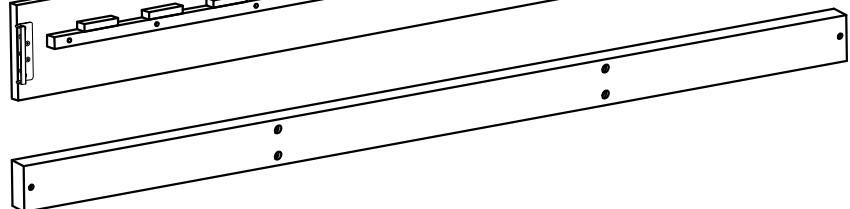


**E x 4**




**F x 13**

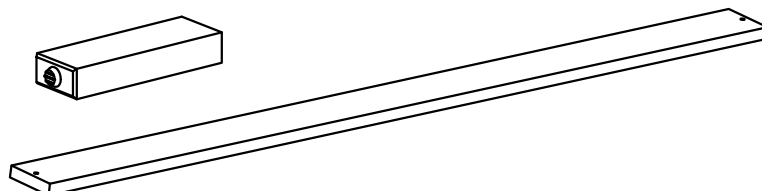

## STEP 1

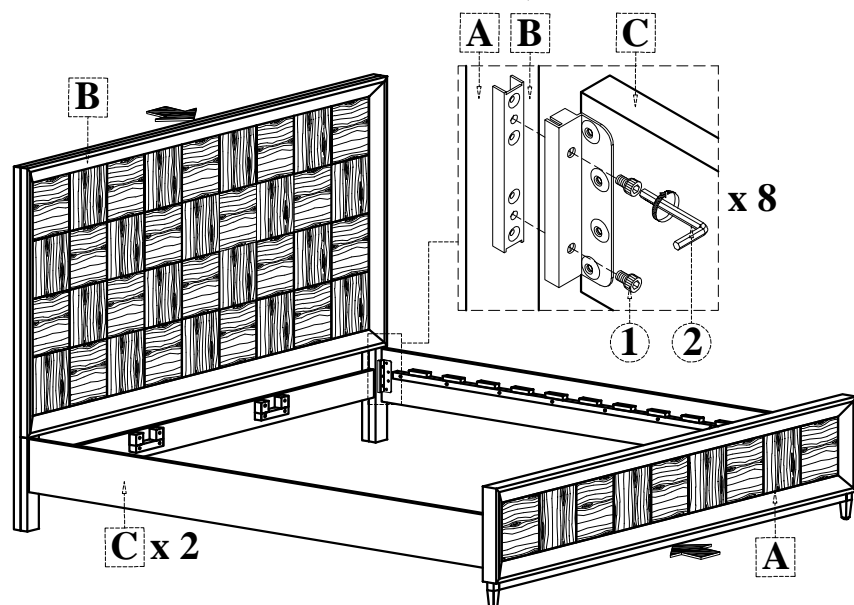

## STEP 2

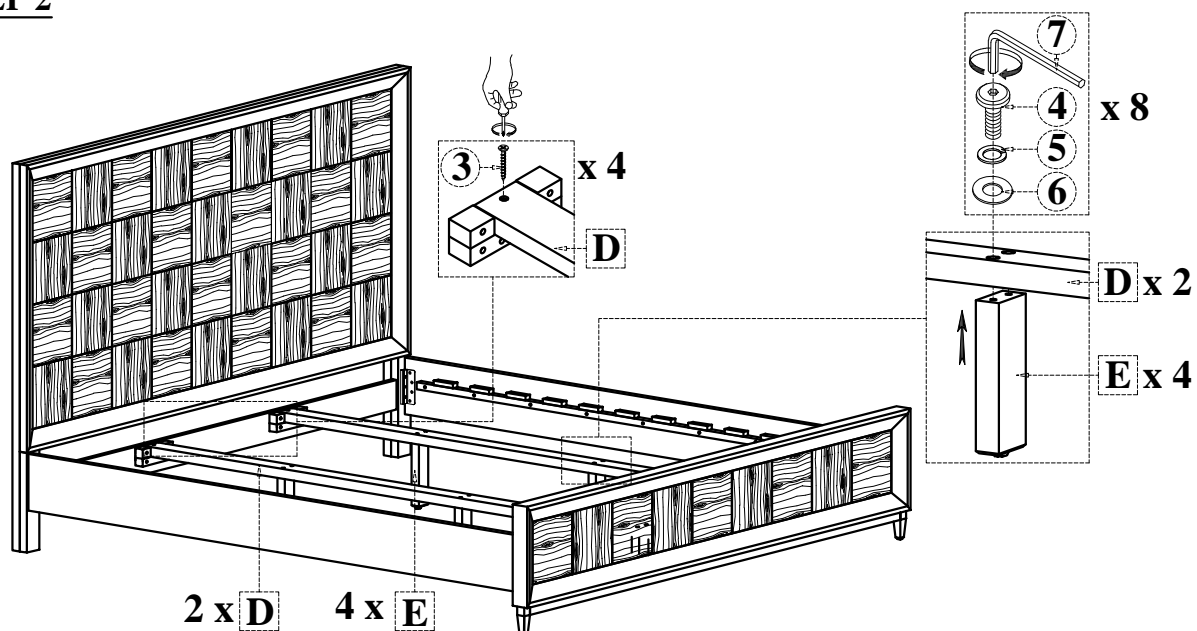

## FINISH

