




















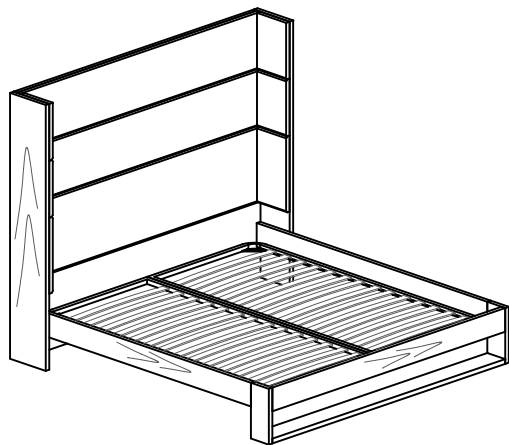
MA1309K/Q ASSEMBLY INSTRUCTION

VERSION:CB709K

page 1/3

SETTING FITTINGS


FITTINGS	SPEC.	AMOUNT	FITTINGS	SPEC.	AMOUNT
A	 2047*1945*30	1PC	B	 175*175*40	4PCS
C	 Ø8*30	20PCS	D	 M6*16	16PCS
E	 M8*20	8PCS	F	 M6*50	8PCS
G	 M8*40	4PCS	H	 M8*150	8PCS
I	 M8*110	4PCS	J	 175*175*40	4PCS
K	 M8*90	18PCS	L	 4mm	1PC
M	 5mm	1PC	N	 14mm	2PC
O	 M8	42PCS	P	 M8	38PCS
Q	 8*17*1.2	20PCS	S	 10*20*4.5	8PCS
T	 Ø38	38PCS	U		



Assemble the headboard firstly.

1. Insert wood nogs(Fittings C) and long bolts(Fittings H) in the headboard's bottom panel.Attached semcresis—shape screws(Fittings P) & nuts(Fittings O) on the bottom side by using wrench(Fittings N);


STEP1

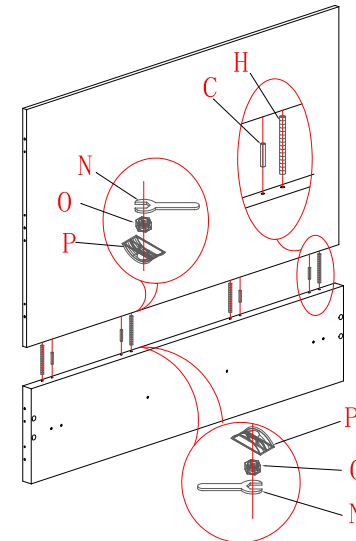

2. Position the upper part of headboard on the bottom panel. Make sure the wood nogs and long bolts attach in the right holes.
3. Fasten the long bolts by using semcresis—shape screws(Fittings P) & nuts(Fittings O) on the bottom side.

Assemble the side wings

STEP2

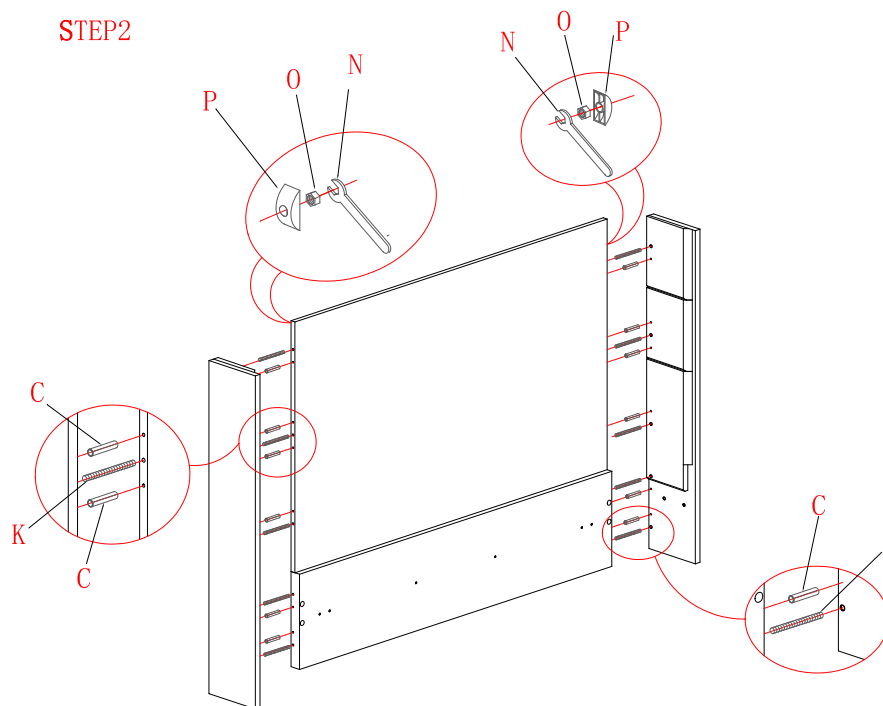


1. Position the wood nogs(Fittings C) in the right position. Fasten the bolts(Fittings K) in the matching holes on side panels.
2. Attach the side panels on the assembled headboard.
3. Fasten the other side of the bolts(Fittings K) by using semcresis—shape screws(Fittings P) & nuts(Fittings O).

Assemble the end rail

STEP3


1. Do please assemble it from left side to right side, or from right side to left side. Don't assemble two sides at the same time.

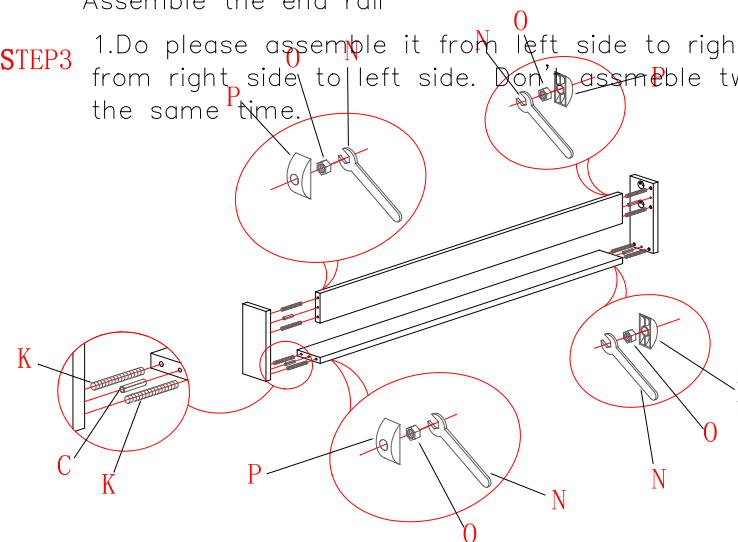

Assemble the side rails


STEP4

1. Attach one side rail firstly. Fasten the side rail on the side wings by using semcresis—shape screws(Fittings P) & nuts(Fittings O) and fasten the screws(Fittings G) & washers (Fittings Q) on the side rail.
2. Connect the side rail and end rail by using bolts(Fittings H) & wood nogs(Fittings C). Don't fasten it until the other side rail is fixed.

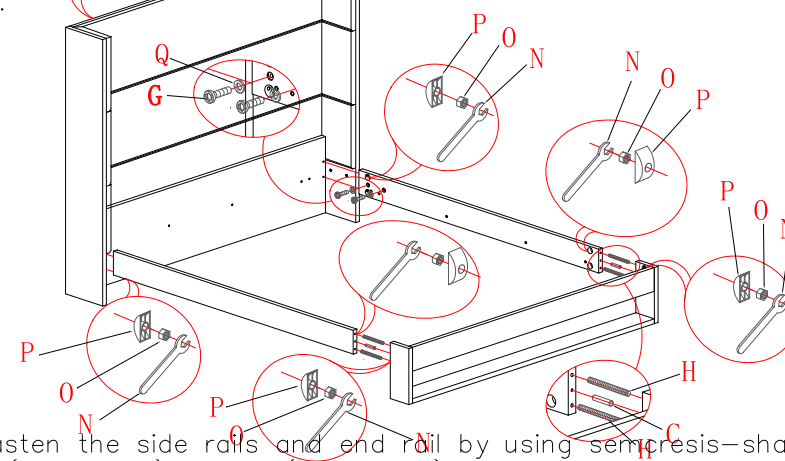

3. Fasten the side rails and end rail by using semcresis—shape screws(Fittings P) & nuts(Fittings O).

Assemble the brackets

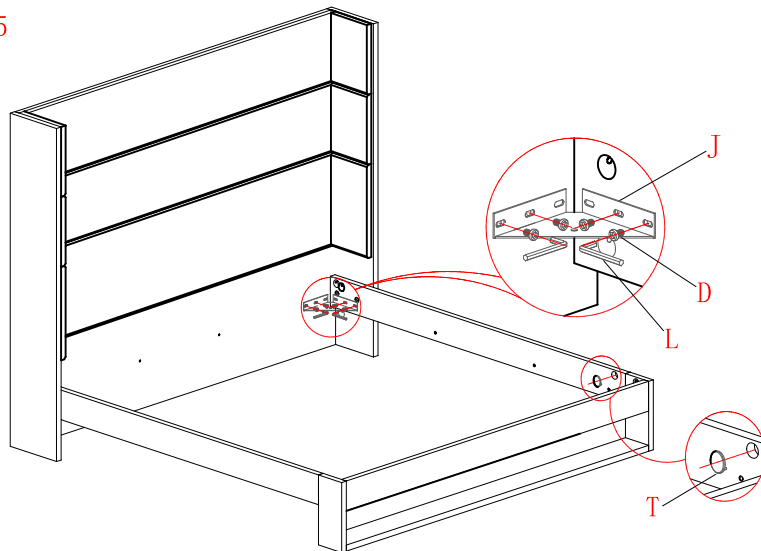STEP5**STEP6**

Assemble the slat

1. Attach the middle legs on the slat;
2. Fix the slat on the side rails, headboard & end rail

