

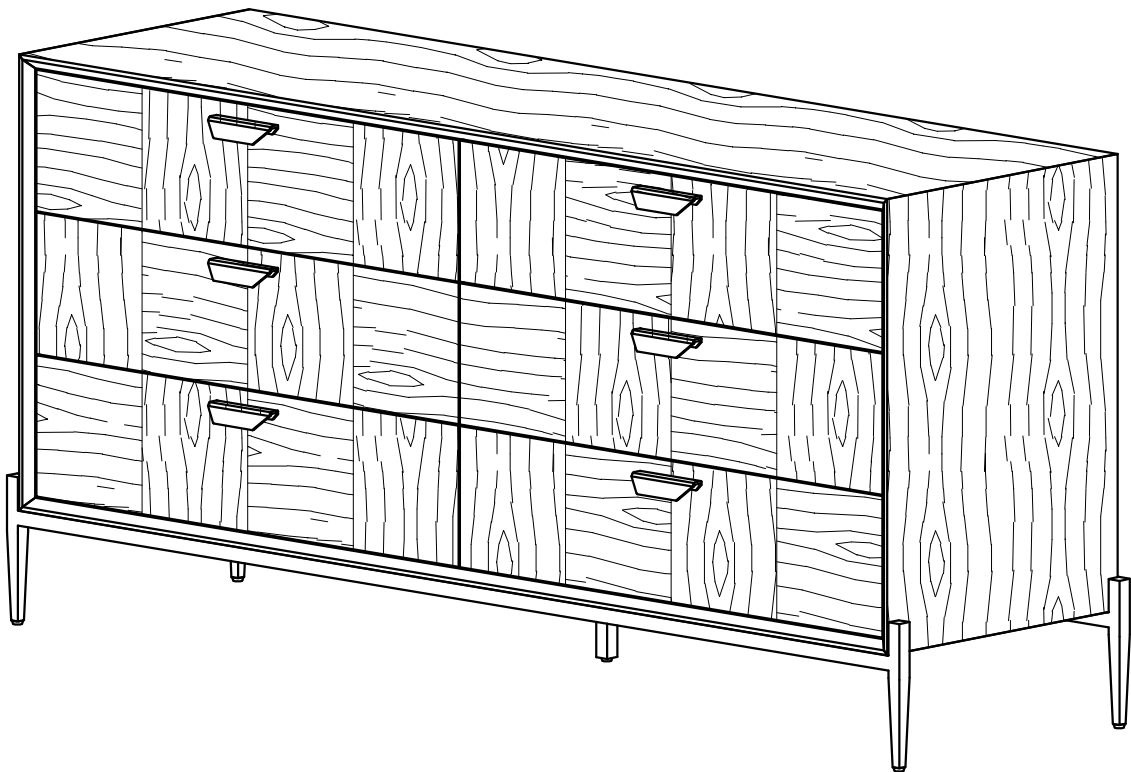
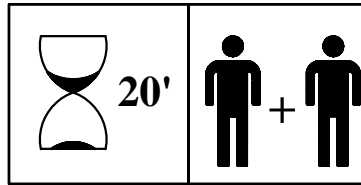
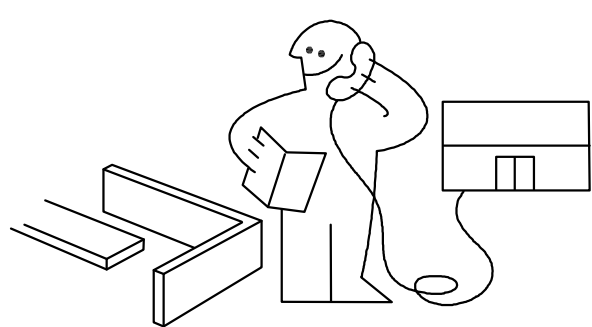
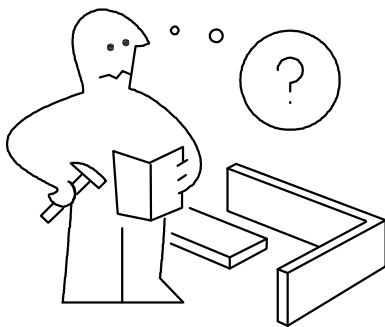
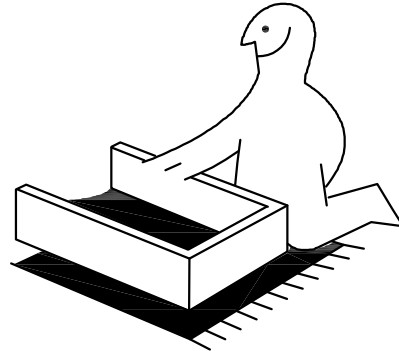
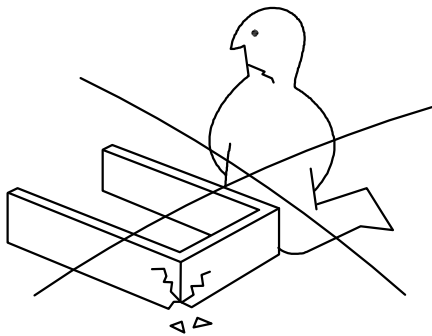
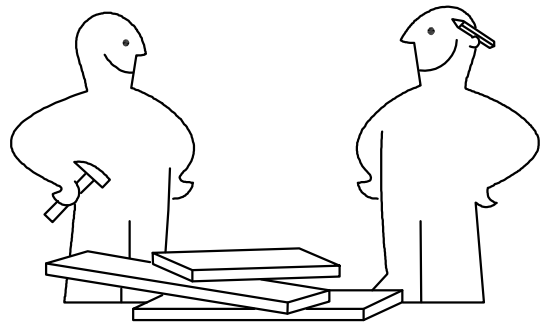
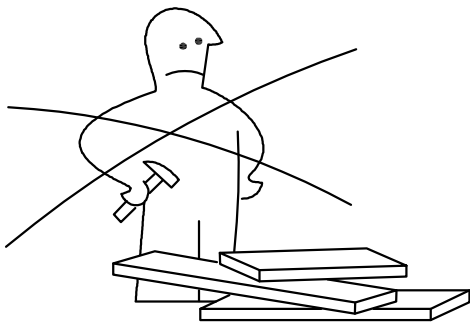


SHANE DRESSER WITH 6 DRAWERS


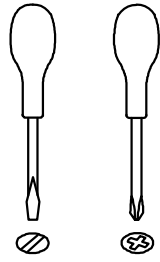




(L1606xW450xH764)

ASSEMBLY INSTRUCTION

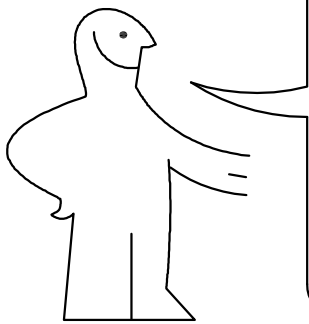





HARDWARE FOR WOODEN

No.	Hardware			Q.ty
①	Bolt	M6x10		12
②	Bolt	M6x15		14
③	Lock Washer	M8		14
④	Flat Washer	M8xØ16		14
⑤	Allen Key	K4		01
⑥	Anti-tip Kit			02

A x 1

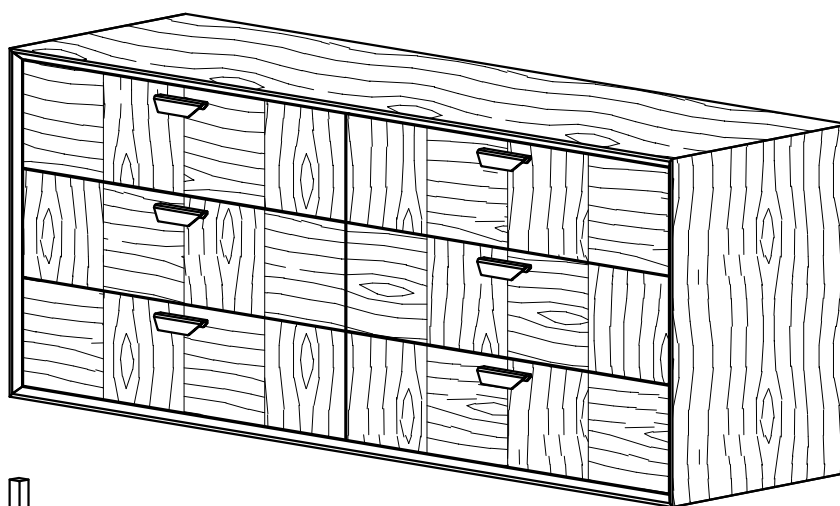


B x 2

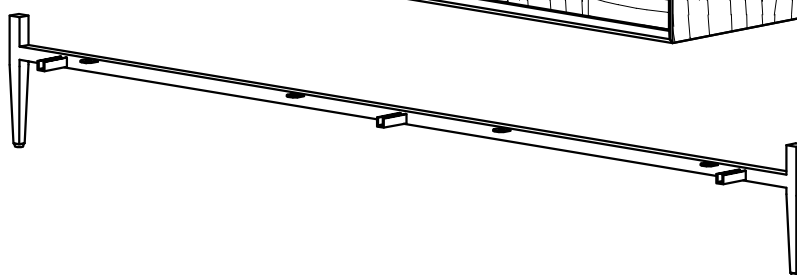


C x 2




D x 1

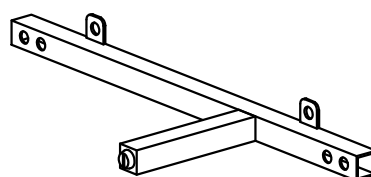

STEP 1

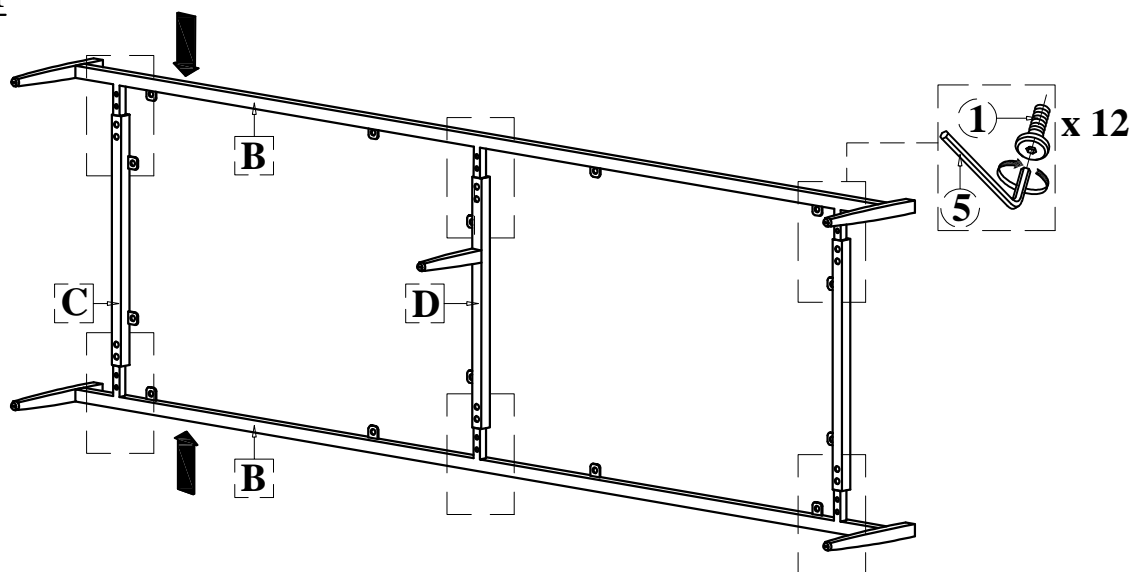

STEP 2

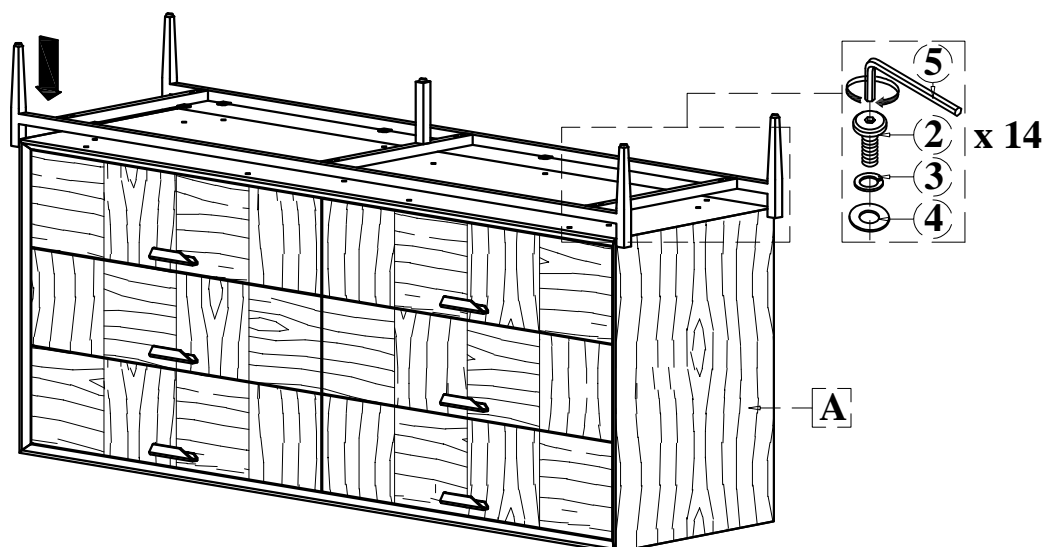

FINISH

