



Messina /JY-4012 PARTLIST

HARDWARE LIST


①Headboard 1pc

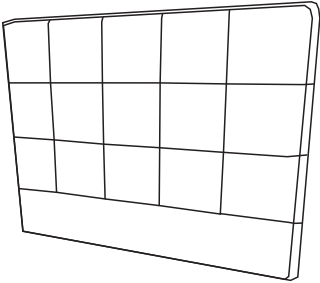


②Footboard 1pc

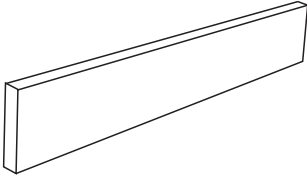


③Side Rail x 2pcs

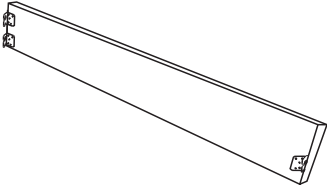


④ Slat frame x 1pc

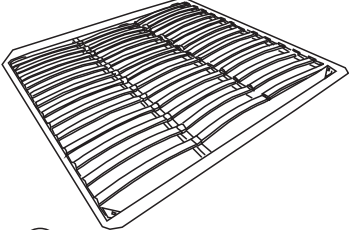


⑤ Right angle iron x 2pcs



⑥ Gas spring x 2pcs

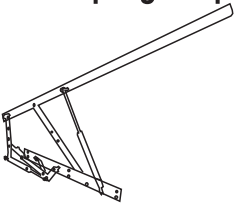


⑦




X2

⑧




X4

⑨




X1

⑩




X1

⑪




X4

⑫




X2

⑬




X12


(A) Bolt M8 x30mm x56pcs




(B) Nut M8x13mmx14pcs

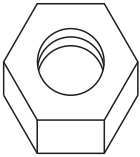


(C) Spring Washer x 62pcs

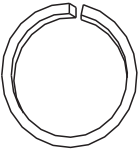


(D) Flat Washer x 62pcs




(E) Allen Key M5 x 1pc

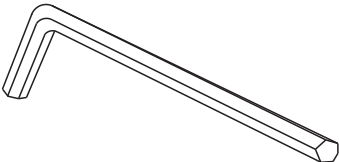


(F) Spanner x 1pc




(G) Leg x 2pcs




(H) BoltM8 x 50mm x 10pcs




(I) Rubber Feet x 2pcs




(J) Bracket x 6pcs




Step 1

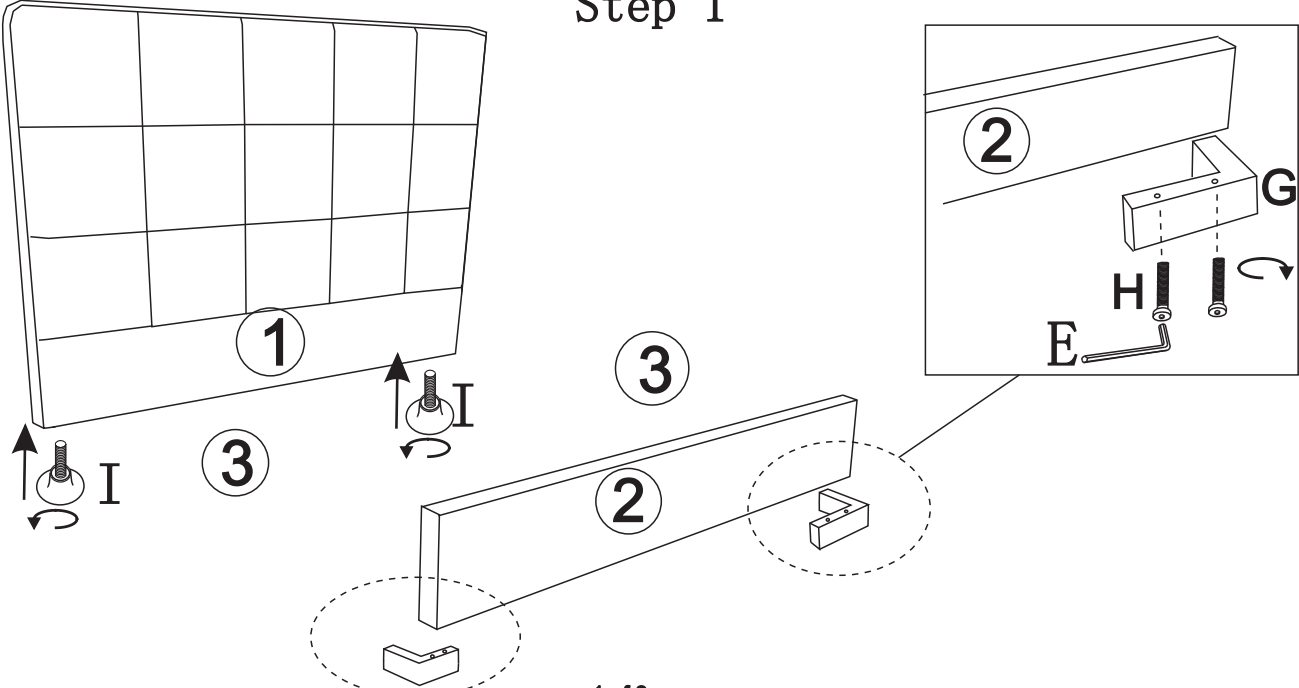


Step 2

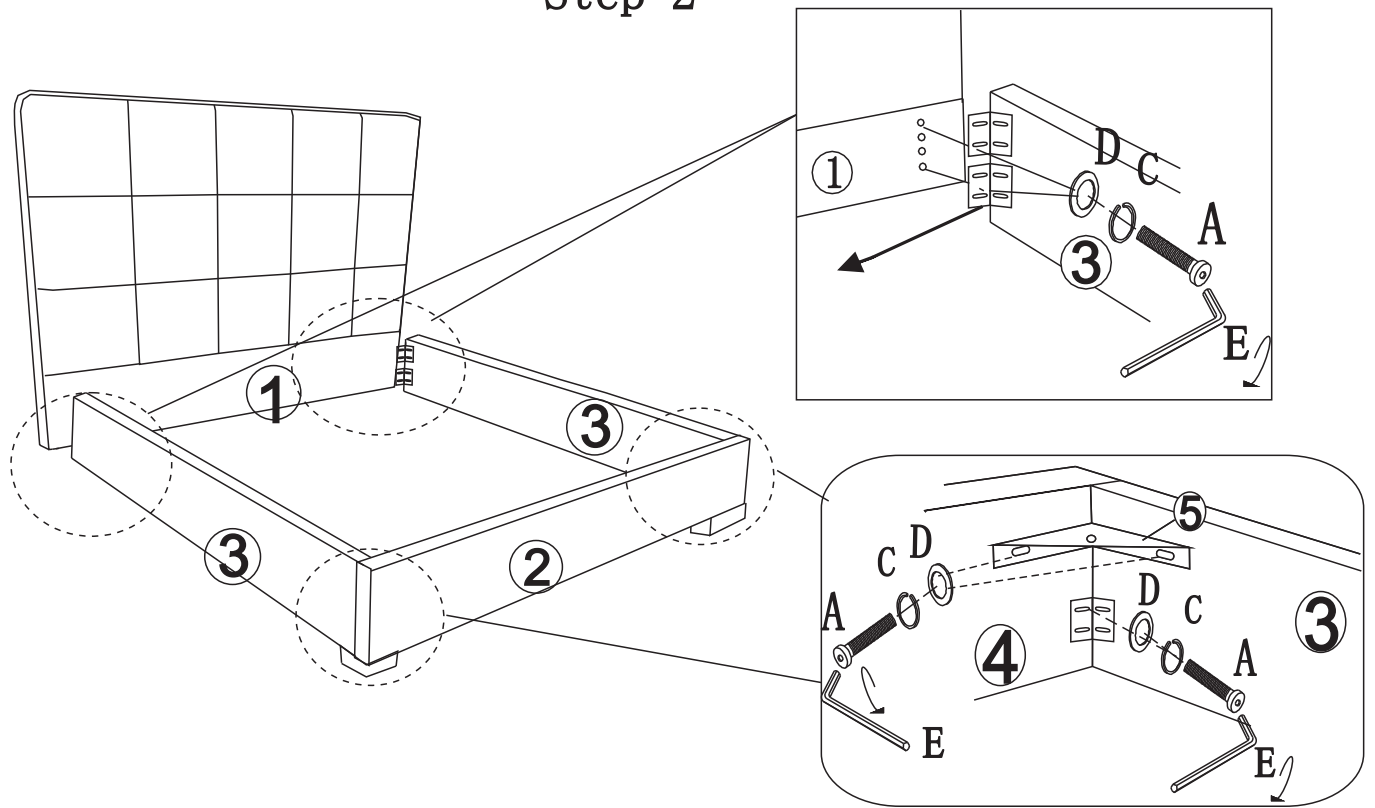


Step 3

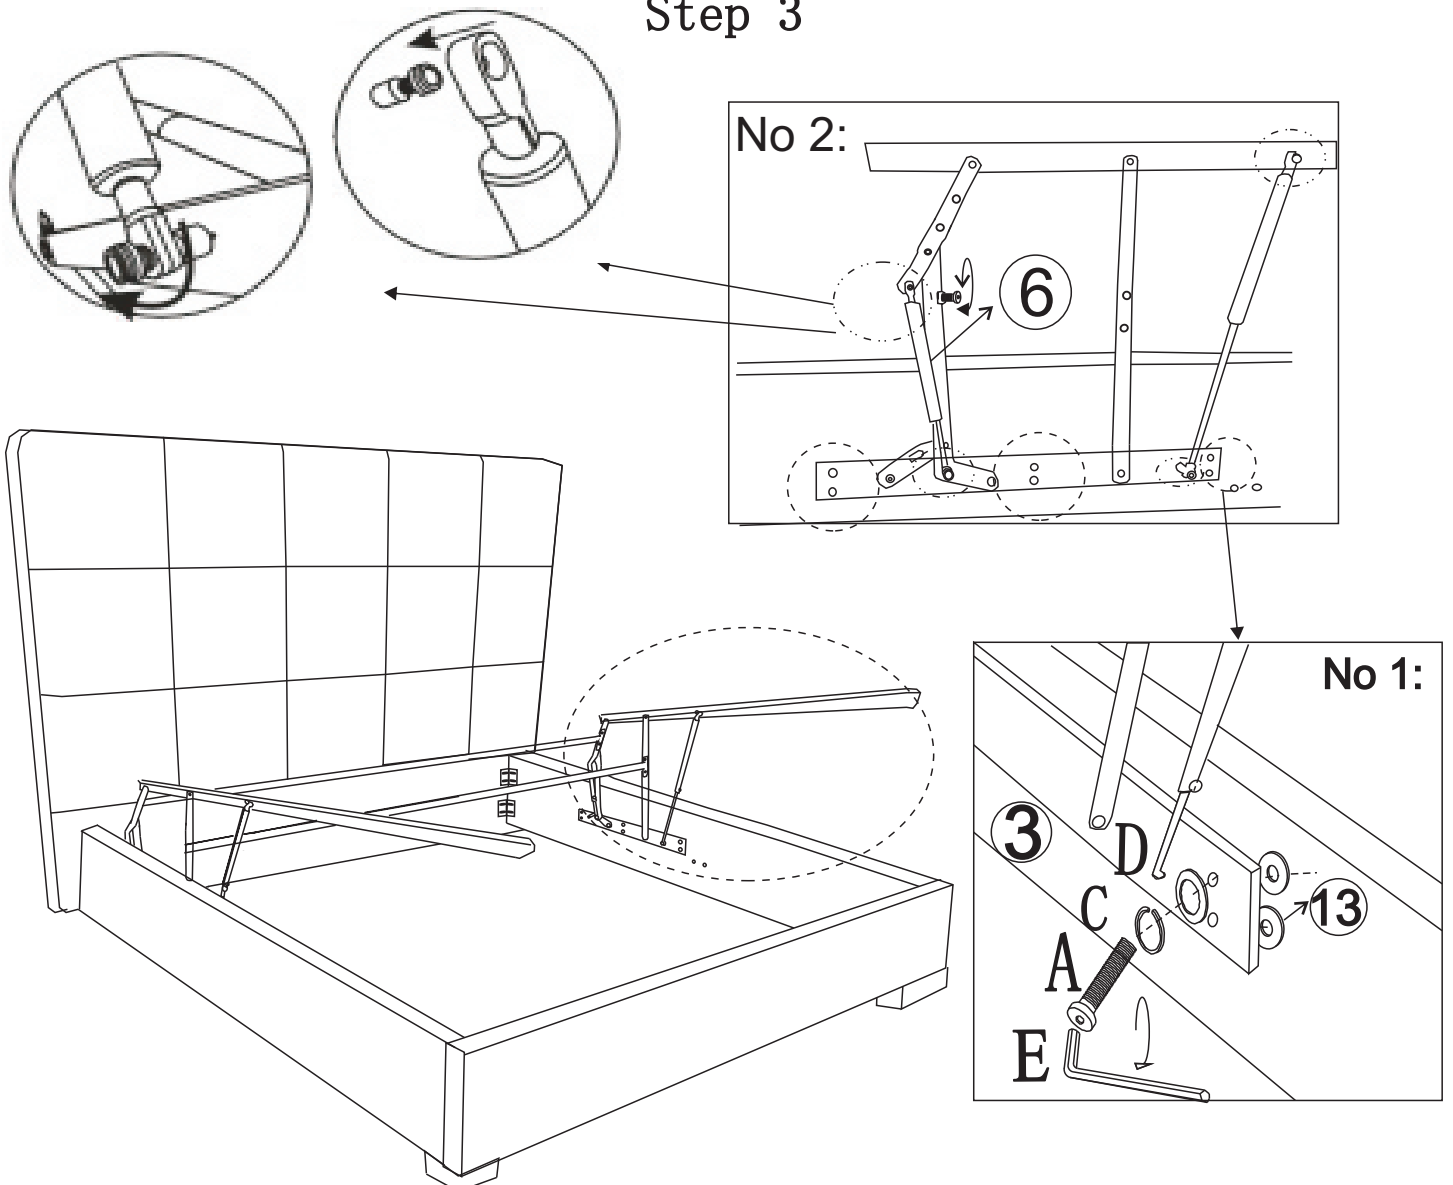

Step 4

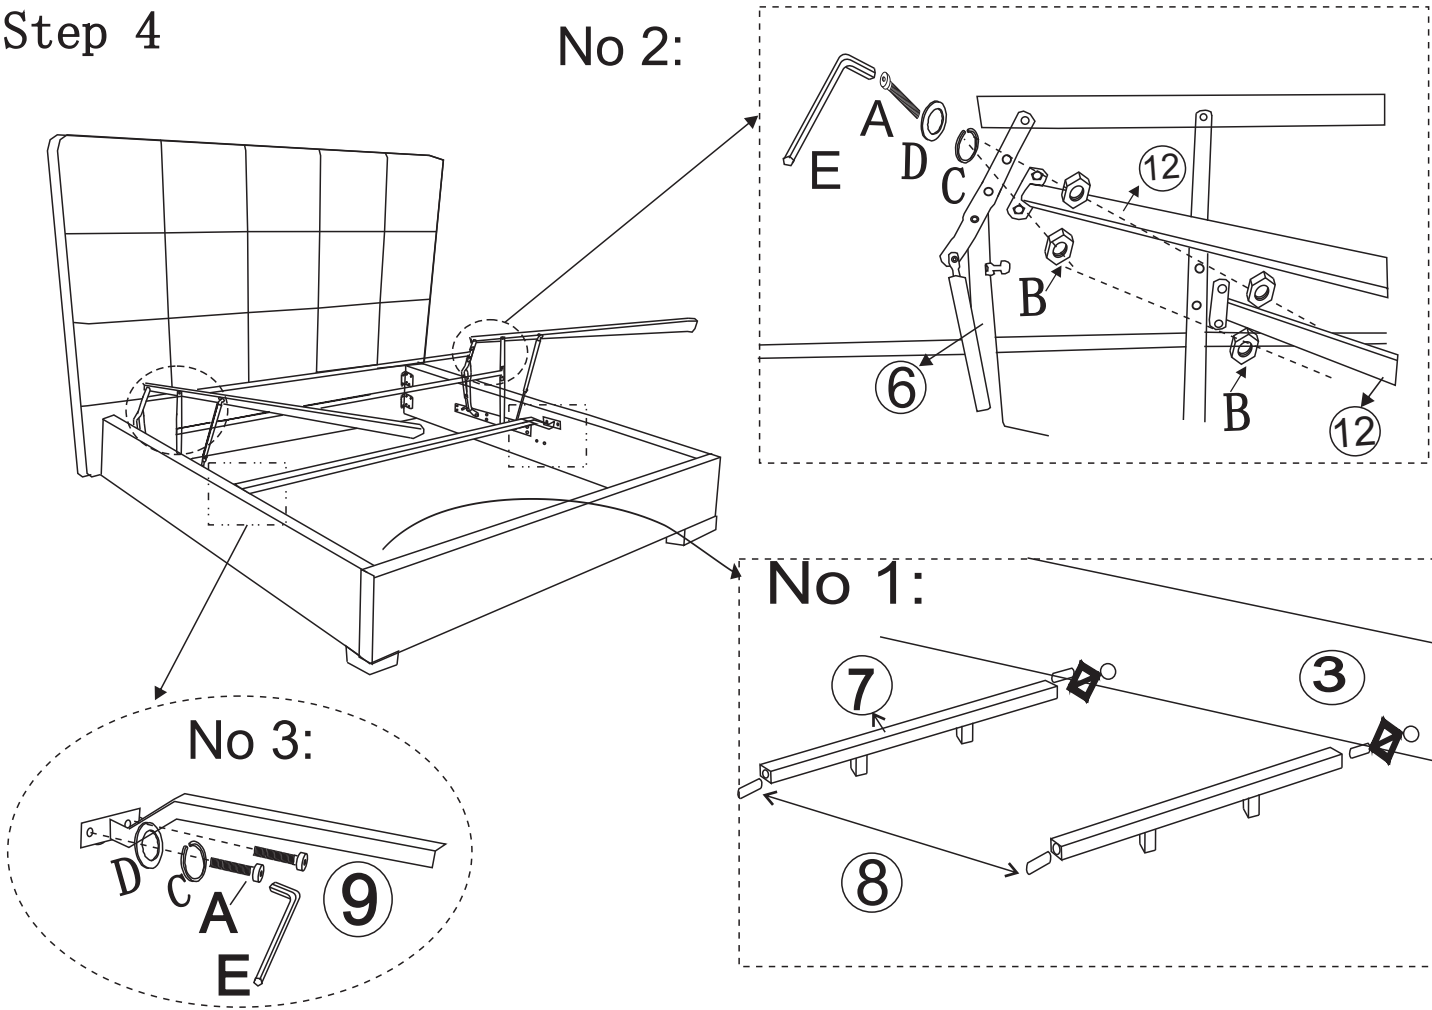

Step 5


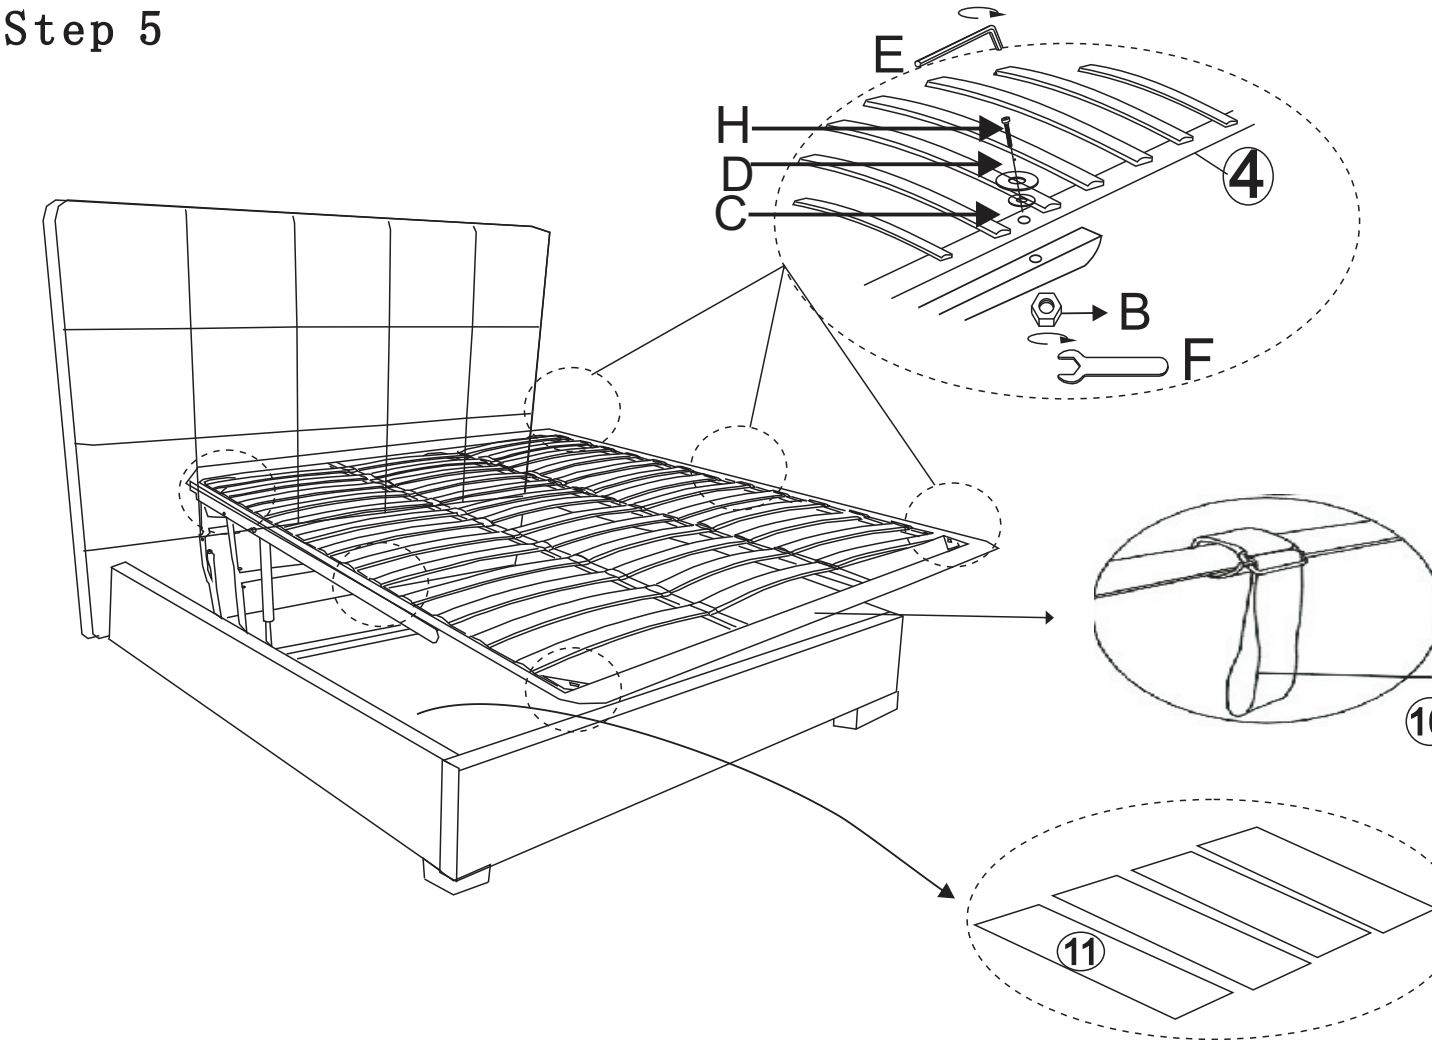


Messina /JY-4012 PARTLIST

HARDWARE LIST (60"*80")



① Headboard 1pc

② Footboard 1pc

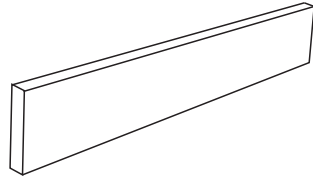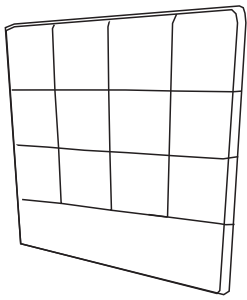



③ Side Rail x 2pcs

④ Slat frame x 1pc

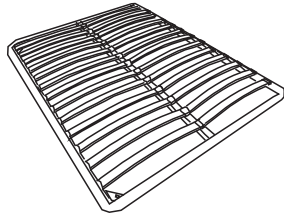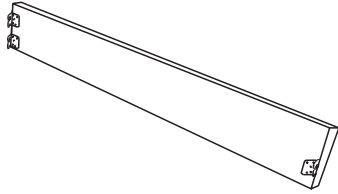

⑤ Right angle iron x 2pcs

⑥ Gas spring x 2pcs

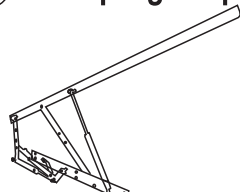



X2

X4



X1

X1

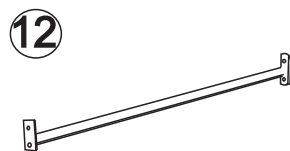

X3



X2



X12



(A) Bolt M8 x30mm x56pcs

(B) Nut M8x13mmx14pcs

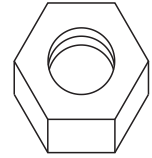



(C) Spring Washer x 62pcs

(D) Flat Washer x 62pcs

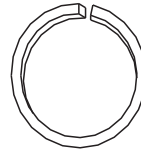



(E) Allen Key M5 x 1pc

(F) Spanner x 1pc


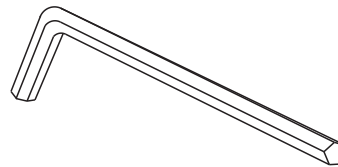


(G) Leg x 2pcs




(H) BoltM8 x 50mm x 10pcs




(I) Rubber Feet x 2pcs (J) Bracket x 6pcs

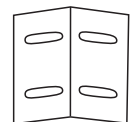


Step 1

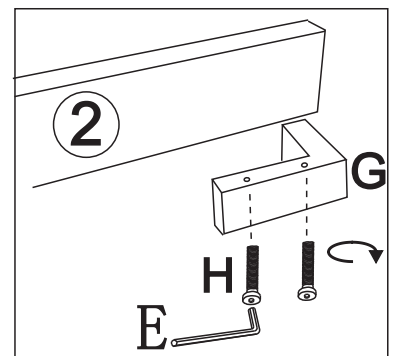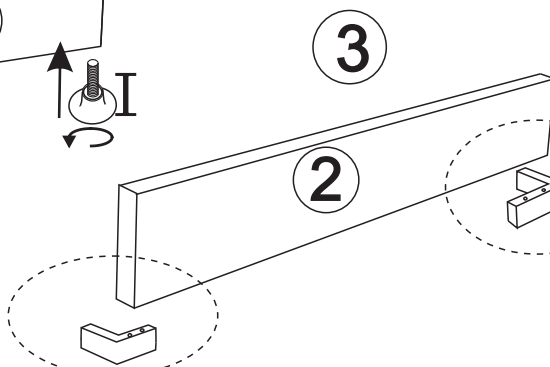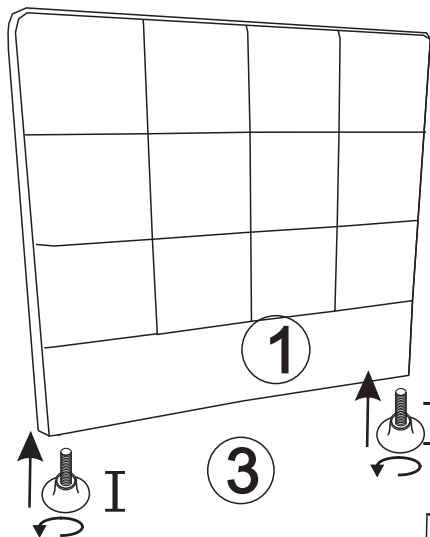


Step 2

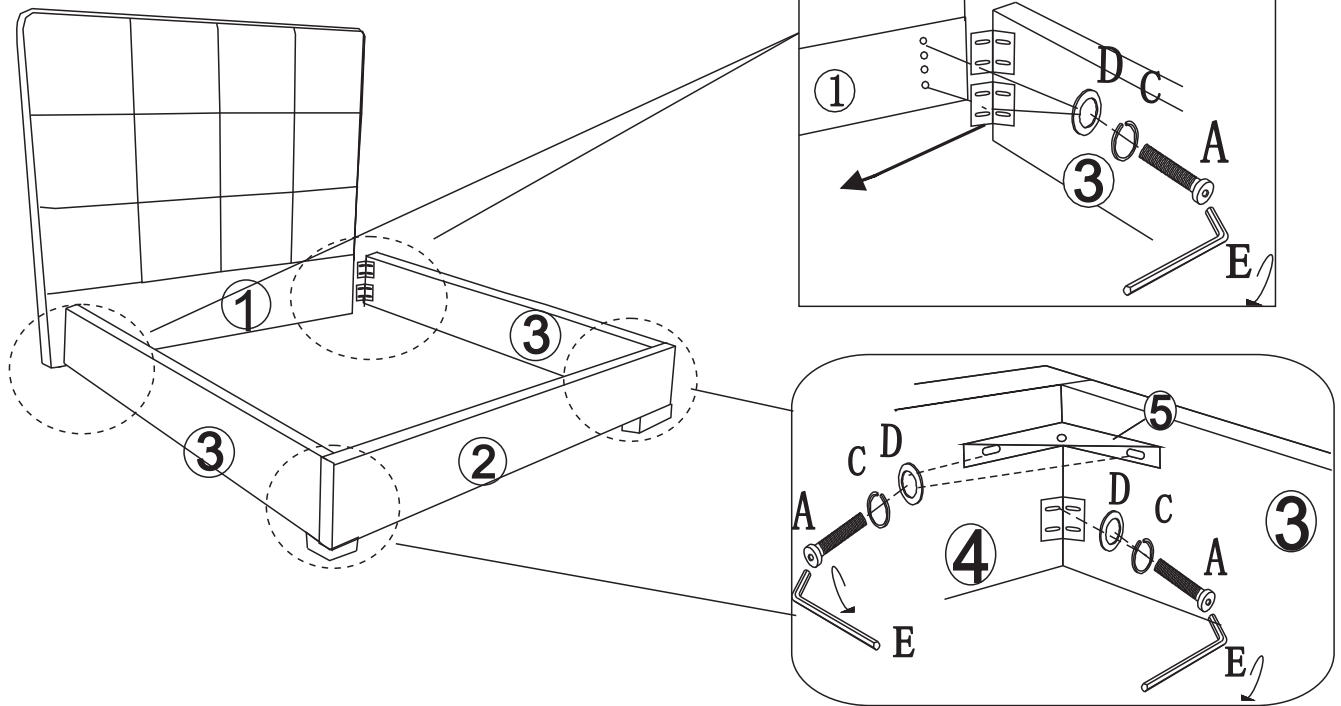


Step 3

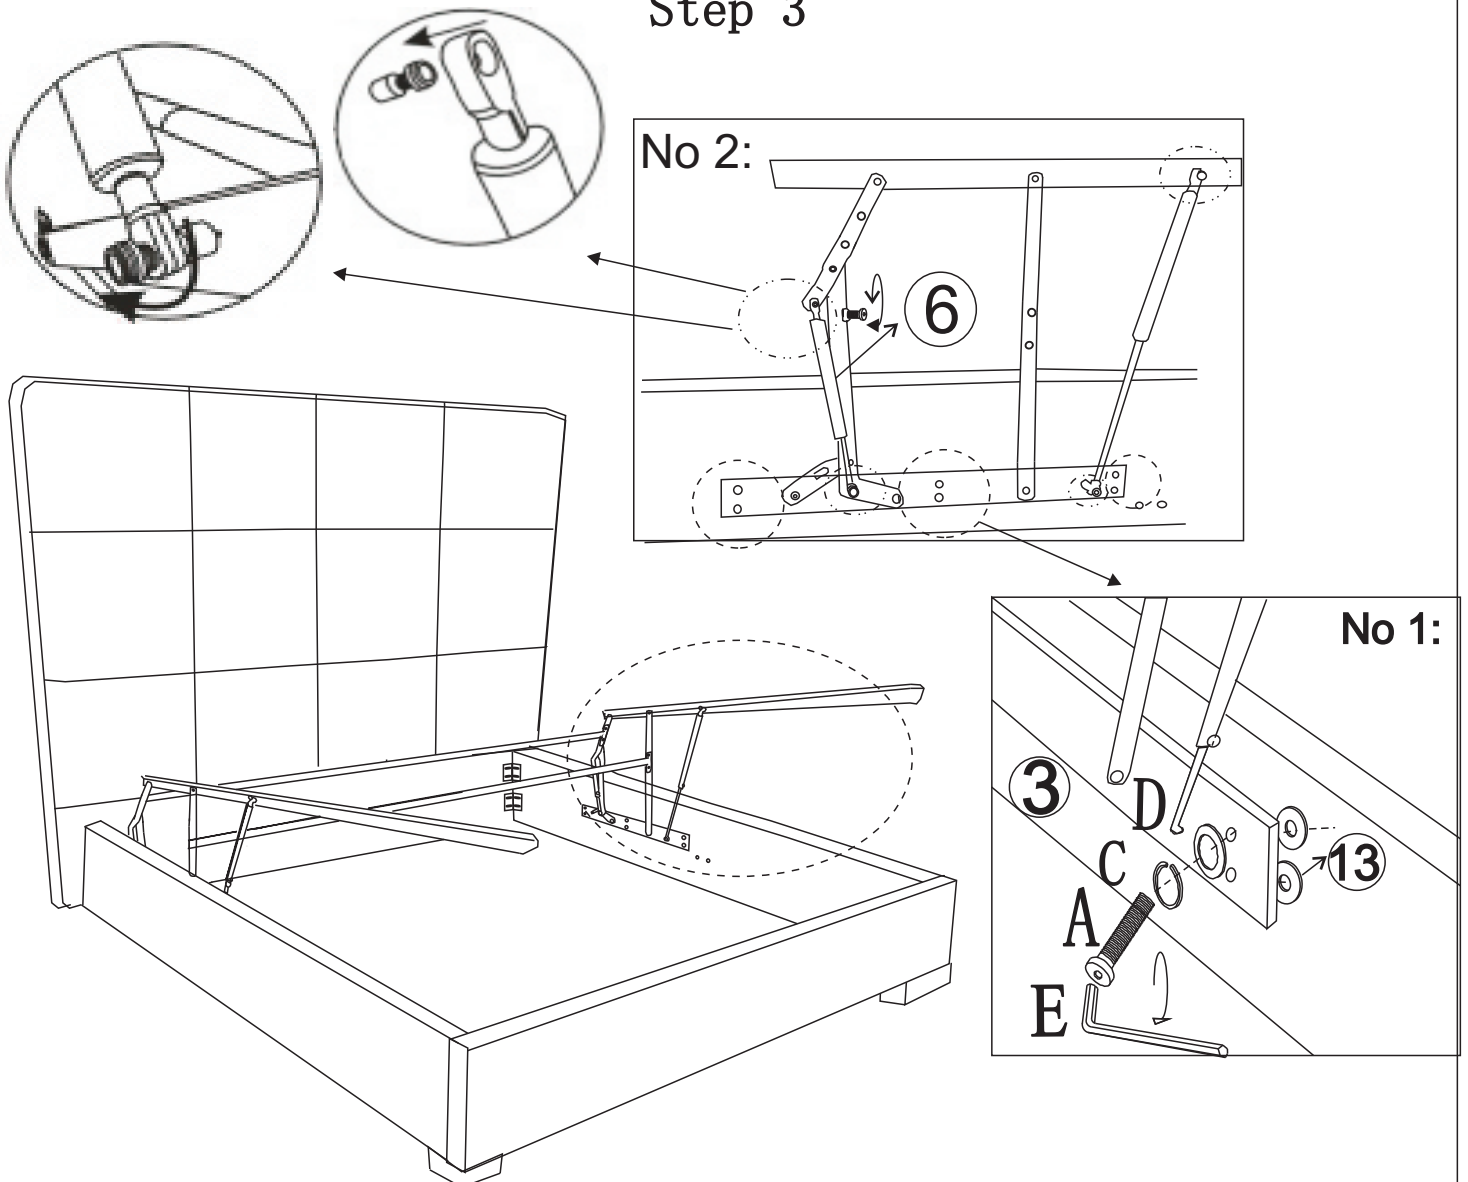

Step 4


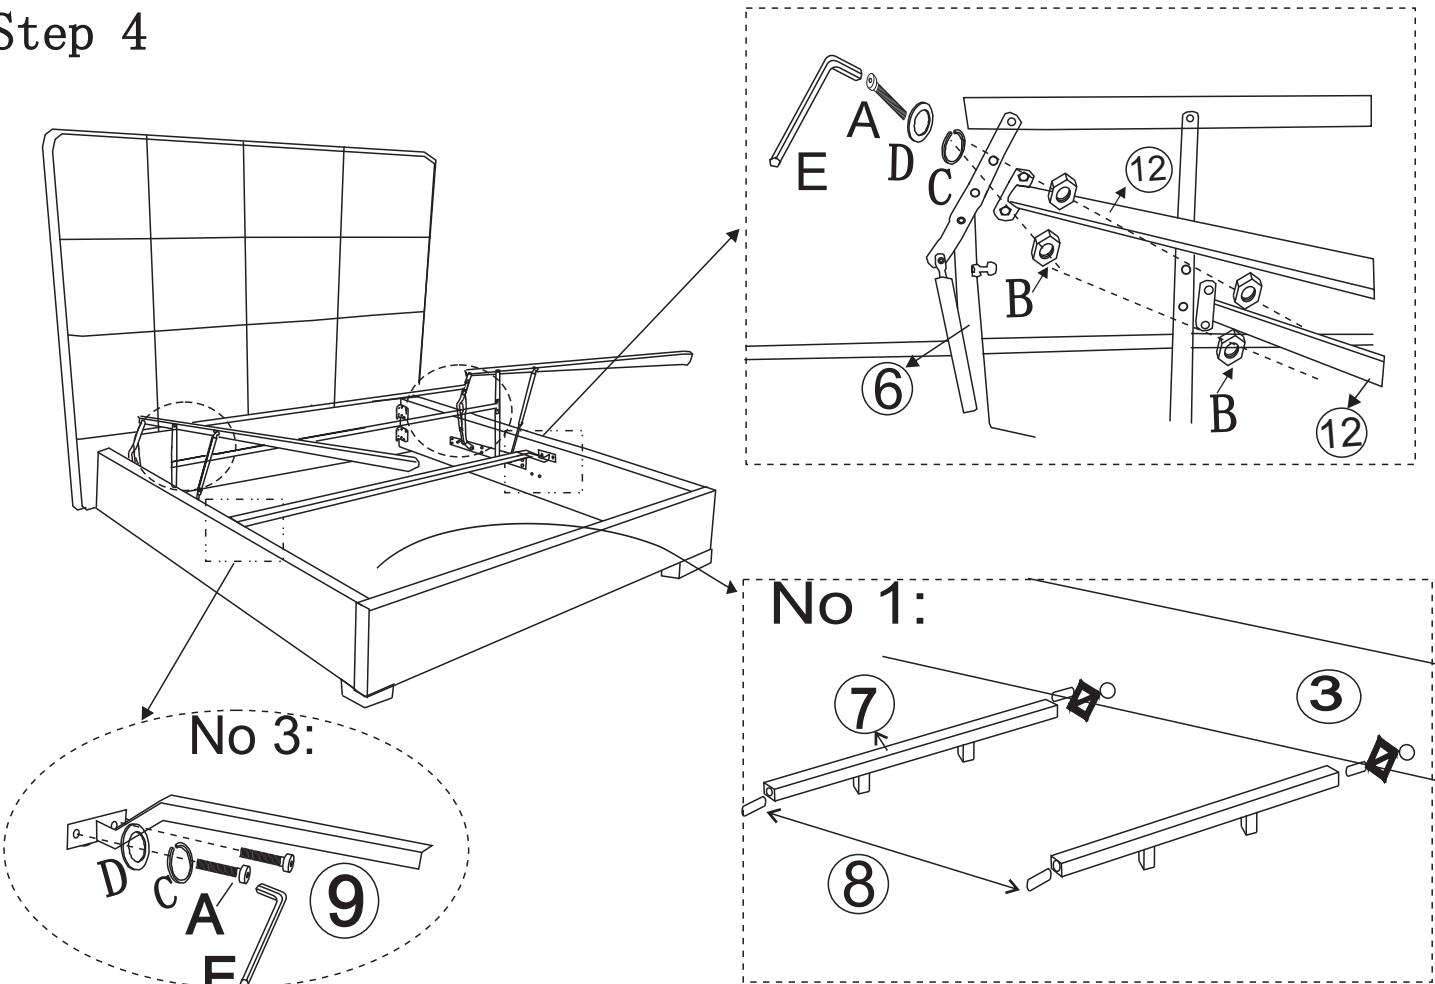


Step 5


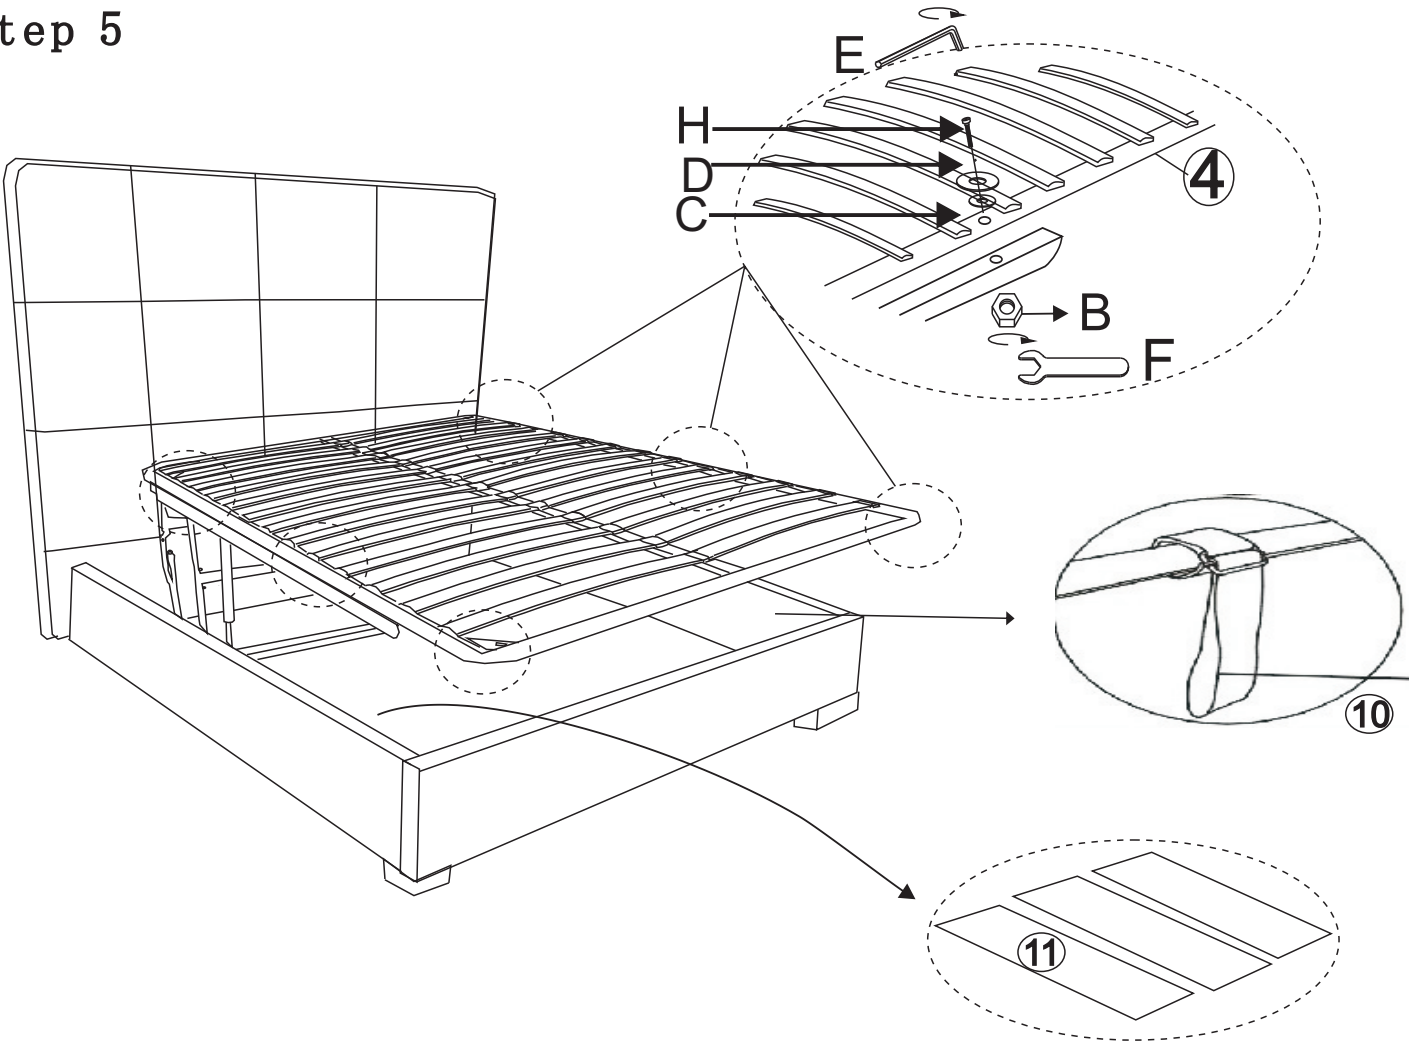


Messina /JY-4012 PARTLIST



① Headboard 1pc ② Footboard 1pc

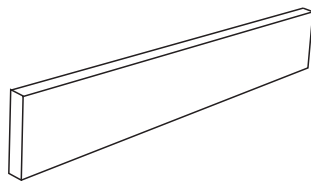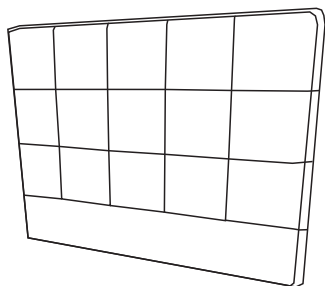


③ Side Rail x 2pcs ④ Slat frame x 1pc

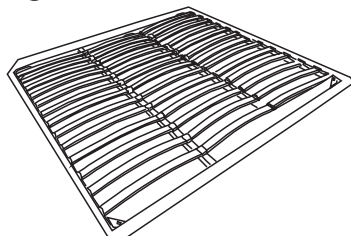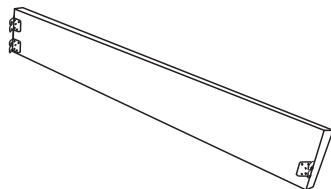

⑤ Right angle iron x 2pcs ⑥ Gas spring x 2pcs

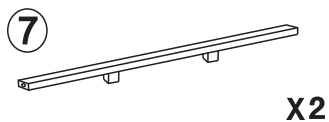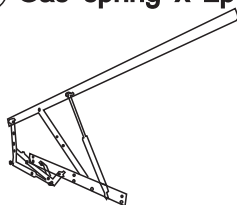

X2




X4




X1




X1



X4

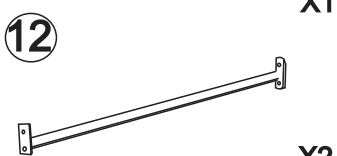



X2

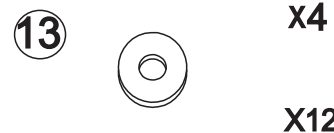



X12

HARDWARE LIST



(A) Bolt M8 x30mm x56pcs (B) Nut M8x13mmx14pcs

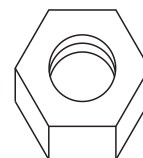



(C) Spring Washer x 62pcs (D) Flat Washer x 62pcs

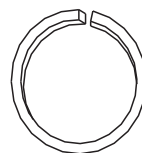



(E) Allen Key M5 x 1pc (F) Spanner x 1pc

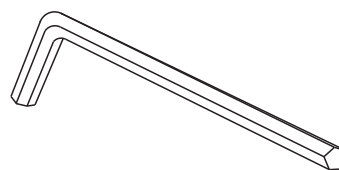



(G) Leg x 2pcs (H) BoltM8 x 50mm x 10pcs




(I) Rubber Feet x 2pcs (J) Bracket x 6pcs

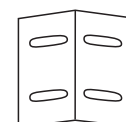


Step 1

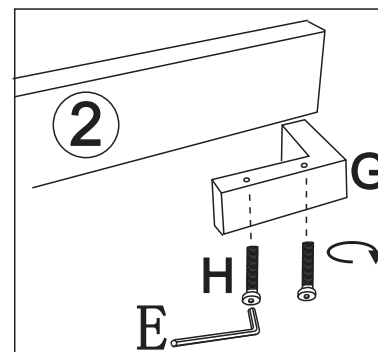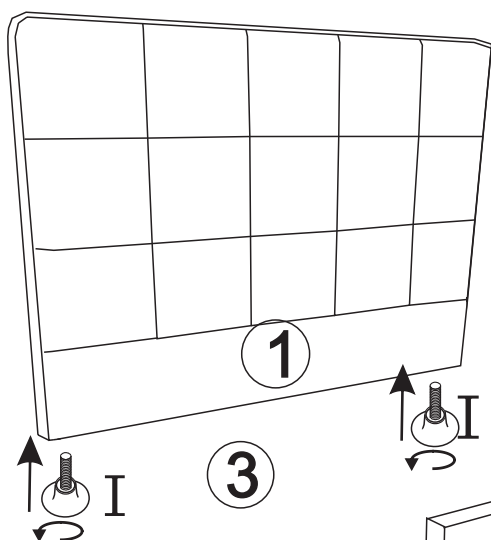

Step 2

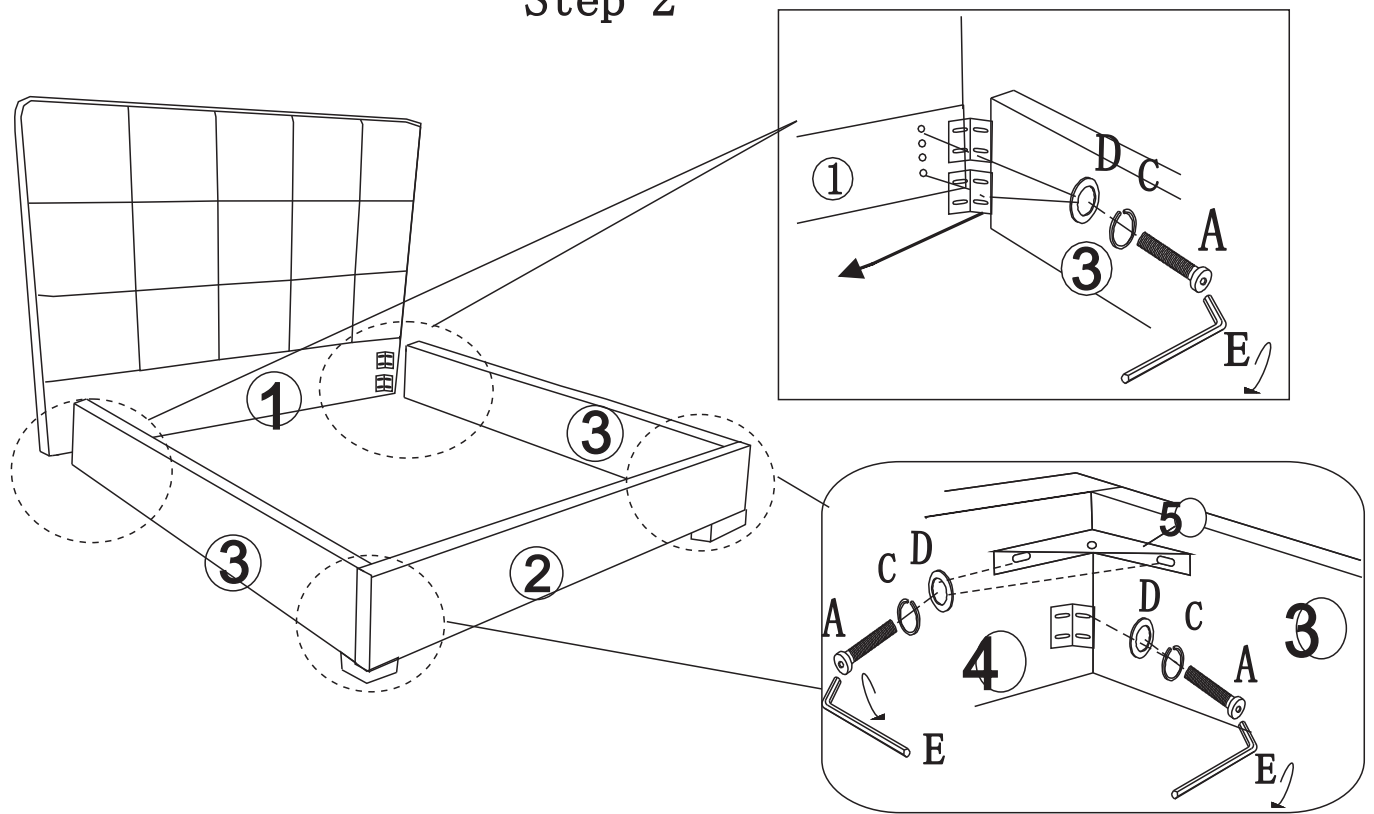


Step 3

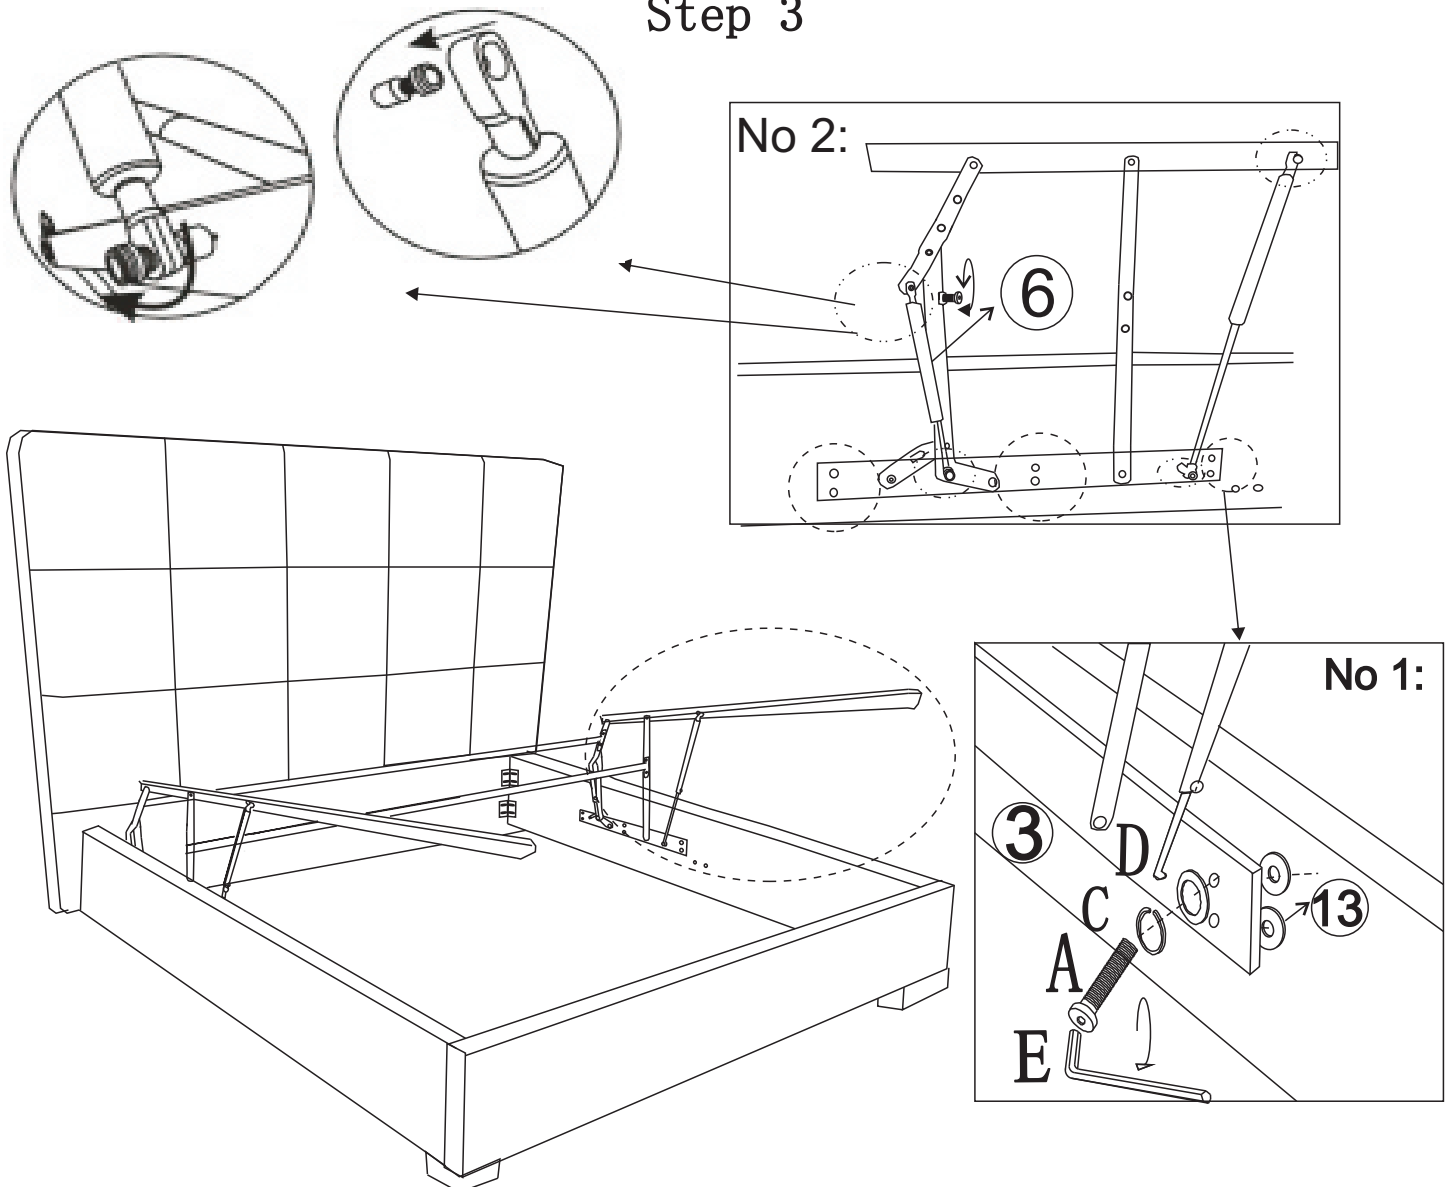


Step 4


No 2:

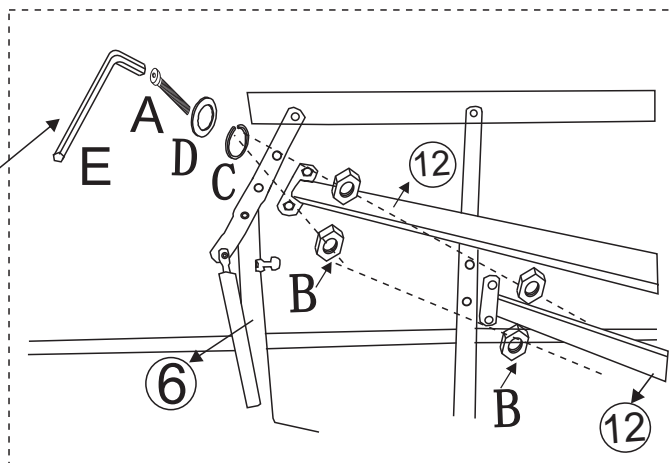

No 1:

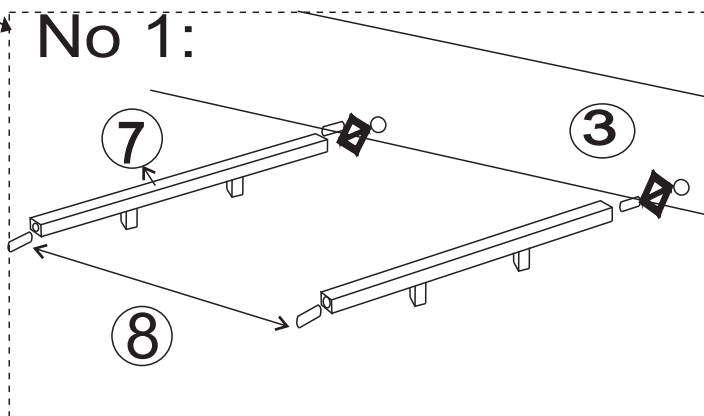

No 3:

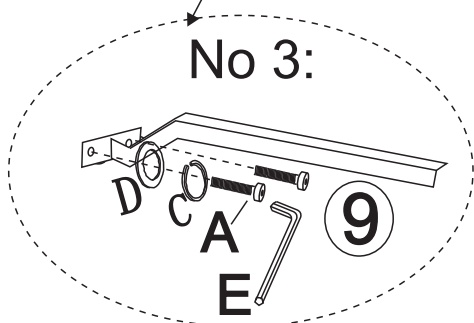

Step 5

