

①Headboard 1pc

②Footboard 1pc

③Slats x 1pc

④Side Rail x 2pcs

⑤Support Leg x 4pcs

⑥Right Angle Iron x 2pcs

⑦Leg x 2pcs

⑧Bracket x 2pcs

(A)Bolt M8 x 30mm x 24pcs

(B)Rubber Feet x 2pcs

(C)Spring Washer x34pcs

(D)Flat Washer x 34pcs

(E)Allen Key M5 x 1pc

(F)Bolt M8 x 50mm x 8pcs

(G) Bolt M8 x 20mm x 2pcs

(H) Nut M8x8pcs

(I)Spanner x 1pc

Step 1


Step 2

Step 3


Step 4

Monte carlo(crystals)/4010 PARTLIST **HARDWARE LIST(60"*80")**

① Headboard 1pc

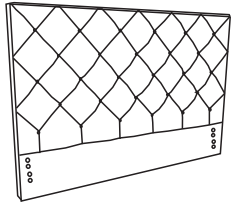


② Footboard 1pc

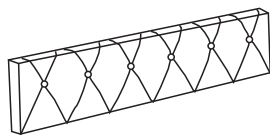


③ Slats x 1pc




④ Side Rail x 2pcs



⑤ Support Leg x 2pcs




⑥ Right Angle Iron x 2pcs




⑦ Leg x 2pcs



(A) Bolt M8 x 30mm x 20pcs



(B) Rubber Feet x 2pcs



(C) Spring Washer x 26pcs




(D) Flat Washer x 26pcs





(E) Allen Key M5 x 1pc




(F) Bolt M8 x 50mm x 4pcs




(G) Bolt M8 x 20mm x 2pcs (H) Nut M8x4pcs (I) Spanner x 1pc




Step 1

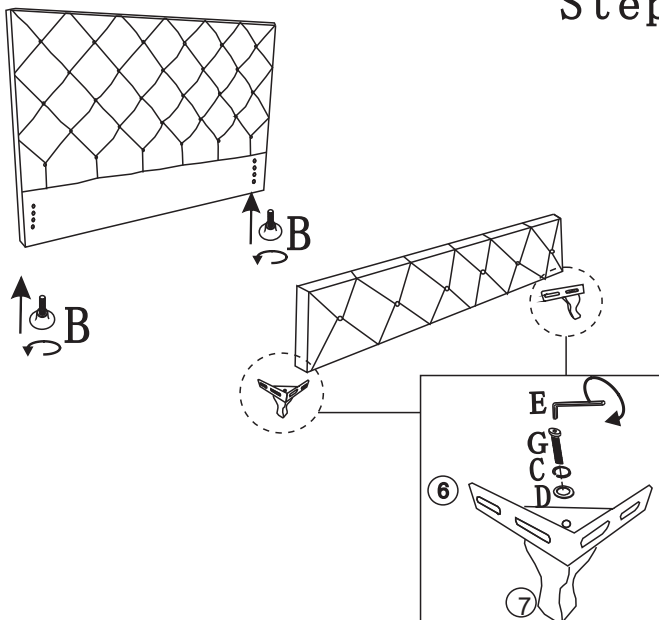


Step 2

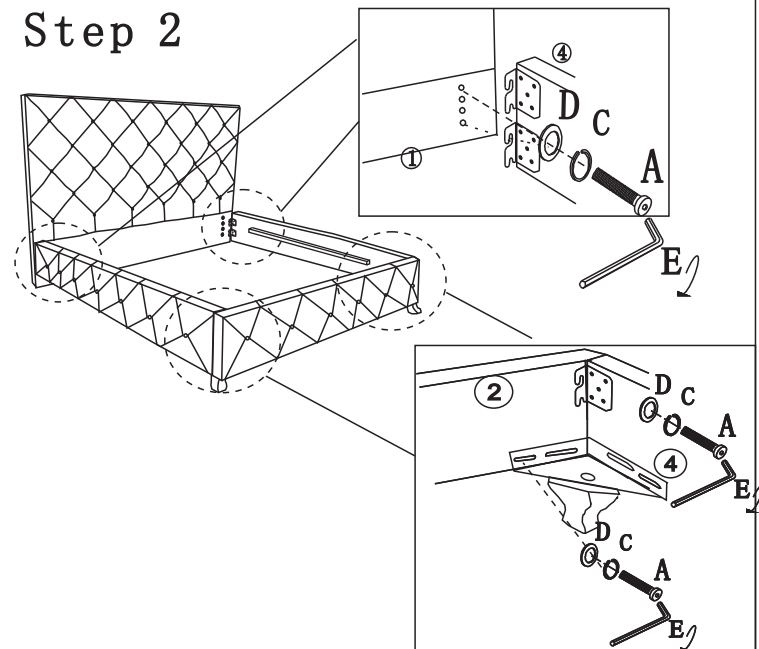

Step 3

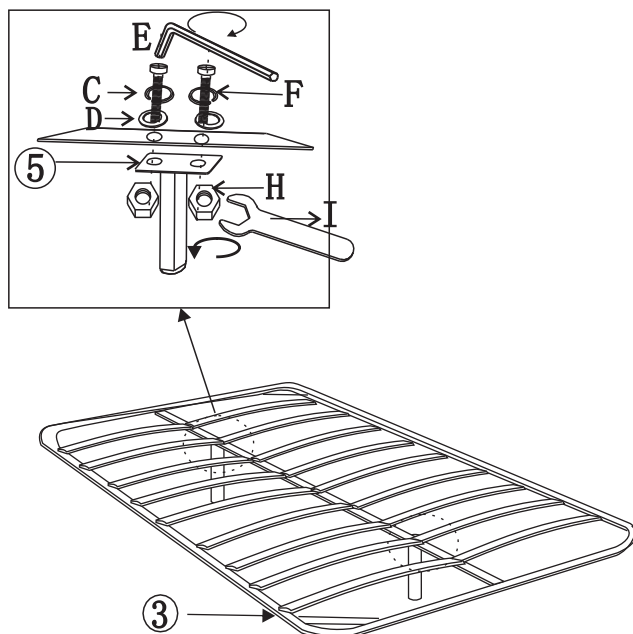


Step 4

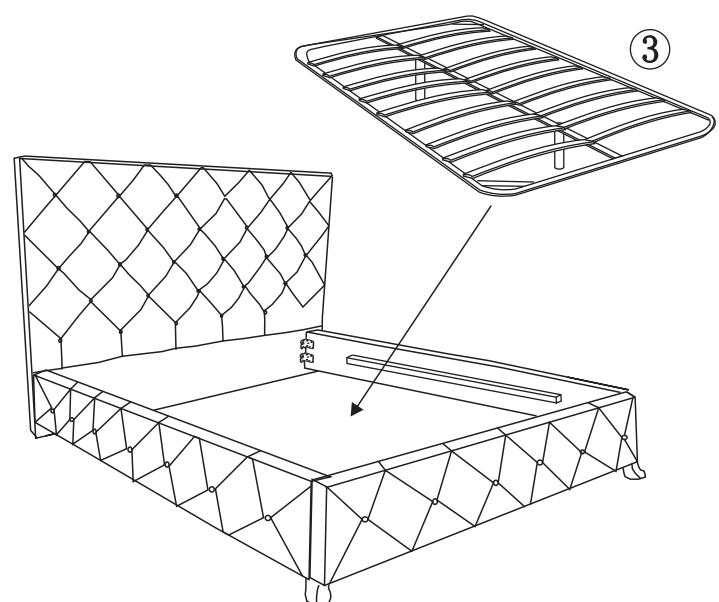


Monte carlo(crystals)/4010 PARTLIST **HARDWARE LIST(39"*75")**

① Headboard 1pc

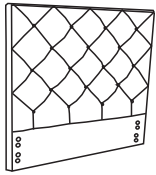


② Footboard 1pc

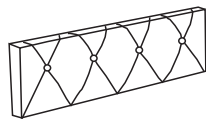


③ Slats x 1pc




④ Side Rail x 2pcs



⑤ Support Leg x 2pcs




⑥ Right Angle Iron x 2pcs




⑦ Leg x 2pcs



(A) Bolt M8 x 30mm x 20pcs




(B) Rubber Feet x 2pcs




(C) Spring Washer x 26pcs




(D) Flat Washer x 26pcs





(E) Allen Key M5 x 1pc




(F) Bolt M8 x 50mm x 4pcs




(G) Bolt M8 x 20mm x 2pcs (H) Nut M8x4pcs (I) Spanner x 1pc




Step 1

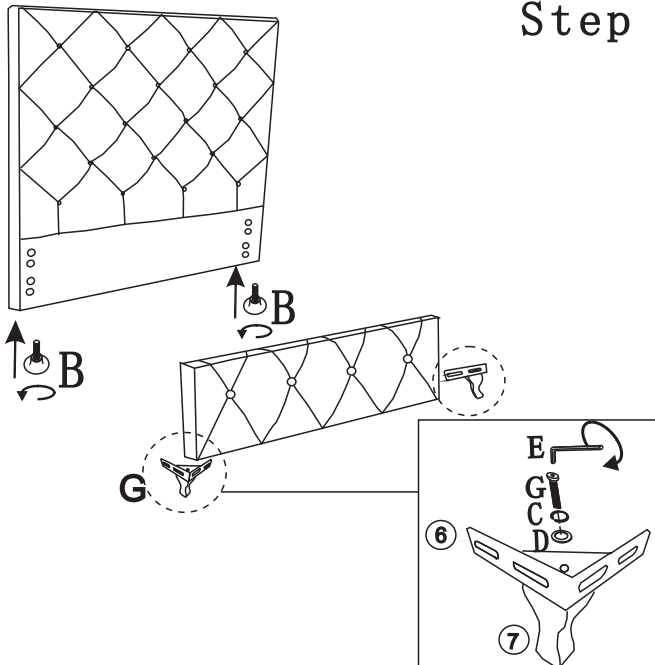

Step 2

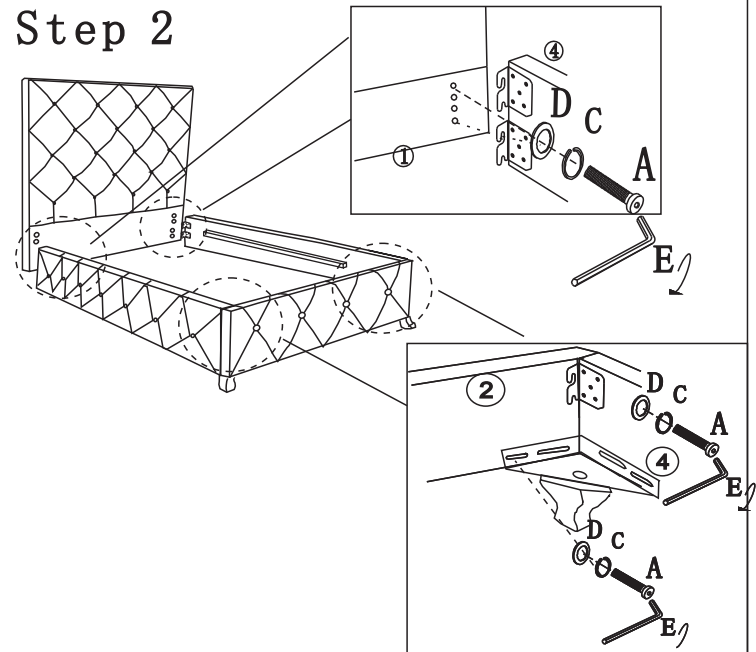

Step 3

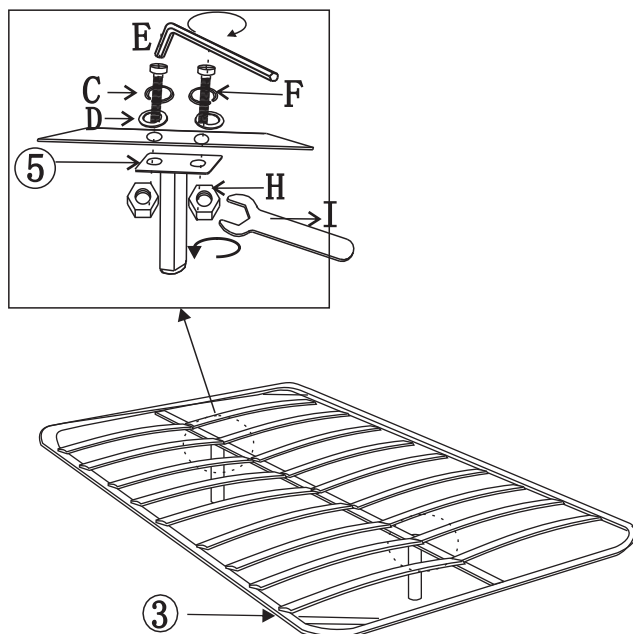

Step 4

