


W-150B-1




MODREST

STEP 1

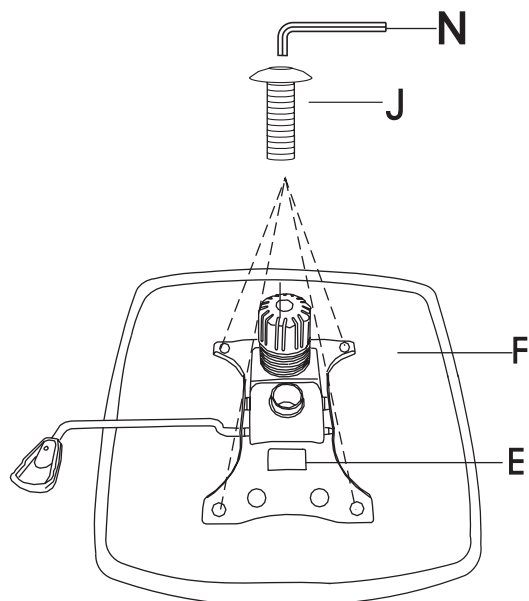

STEP 2

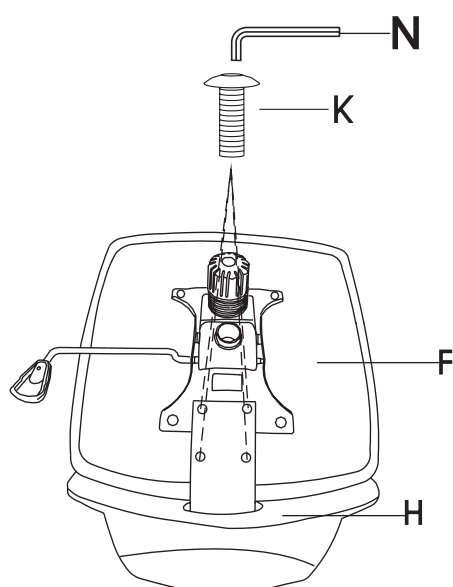


NOTE:

DO NOT TIGHTEN SCREWS “K” UNTIL THE ARMRESTS ARE CENTRALLY POSITIONED


A 5PCS	B 1PC
C 1PC	D 1PC
E 1PC	F 1PC
G 2PC	H 1PCS
I 1PC	J M6*20MM/4PCS
K M6*30MM/4PCS	L M6*25MM/6PCS
M M6*14*1MM/6PCS	N M5/1PC

STEP 3

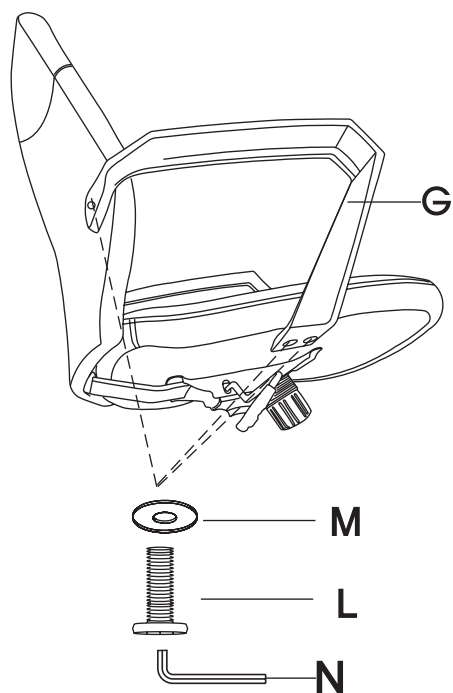

MODREST


STEP 4

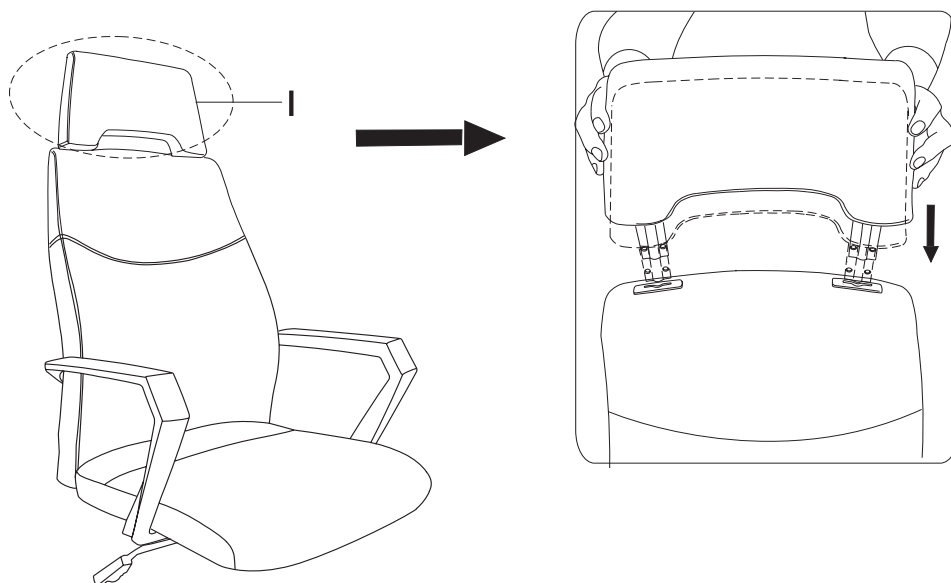



MODREST

STEP 5

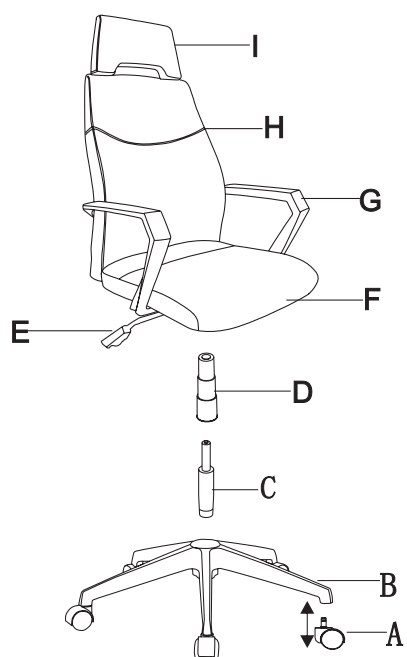

FINISH

