


# ASSEMBLY INSTRUCTIONS


## DRESSER 6 DRWS

### STEP 1


A x 1

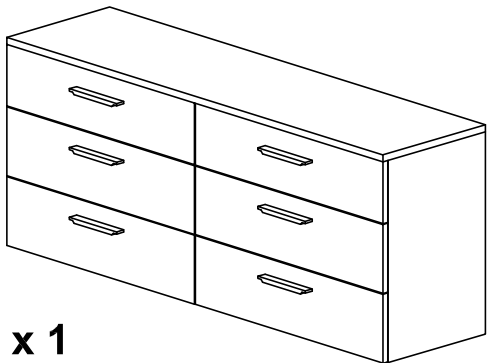



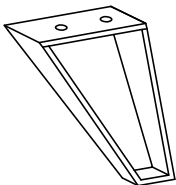

B x 4




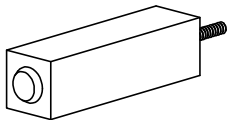


C x 1



### HARDWARE LIST

No	Description	Picture	Qty
1	Bolt M8 x 20		08
2	Washer M8/Ø16x2		08
3	Lock Washers M8		08
4	Wrench 13		1

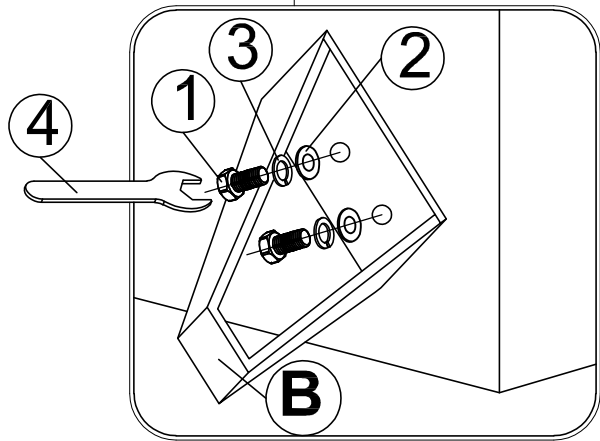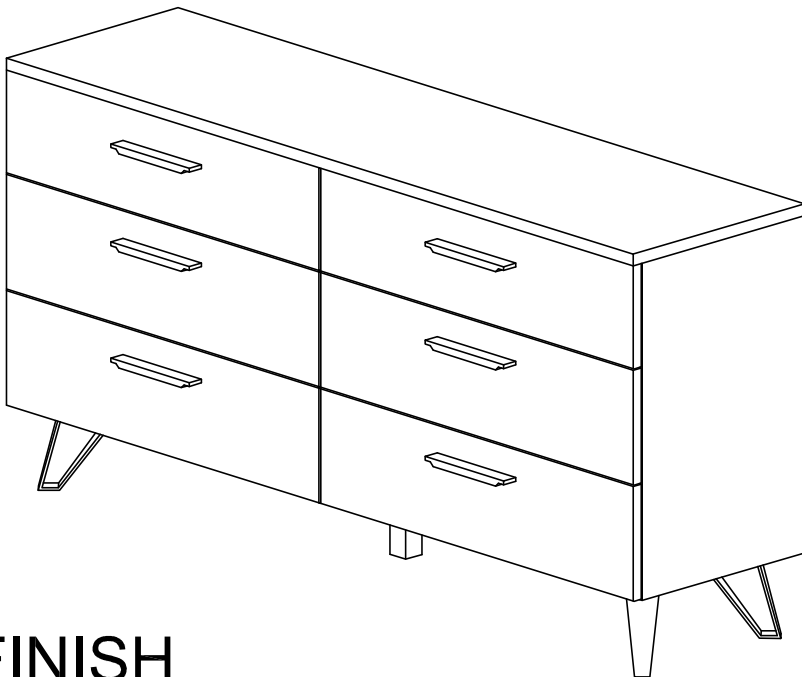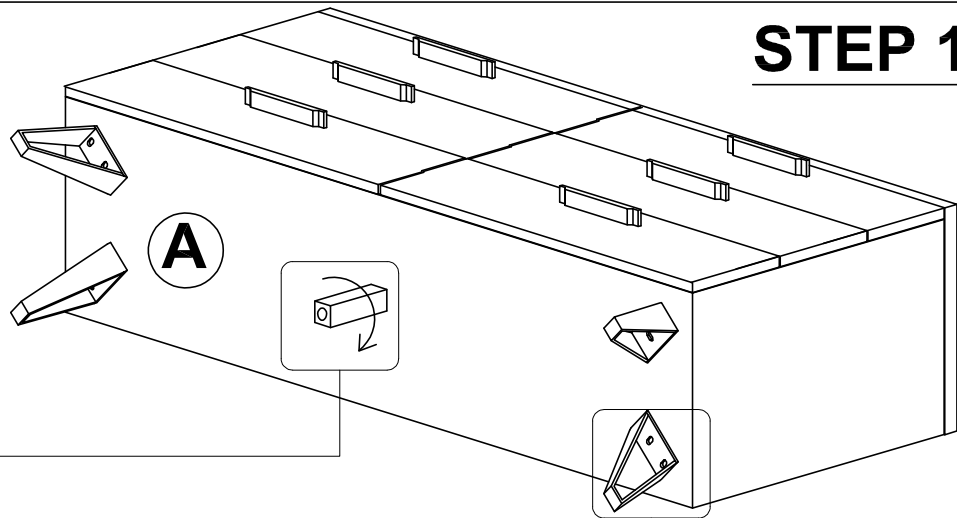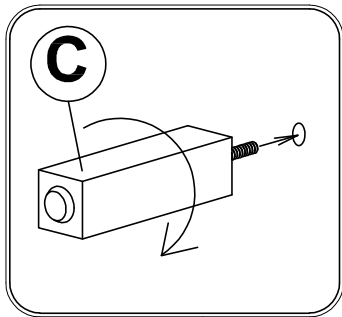


Pls do not tighten the screws and bolts before fully assembled

**FINISH**

# ASSEMBLY INSTRUCTIONS

## MIRROR

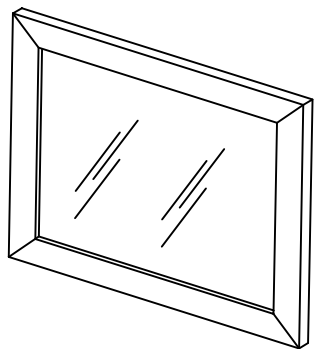


A x 1



B x 2

### HARDWARE LIST

No	Description	Picture	Qty
1	Bolt M8 x 40		08
2	Wrench K4		01

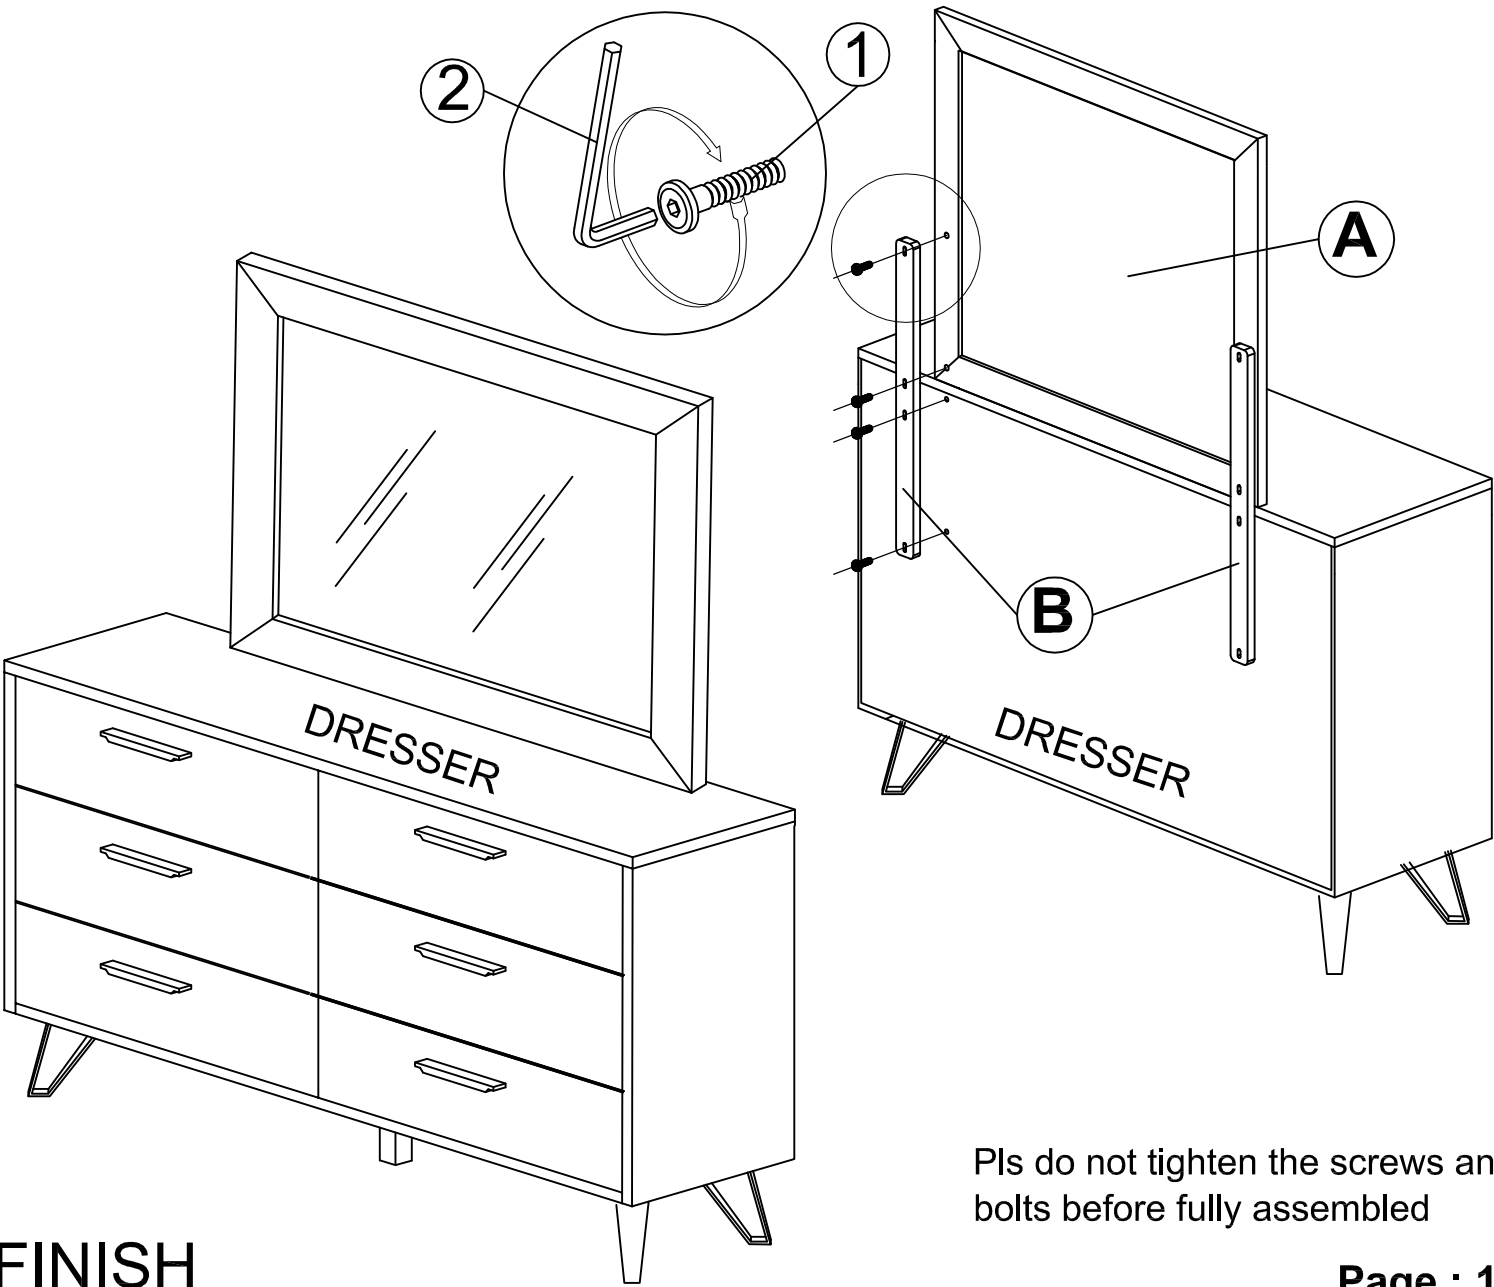

**FINISH**

Pls do not tighten the screws and bolts before fully assembled