








Design Evolution




URBAN DINING TABLE


ASSEMBLY INSTRUCTIONS

HARDWARE FOR WOODEN



| No. | Hardware | Q.ty |
|-----|--|------|
| ① | Bolts M8x100  | 02 |
| ② | Bolts M8x60  | 02 |
| ③ | Bolts M8x 35  | 06 |
| ④ | Key K4  | 01 |
| ⑥ | Washers M8xØ22  | 06 |

HARDWARE FOR CONCRETE


| | | |
|---|--|----|
| ⑤ | Bolts M6x40  | 06 |
| ⑧ | Washers M8xØ22  | 06 |
| ⑦ | Key K4  | 01 |

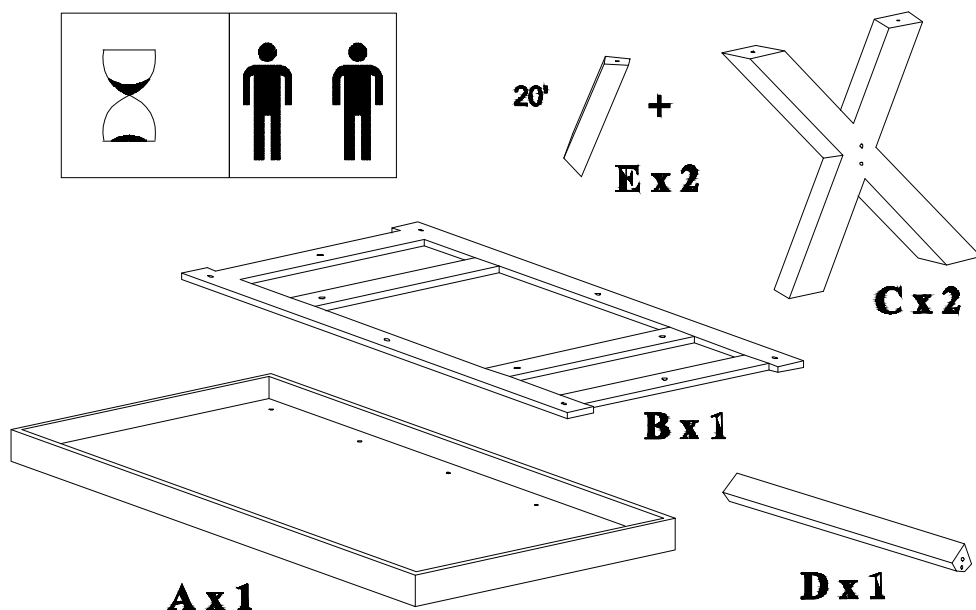

Please disassemble wooden frame (B) out of cement top (A). Keep bolt #5 and washers #6 for step 5

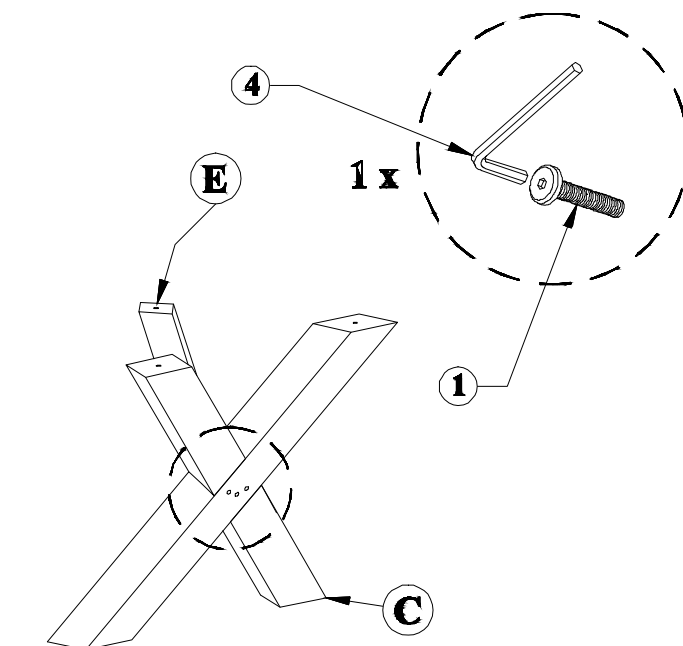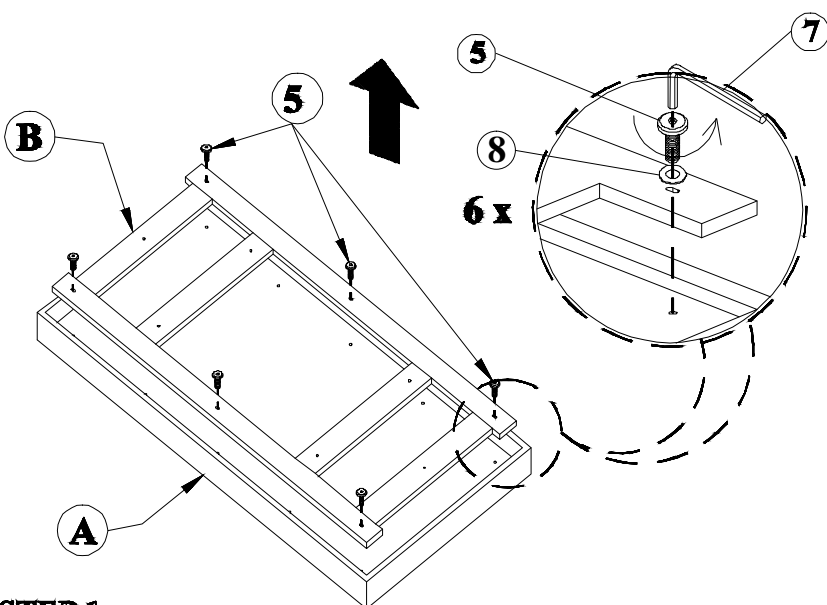

STEP 2

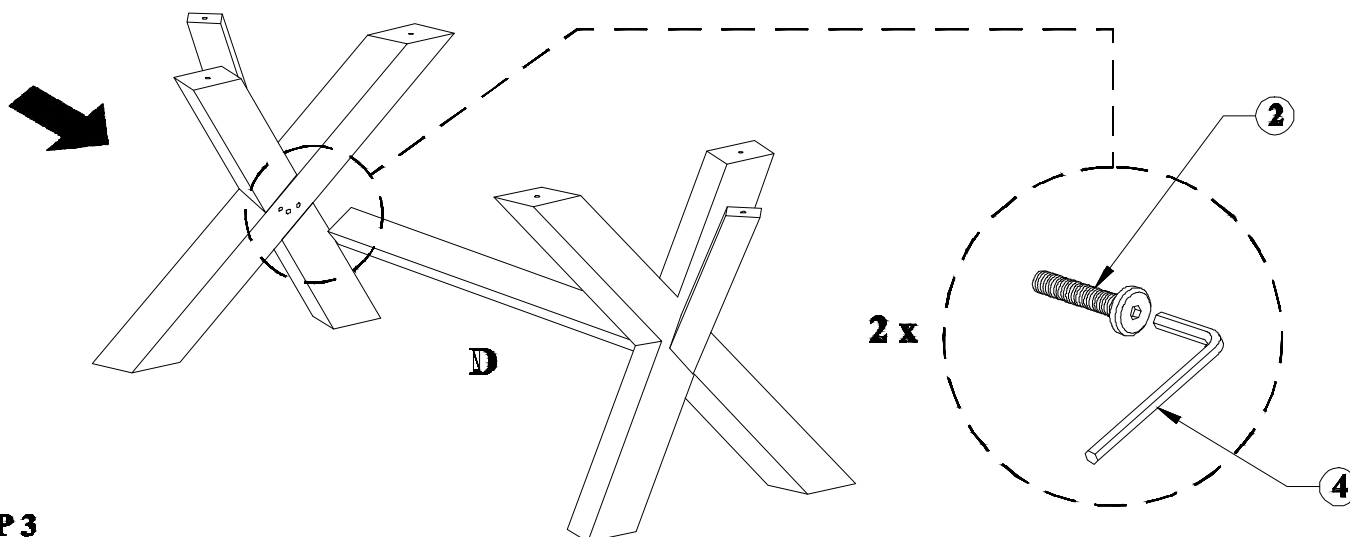


STEP 3




Design Evolution

URBAN DINING TABLE


ASSEMBLY INSTRUCTIONS

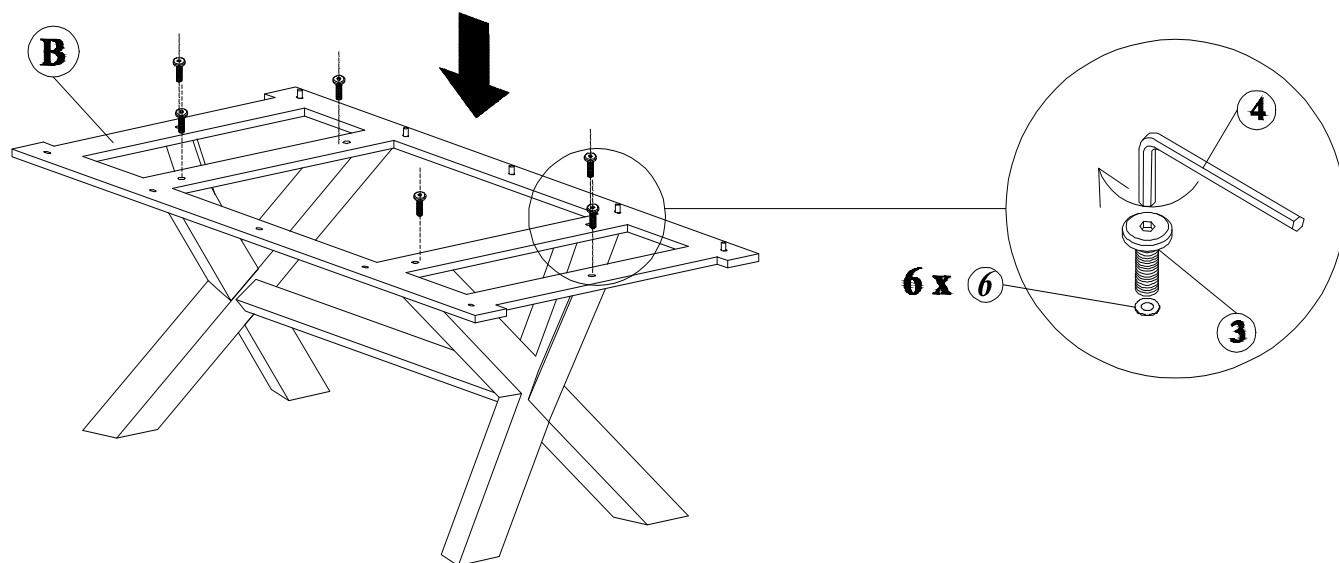

STEP 4

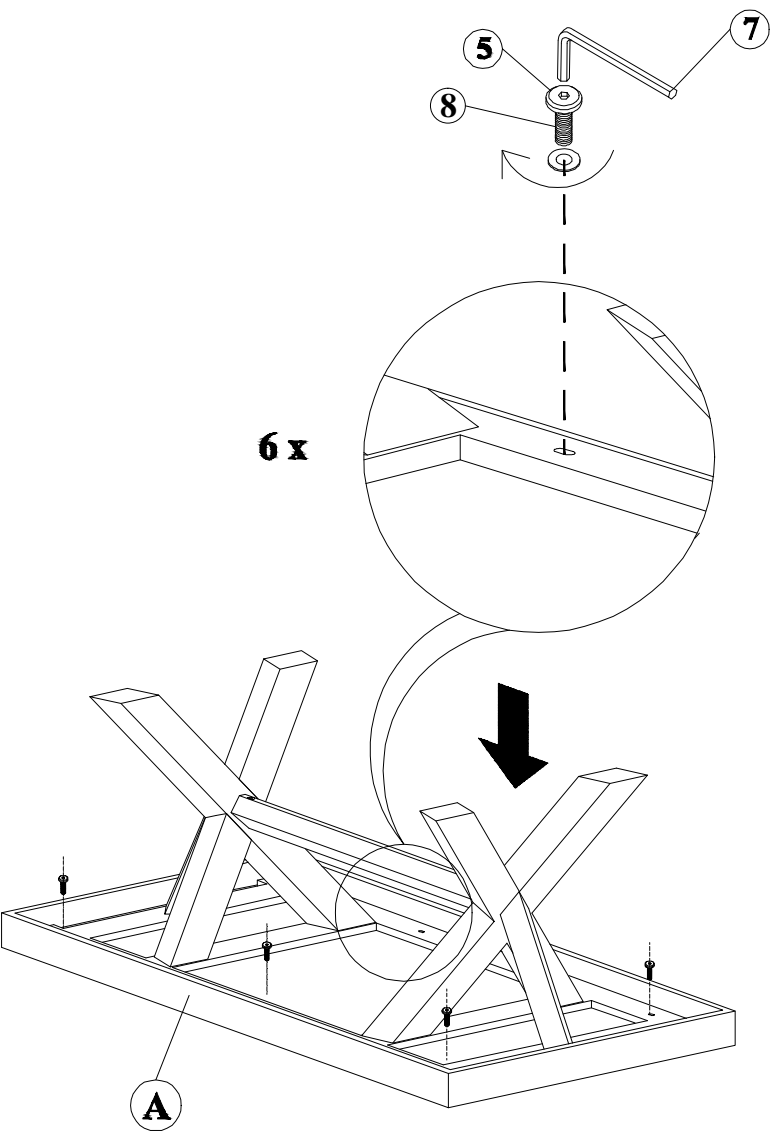

STEP 5

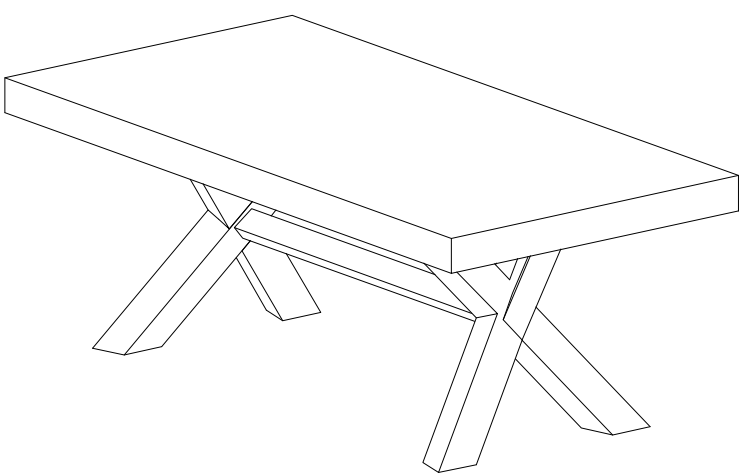

FINISHED