


W-128C




MODREST

STEP 1

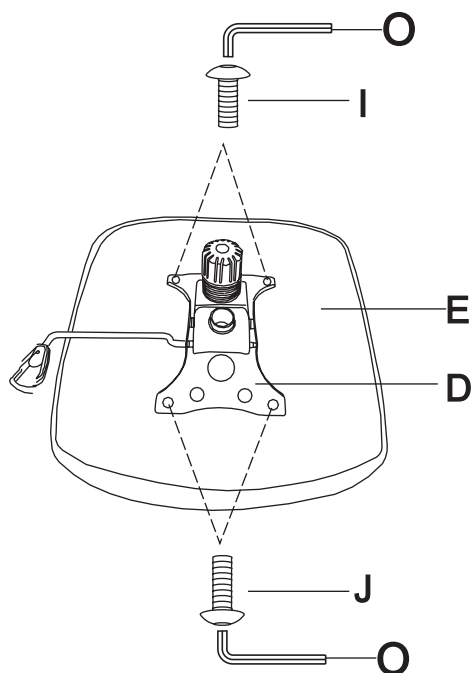

STEP 2

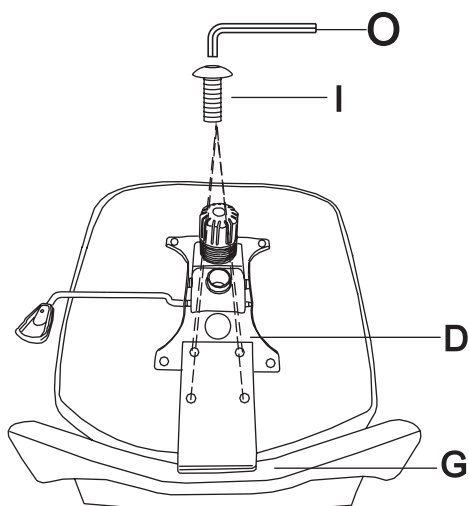


NOTA:
no apriete los tornillos "I" hasta que los
brazos estén centrados

A 5PCS	B 1PC
C 1PC	D 1PC
E 1PC	F 2PC
G 1PC	H 1PCS
I M6*25MM/6PCS	J M6*20MM/2PCS
K M6*30MM/6PCS	L M6x25mm/3pcs
M M6*15*1MM/6PCS	N M4/1pc
O M5/1PC	


STEP 3




MODREST

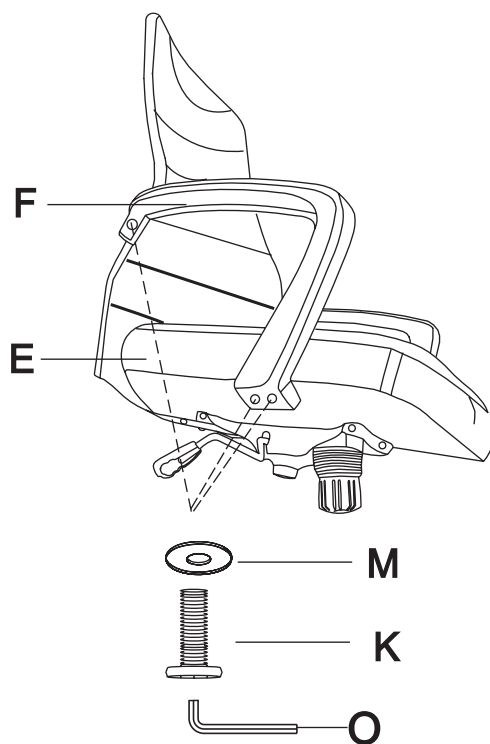

STEP 4

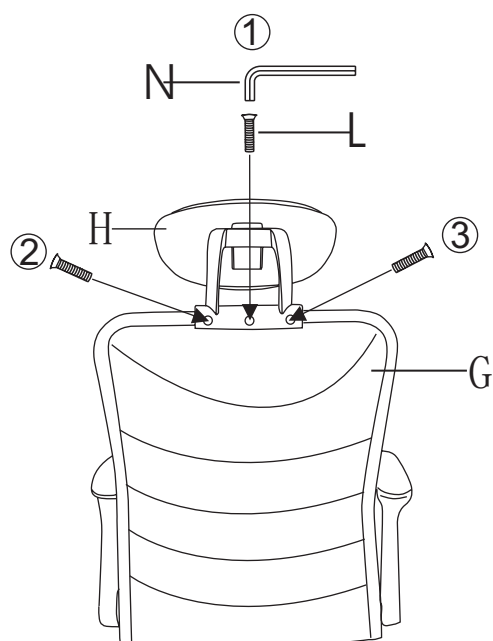

STEP 5

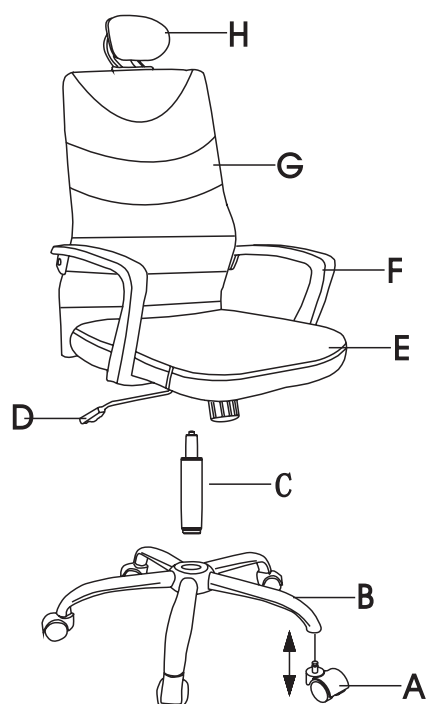

FINISH



MODREST